
Joybos® 5-Tier Kitchen Utility Storage Cabinet with Dust-Proof Cabinet Doors

---Installation Instruction

## 1. Product demonstration

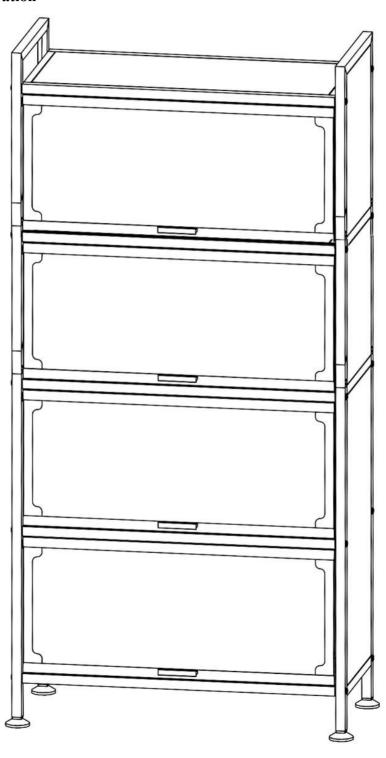


## 2. Parts list


| NO.  | A1                        | B1                        | A2                    | B2                    |
|------|---------------------------|---------------------------|-----------------------|-----------------------|
| Pic. | Front                     |                           |                       | Front Back            |
| Name | Right Upper<br>Side Frame | Right Lower<br>Side Frame | Left Upper Side Frame | Left Lower Side Frame |
| Qty. | 1                         | 1                         | 1                     | 1                     |
| NO.  | С                         | D                         | Е                     | F                     |
| Pic. |                           |                           |                       |                       |
| Name | Cabinet Door              | Laminate                  | Backboard             | Foot Pad              |
| Qty. | 4                         | 5                         | 4                     | 4                     |
| NO.  | G                         | Н                         | 1                     | J                     |
| Pic. |                           |                           |                       |                       |
| Name | Handle                    | Big Screw                 | Hexagon Wrench        | Small Screw           |
| Qty. | 4                         | 20                        | 1                     | 8                     |

## 3. Installation steps

Step 1: Install foot pads to the left and right lower side frame;

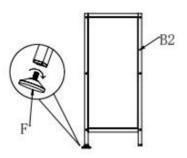


Step 3: Install one of backboards;

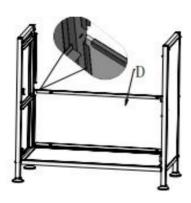


Step 5: Install one of backboards;




Step 2: Use large screws to connect the left and right lower side panels, (the screws do not need to be tightened);

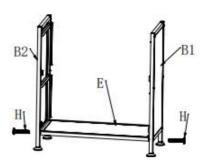

Step 4: Use large screws to connect the left and right lower side panels;

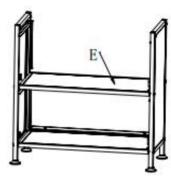


Step 6: Align the left and right upper side panels with the card slots and install them;

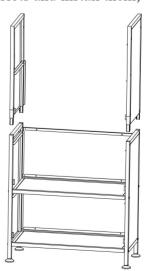

Step 7: Follow steps 2 and 3 to connect the remaining backboards and laminates with large screws;



Step 9: Use small screws to install the door handle on the cabinet door;

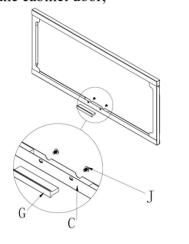


**©** 

Step 11: Complete installation.



Step 8: Tighten all the screws with a Hexagon Wrench;

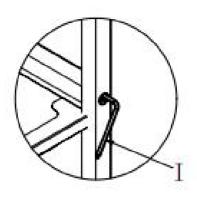

Step 10: Install the cabinet door by pressing the snap button on the cabinet door;

