


# Installation Guide



1

Lay out the below panels as shown.

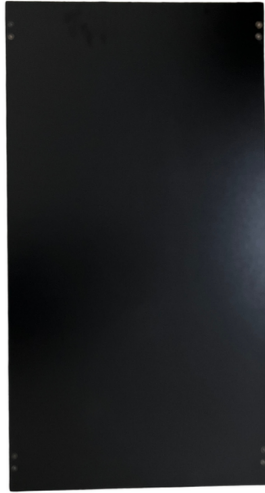

2

Install the brackets in the pre-drilled holes using the supplied screws.





3

Screw the side panel into the back panel.



4

Do the same with the opposite panel.

5

Install the shelves and front panels in the below order.



