

Removing the Technics tonearm and Installing DBL Captive Nuts on a Technics SL1200 turntable

For installing Wand Tonearms, this should be read in conjunction with The Wand User Guide. (Your particular turntable may look different)

Step 1; Remove loose bits.

- Unscrew headshell and counterweight.
- Lift off mat, then platter using finger holes.



Step 2; Place turntable upside down

- Avoid tonearm and protruding bits
- Use a cushion of open cardboard box.



Step 3; Remove the feet and rubber base

Hint; Leave the screws in place as they are different lengths




Step 4; Remove plastic chassis (if there)




Step 5; Remove the three tonearm screws

Also the earth wire.

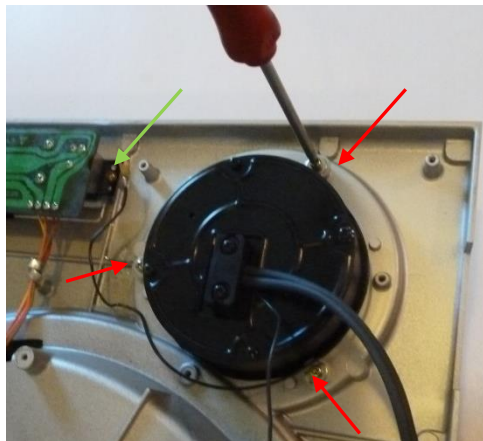

Step 6; Gently remove the Technics tonearm

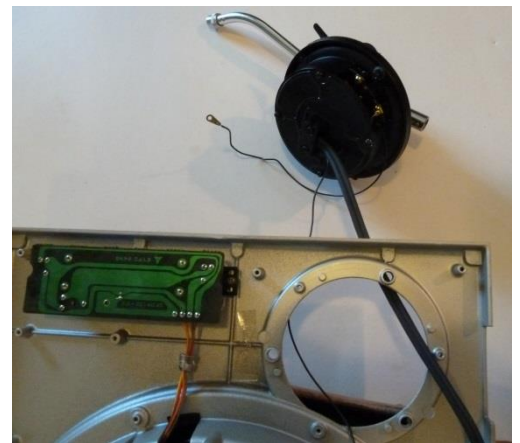

Step 7; Add DBL/ Wand Captive nuts.



Step 8; Add Wand mounting (& replace bits)

