




Technique/technology: Weight: Type of support: Match: How to paste:

How to remove:

Double print on non woven ≈585 g/m² (± 3%) No woven 130 gr Straight match Paste the wall Strippable

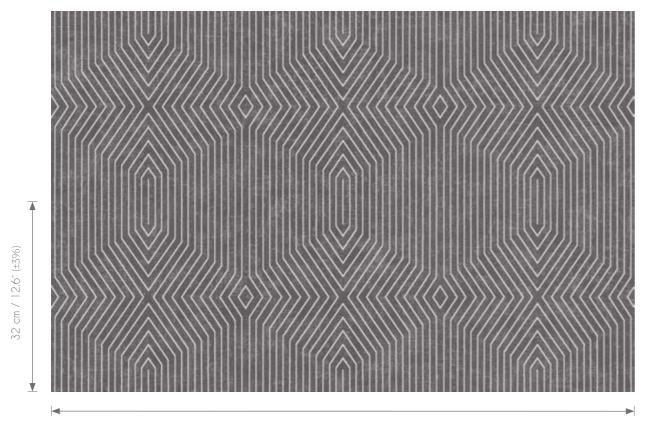

98 cm / 38,6" (±3%)

COLOR RANGE

















ON208 | SODALITE

N.B.

SANDWAVE














How to re-

move

Washability Spongeable

Technique/technology: Double print on non woven Weight: ≈559 g/m² (± 3%) Type of support: No woven 130 gr Match: Straight match Paste the wall How to paste: Strippable How to remove:

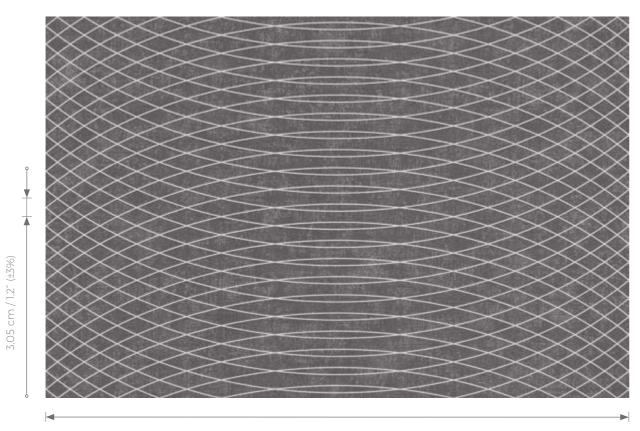


COLOR RANGE









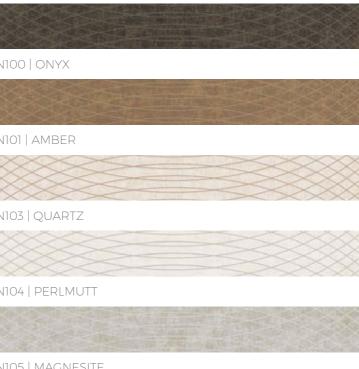

ON105 | MAGNESITE



ON106 | MOONSTONE



ON107 | AQUAMARIN



ON108 | SODALITE

98 cm / 38,6" (±3%)







KIMBERITE







directly to the wall





move

Strippable


⋙

Washability Spongeable

Technique/technology: Weight: Type of support: Match: How to paste:

How to remove:

Double print on non woven ≈562 g/m² (± 3%) No woven 130 gr Straight match Paste the wall Strippable

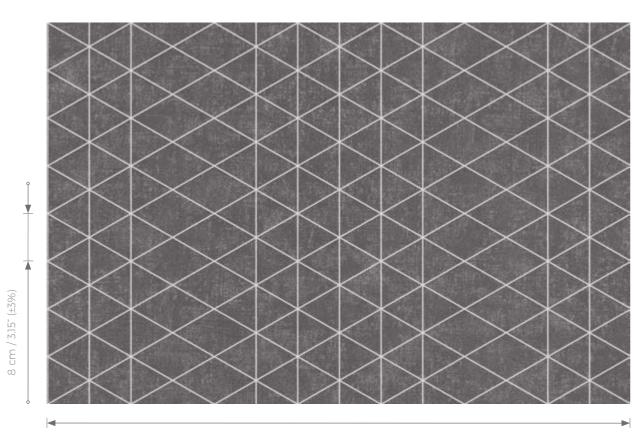

COLOR RANGE



ON300 | ONYX



ON301 | AMBER



ON303 | QUARTZ



ON304 | PERLMUTT



ON305 | MAGNESITE



ON306 | MOONSTONE



ON307 | AQUAMARIN



ON308 | SODALITE













FLYSCH

Technique/technology:

Weight:

Match:


Type of support:

How to paste:

How to remove:



Double print on non woven ≈603 g/m² (± 3%) No woven 130 gr Straight match Paste the wall Strippable

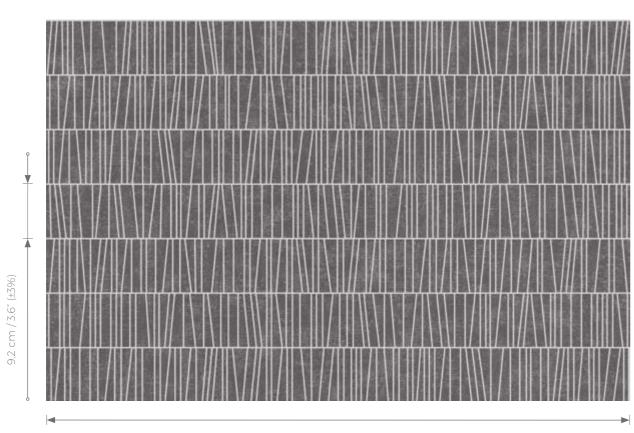

COLOR RANGE



ON400 | ONYX



ON401 | AMBER



ON403 | QUARTZ



ON404 | PERLMUTT



ON405 | MAGNESITE



ON406 | MOONSTONE



ON407 | AQUAMARIN



ON408 | SODALITE











Adhesive Apply a adhesive for non woven wallcovering directly to the wall



move

Strippable



Washability Spongeable

Technique/technology:	Double print on non woven
Weight:	≈497 g/m² (± 3%)
Type of support:	No woven 130 gr
Match:	Free match
How to paste:	Paste the wall
How to remove:	Strippable



ON500 | ONYX

COLOR RANGE



ON501 | AMBER













ON508 | SODALITE

N.B.



NAME	REFERENCE	COLOR	PAGE	МАТСН
	ON100	ONYX	14	→
	ON101	AMBER		
	ON103	QUARTZ	6	$\rightarrow \mid \leftarrow$
	ON104	PERLMUTT	27	- -
SANDWAVE	ON105	MAGNESITE	7	$\rightarrow \leftarrow$
	ON106	MOONSTONE		
	ON107	AQUAMARIN	2	→
	ON108	SODALITE		
BASALTO	ON200	ONYX	5	
	ON201	AMBER	4	- -
	ON203	QUARTZ	24	
	ON204	PERLMUTT		
	ON205	MAGNESITE	9	→
	ON206	MOONSTONE		
	ON207	AQUAMARIN	29	→
	ON208	SODALITE	1	- -
	ON300	ONYX	31	→
	ON301	AMBER		
	ON303	QUARTZ	4	←
KIMBERITE	ON304	PERLMUTT	10	
	ON305	MAGNESITE	20	→
	ON306	MOONSTONE		
	ON307	AQUAMARIN	15	
	ON308	SODALITE		
FLYSCH	ON400	ONYX	10	
	ON401	AMBER	30	
	ON403	QUARTZ	12	<i>←</i>
	ON404	PERLMUTT		
	ON405	MAGNESITE	19	→
	ON406	MOONSTONE	18	- -
	ON407	AQUAMARIN	22	→
	ON408	SODALITE	21	- -
	ON500	ONYX	31	→ 0
	ON501	AMBER	30	- 0
	ON503	QUARTZ	25	0
GREISEN	ON504	PERLMUTT	23	- 0
	ON505	MAGNESITE	26	0
	ON506	MOONSTONE	28	- 0
	ON507	AQUAMARIN	16	
	ON508	SODALITE		- 0

REPEAT

3,05 cm / 1.2"

32 cm / 12.6"

8 cm / 3.15"

9,2 cm / 3.6"

64 cm / 25.2"

HANGING INSTRUCTIONS

RECEPTION OF THE MATERIAL

Be sure all material has the same run lot number before installation. Final inspection should be made as to correct pattern, color and any defects in craftmanship. No claims will be accepted beyond the installation of 3 strips. Absolutely no labour claims will be considered. Application of material is interpreted as acceptance of material and conditions of installation. This is a natural product, differences of color and aspect between batches are unavoidable. We cannot guarantee a perfect color match between the sample in the pattern book and the delivered goods.

WALLCOVERING - INSTALLATION

1. WALL PREPARATION

Ensure surfaces are clean, smooth, dry, firm and uniformly colored. Do not hang over glossy or nonporous places, stains. Painted walls should be washed down with Tri Sodium Phosphate to remove grease or soil. Glossy paint should be dulled with sandpaper. Never hang over new plaster or unprimed wall areas. For wallboard, ply or drywall, fill all cracks and prepare the surface with an acrylic basecoat.

2. PREPARATION OF STRIPS

• If your order contains several numbered rolls of one single item/reference, please first install the roll with the highest number, and then continue to install the other rolls in sequence, in descending order.

- Measure and cut 3 strip lengths. Add 2" to 4" (5 to 10 cm) to top and bottom of each strip.
- · For printed patterns, plan your match from the roll before cutting.
- Mark each strip coming from the roll on the back and hang in the same sequence.
- · Reverse alternate lengths when instructed to do so by label on the roll.

3 INSTALLATION

Apply a ready mixed PVA or EVA clear adhesive to the wall. Follow the instructions of the adhesive manufacturer. Do not use too much adhesive (about 7 ozs/sqyd - 200 gr/m²). Respect the open time recommended by the adhesive manufacturer to penetrate into the wall or to evaporate.

ATTENTION !

- Make sure the adhesive is spread out evenly over the whole surface to ensure good adhesion to the wall. This will avoid open seams.
- Do not use too much adhesive to avoid seam tearing stains on the wallcovering.
- Never allow the adhesive to get on front of the material.