



MOUNTING INSTRUCTIONS

CONTOUR SHELF

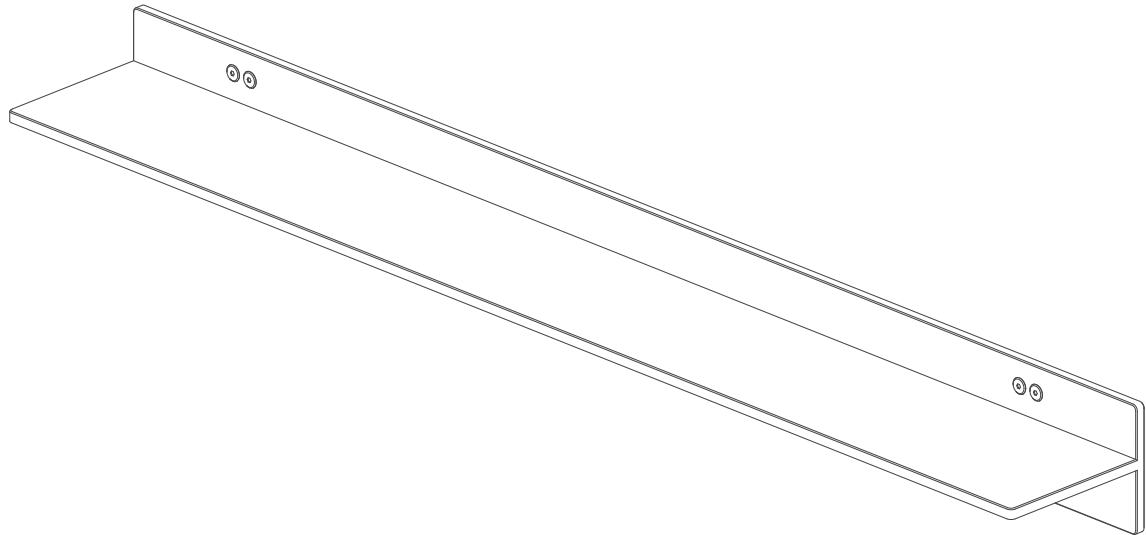

Standard brick/concrete rawplugs enclosed

Please make sure to choose rawplugs according to the material on which you want to place the product. Substitute enclosed rawplugs with another type if needed.



Drill size: \varnothing 8mm

Drill depth: 70mm (for masonry)

Step 01

Using the template provided drill holes and place rawplugs. Make sure of drill hole depth and that hole is cleared of dust before inserting the rawplug.

Step 02

Place the M8 bolts in holes.

Step 03

Mount the shelf and tighten the sleeve nuts.

Step 04

Enjoy your new shelf!