


# HANGERS

## END PANEL FRAMING KIT INSTALLATION GUIDE

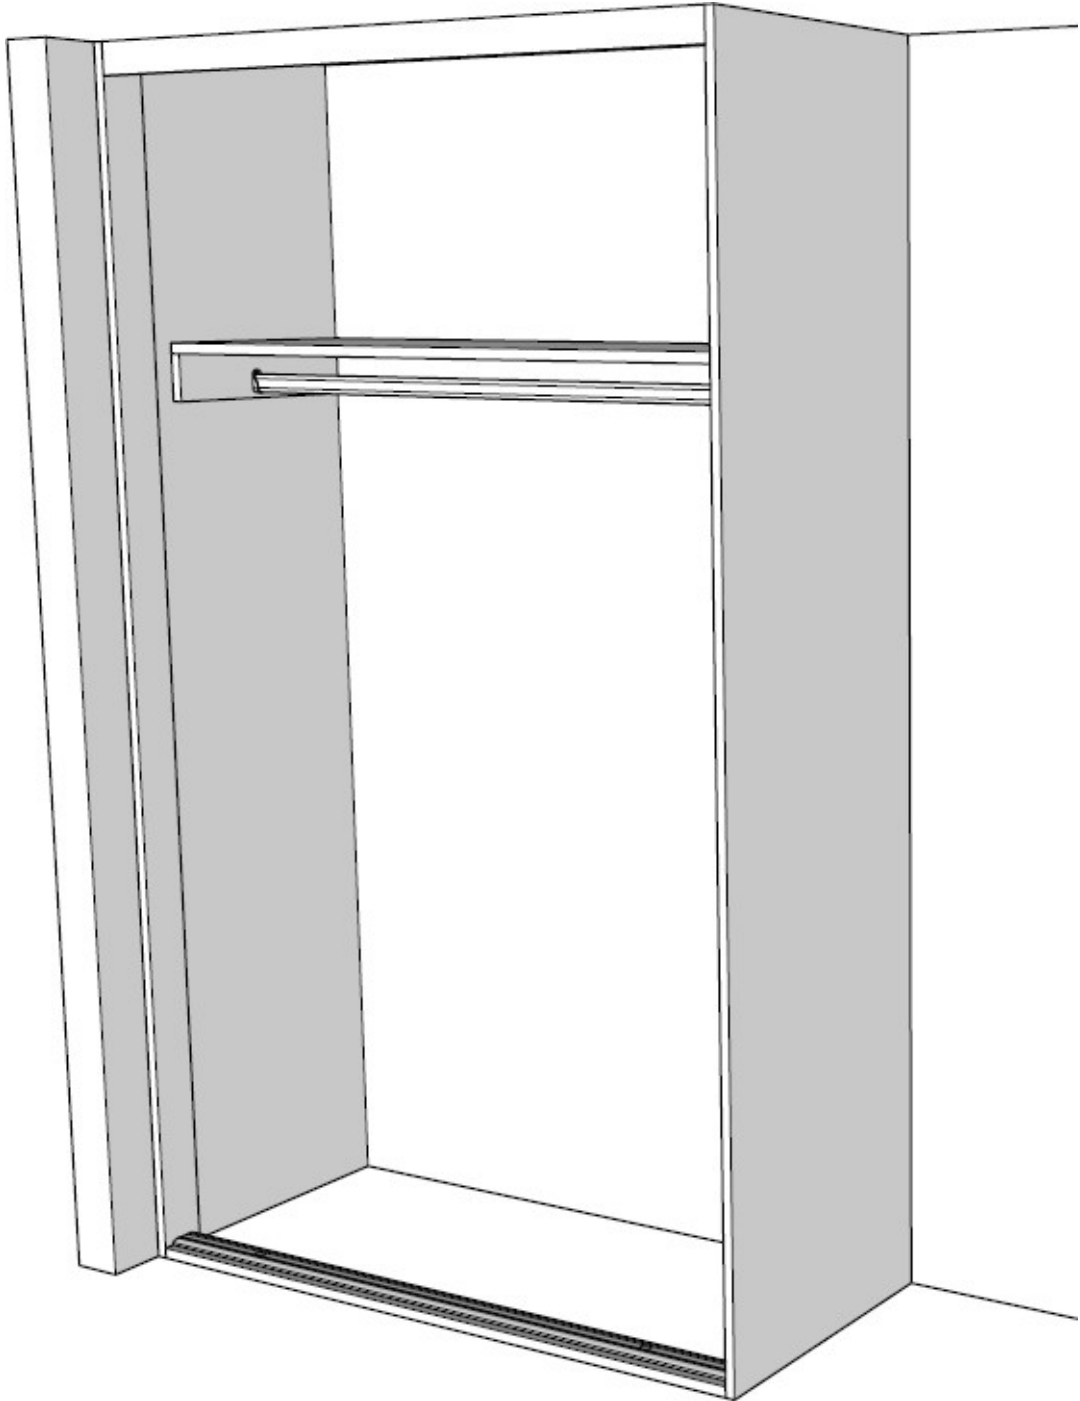

## STEP 1

### Instruction:

The required depth of a wardrobe with an end panel is 640mm.

Measure out from the rear wall to 640mm and mark a line for reference, this will be the front of the wardrobe.

Measure the height of the wall from the floor to the ceiling where the front of your wardrobe will sit.

Measure and cut your liner to size.



## STEP 2

### Instruction:

If there is skirting board in place where the liner will be located, this will need to be cut and removed to allow the liner to be located there.



### STEP 3



Instruction:

Firmly push a suitable fixing plug into each drilled hole.


Hammer fully into place.

### STEP 4



Instruction:

Lift the liner back into position and secure the liner to the wall.

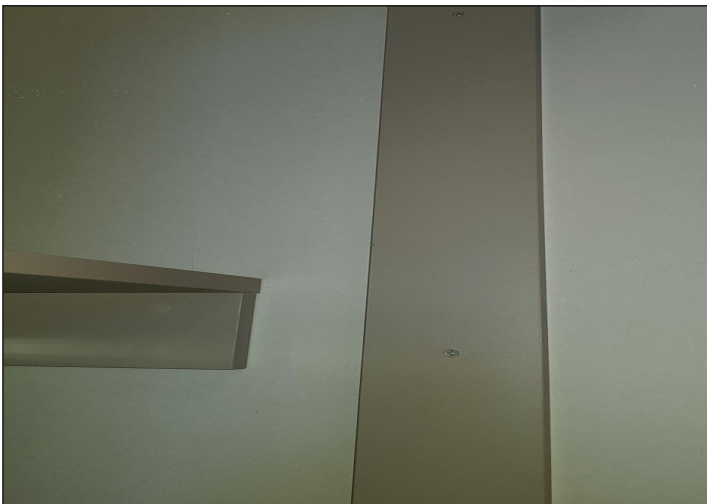


## STEP 5

### Instruction:

On the rear wall, using a tape measure. Measure to the width of the wardrobe and mark a small line for reference.

Take away 18mm from the width of the wardrobe and mark another small line for reference.

These two small reference marks will be where the end panel is located.

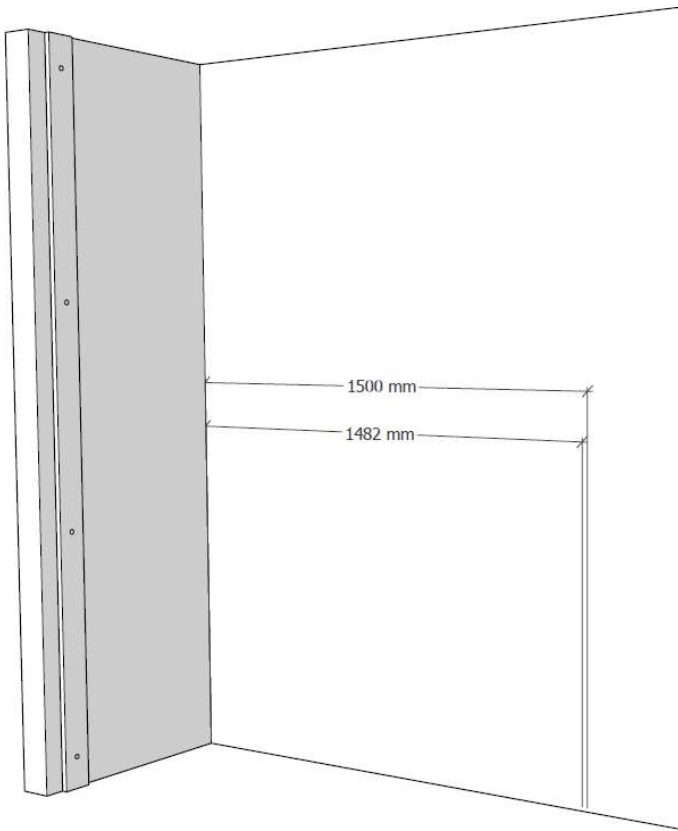



## STEP 6

### Instruction:

Measure from the floor to the ceiling on the end panel mark location on the wall.

Cut end panel to size and install using corner blocks.

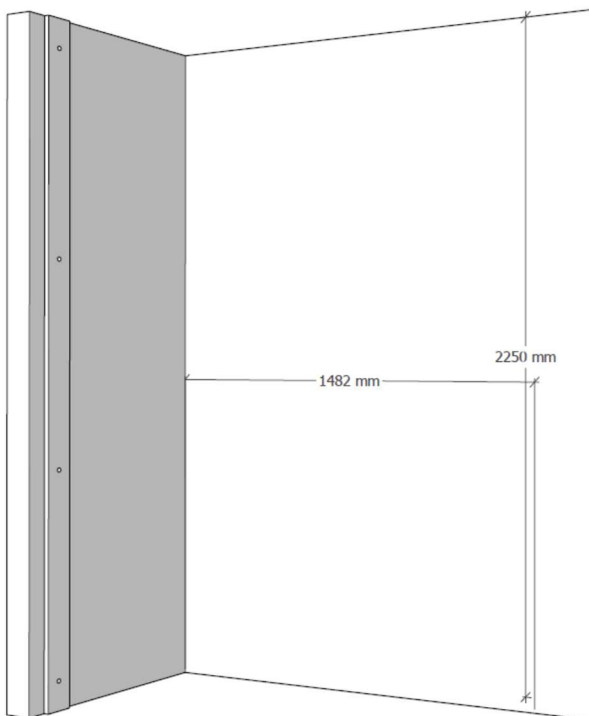

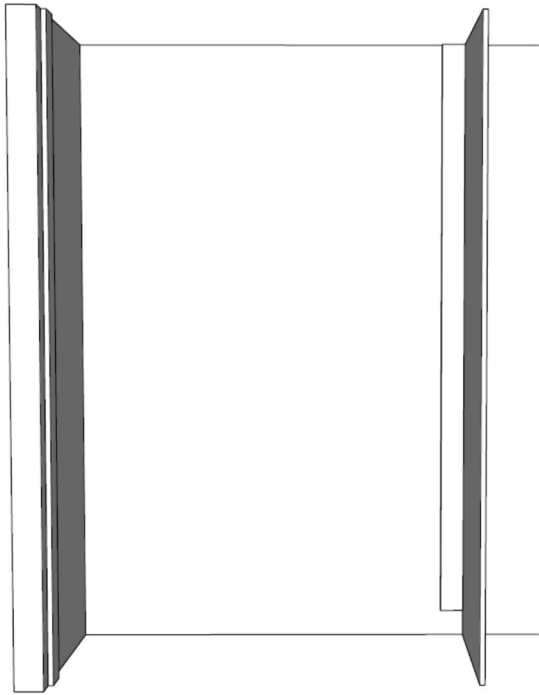

## STEP 7

### Instruction:

It is recommended to now fit the interior of the wardrobe.

See the interior fitting guide, and once fitted return to the next step.

## STEP 8

### Instruction:

Using a tape measure, measure the width between the liner on the side of the wardrobe to the inside edge of the end panel against the ceiling.


Cut the top track to this size.



## STEP 9

### Instruction:

Secure Top track to ceiling.

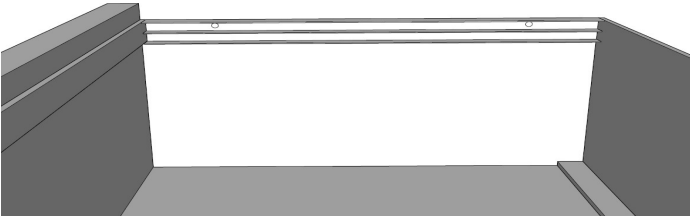


## STEP 10


### Instruction:

Measure the width between the inside edge of the side liner to the inside edge of the end panel.

Cut the liner and bottom track to size and install the liner making sure it is level.

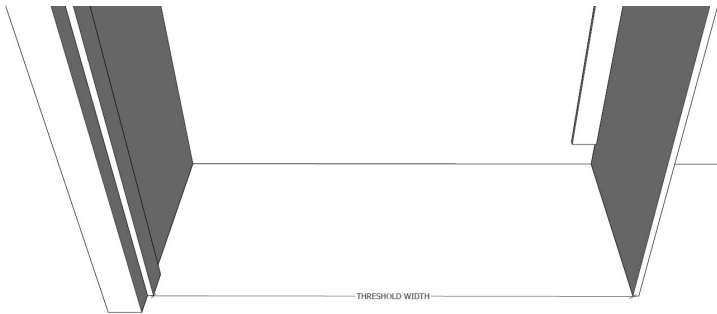

## STEP 11

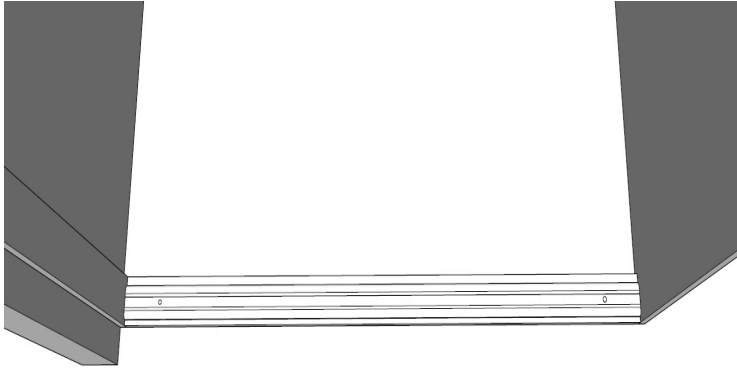


### Instruction:

When positioning the bottom track on top of the threshold, please ensure that the back edge of the track is flush with the back edge of the threshold.

Secure track to liner.

## STEP 12

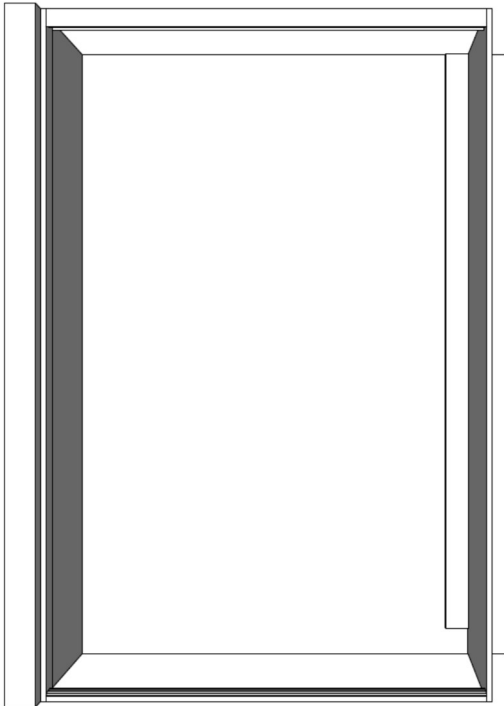

The wall to end panel outer framing kit is now complete.