


# HANGERS

WALL TO WALL OUTER FRAMING KIT INSTALLATION GUIDE

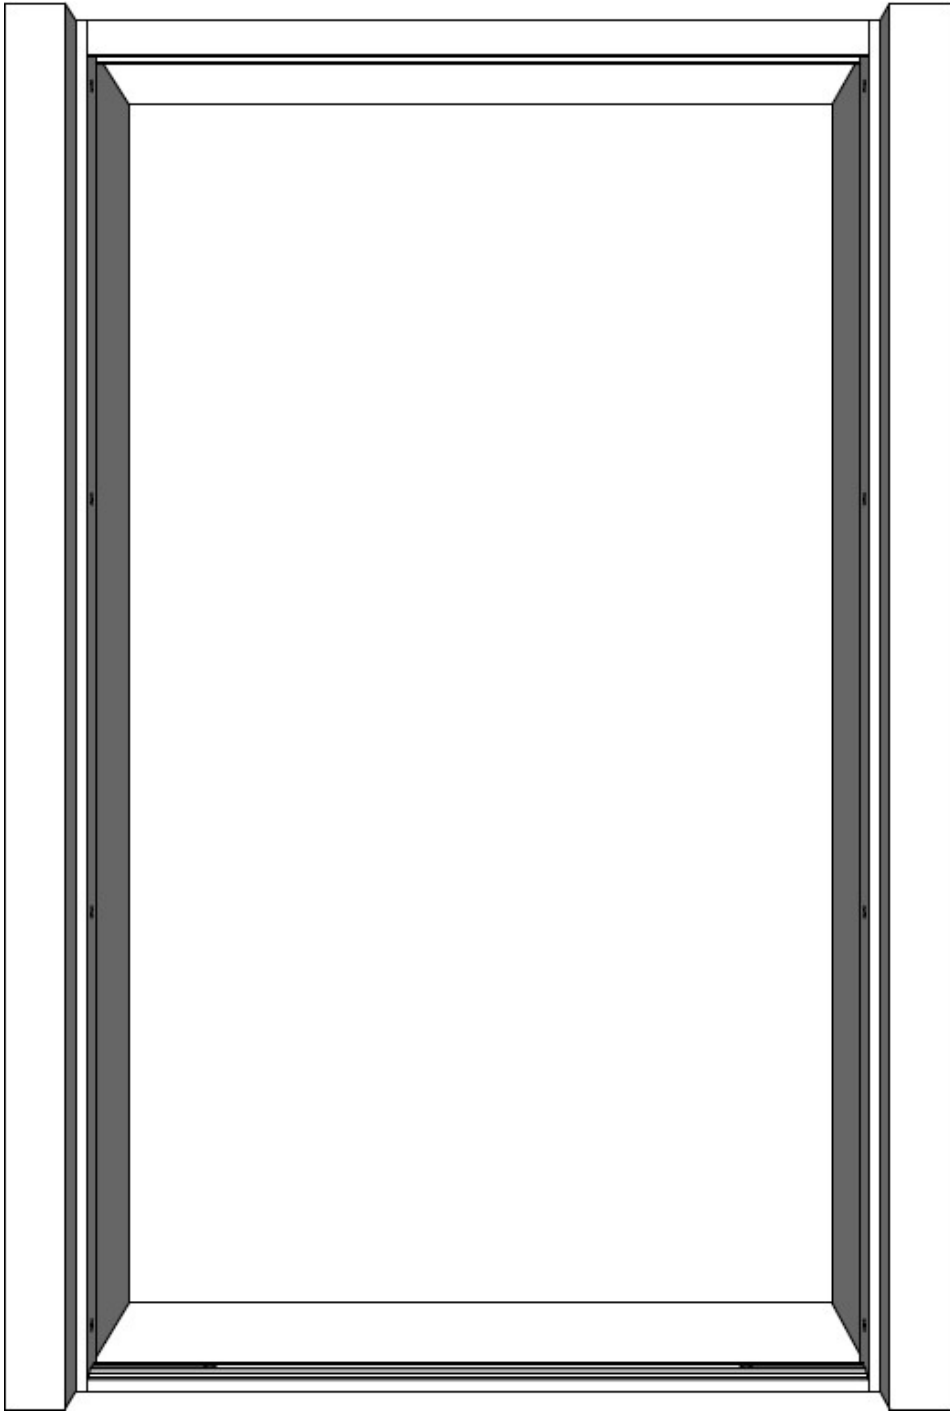

## STEP 1



### Instruction:

Measure the height of the wall from the floor to the ceiling where the front of your wardrobe will sit.

Measure and cut your liner to size.

## STEP 2



### Instruction:

If there is skirting board in place where the liner will be located, this will need to be cut and removed to allow the liner to be located there.

### STEP 3

Instruction:


Lift the liner back into position and secure the liner to the wall.



### STEP 4

Instruction:

Repeat steps for the liner on the opposite side of the wardrobe.

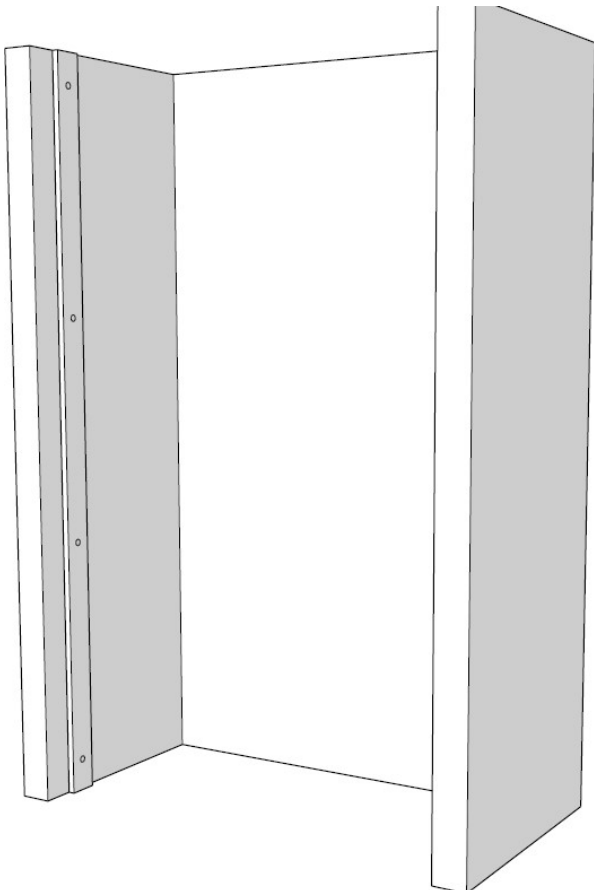


## STEP 5

### Instruction:

Measure the ceiling between the two liners.  
Using a hacksaw, cut the track to size.

Secure Top track to ceiling.

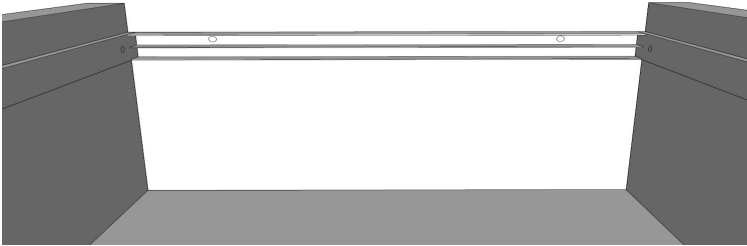

## STEP 6

### Instruction:

Using a tape measure, measure the width  
between the two liners at the bottom of the  
wardrobe on the floor.

Cut the liner and bottom track to size and  
install liner making sure it is level.




## STEP 7

### Instruction

Carefully place the threshold in position on the floor.

Ensure that the front of the threshold is directly level with the front of the side liners.

Press down firmly ensuring of a firm fix to the floor.

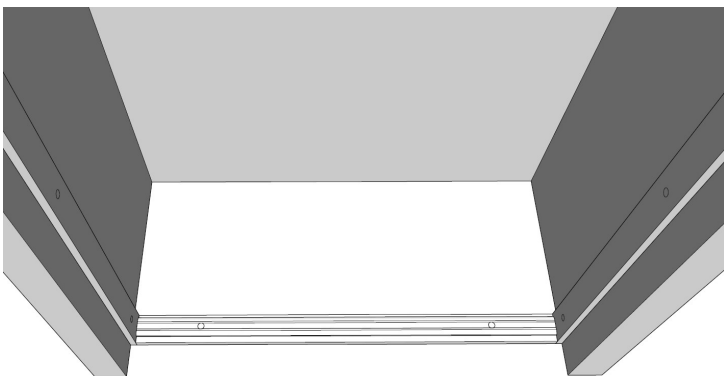

## STEP 8

### Instruction:

When positioning the bottom track on top of the threshold, please ensure that the back edge of the track is flush with the back edge of the threshold.

Secure track to liner.

## STEP 9

The wall to wall outer framing kit is now complete.

