


ESSENTIAL 01 SHELVING KIT INSTALLATION GUIDE

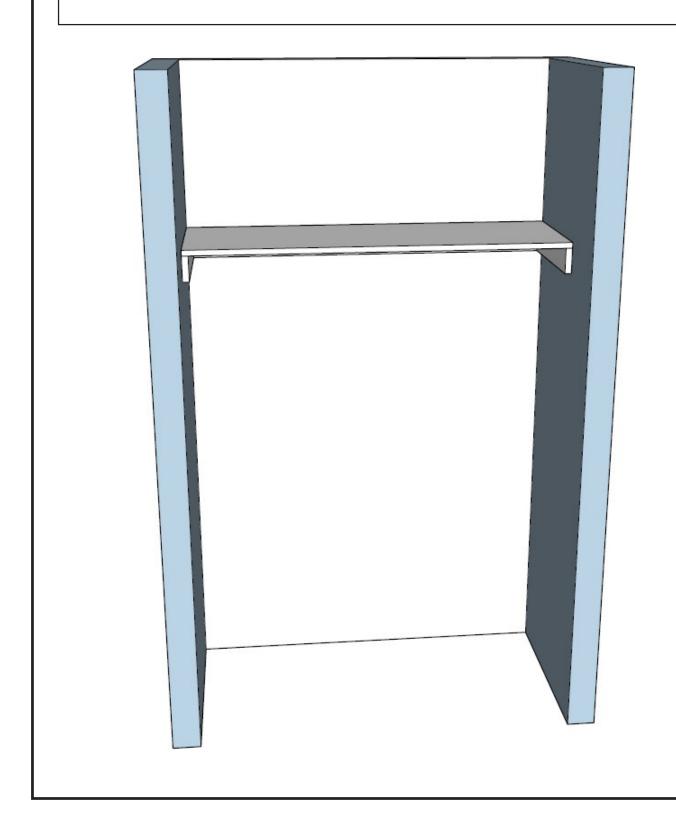


STEP 1

Instruction:

Measure up from the floor to 1650mm.

Draw a small line for reference.

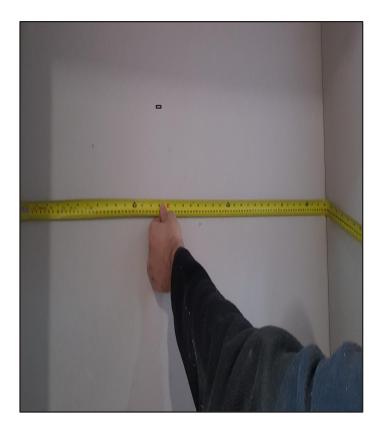


STEP 2

Instruction:

Directly above this 1650mm line, measure the width of the rear wall.

Cut liner to size.

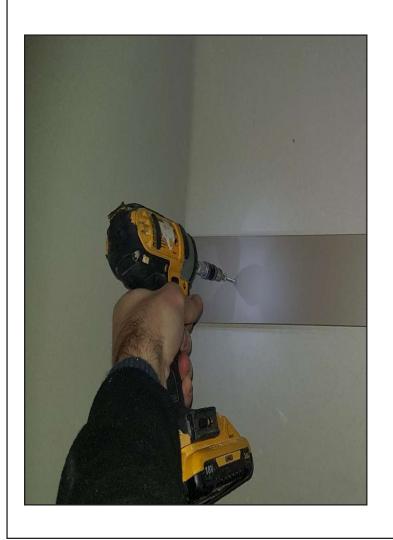

STEP 3

Instruction:

Secure the liner to the wall.






STEP 4

Instruction:

Secure side wall to wall, level with liner.

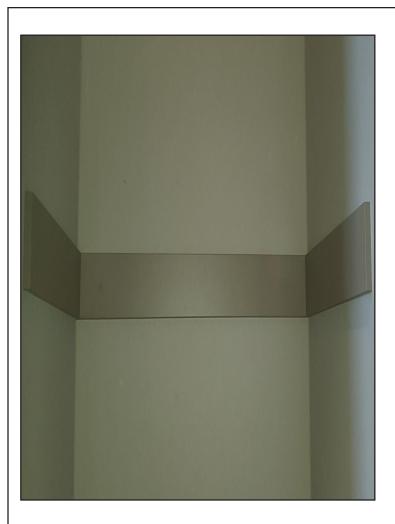

STEP 5

Instruction:

Repeat for other side.



STEP 6

Instruction:

Lift the shelf and move into position at an angle with one side lower than the other.

Place the lower side onto one of the side walls.


When in position on the side wall, carefully lower the other end down until it is located on the side wall and the shelf is now down into position.



STEP 7

Instruction:

Secure shelf in position.

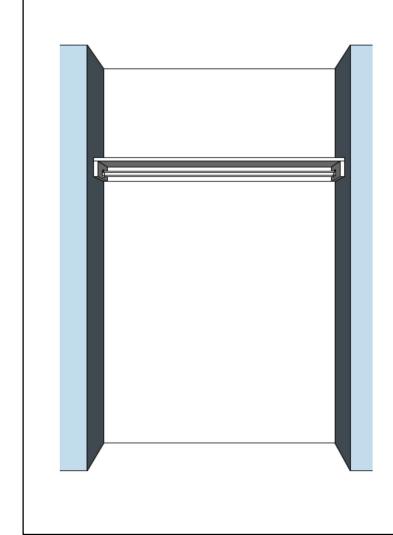

STEP 8

For shelves that are 1350mm and below use 'How to install a single hanging bar interior' guide.

For shelves above 1350mm use the 'How to install a Hanging Bar Crucifix' guide.