


ESSENTIAL 02 SHELVING KIT INSTALLATION GUIDE

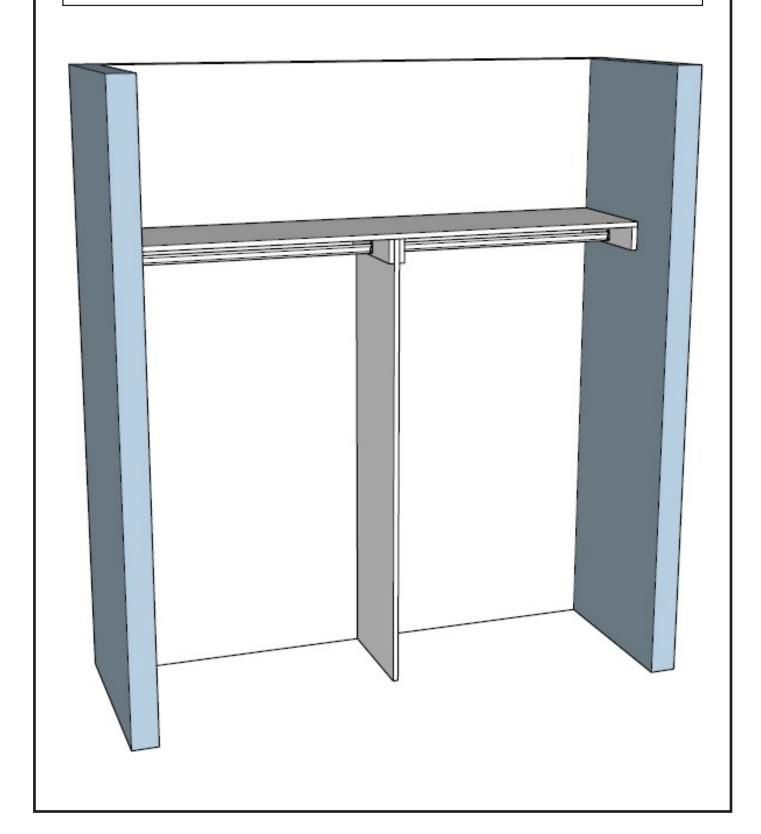

## Instruction:

Measure up from the floor to 1650mm.

Draw a small line for reference.




# STEP 2

## Instruction:

Directly above this 1650mm line, measure the width of the rear wall.


Cut liner to size.

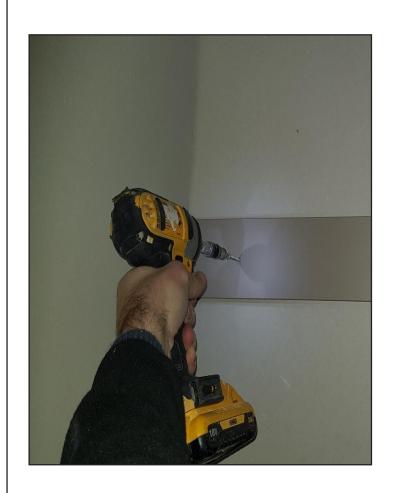

STEP 3

Instruction:


Secure the liner to the wall.

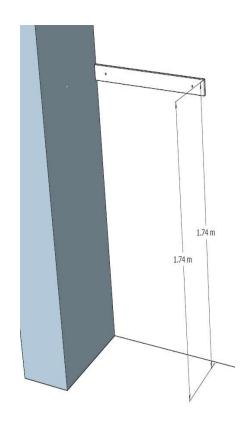


STEP 4

Instruction:

Measure from the floor to the top edge of the fitted liner.

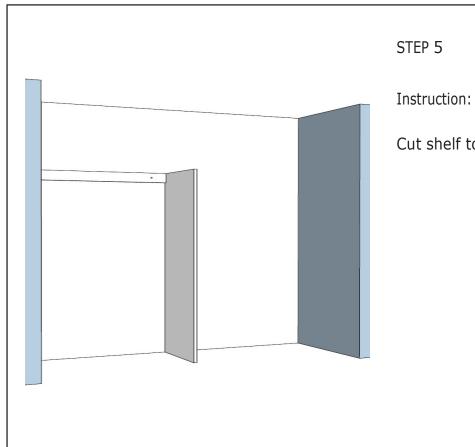


Cut shelf to size and install.

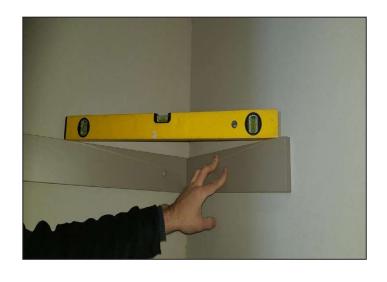


STEP 6

Instruction:


Install side wall level with liner.

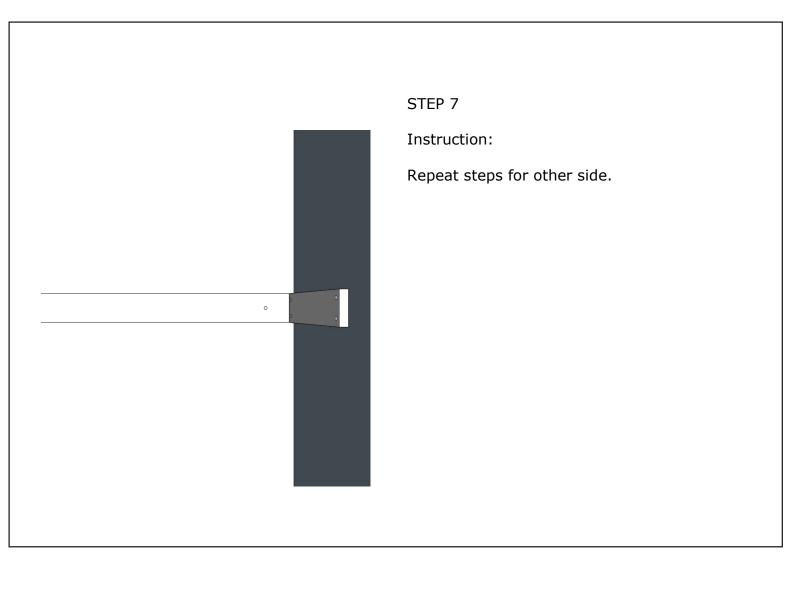


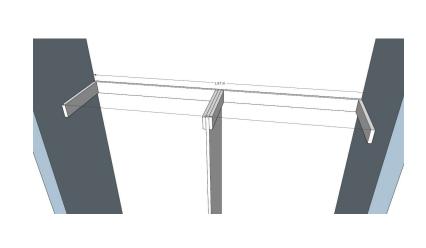

Instruction:

Measure front and back and cut shelf to size.

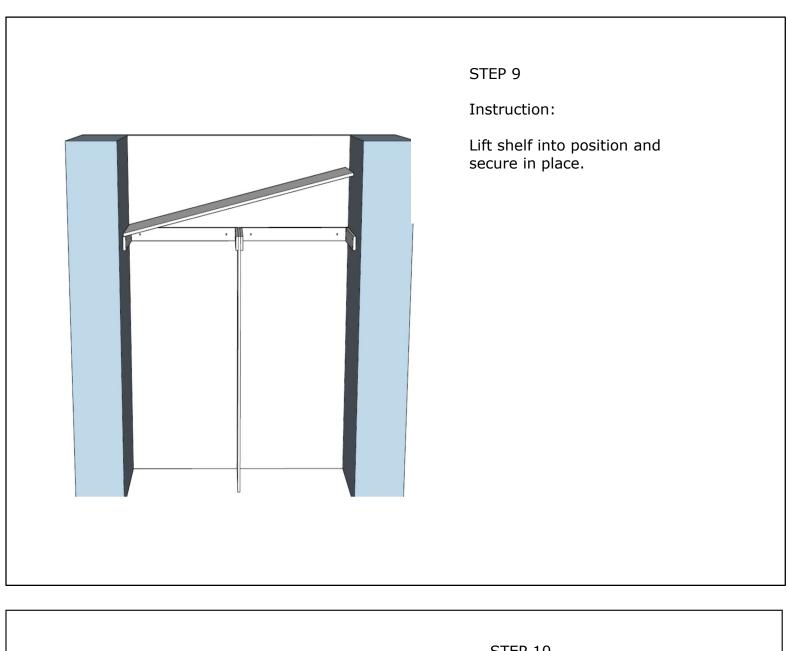

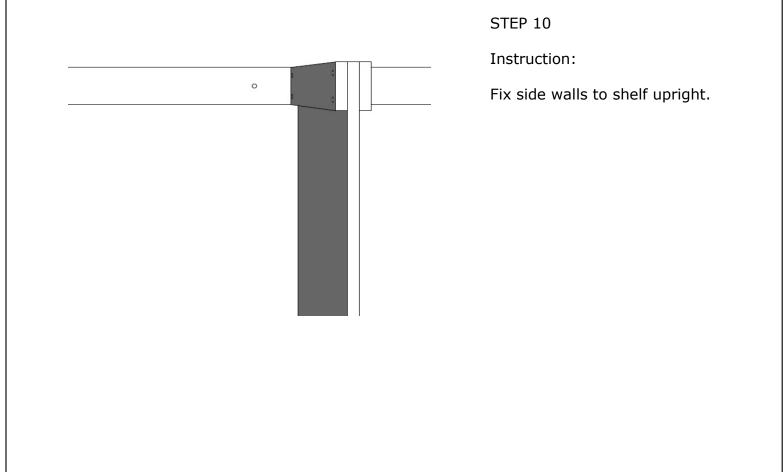



### Instruction:

Measure out from the rear shelf bearer to 230mm.



### STEP 12

### Instruction:

At the 230mm point, measure down from the underside of the shelf to 80mm, mark a line for reference.



Instruction:

Secure hanging bar cup.

Repeat on all four sides.







## STEP 14

Instruction:

Measure and cut hanging bar to size and install.

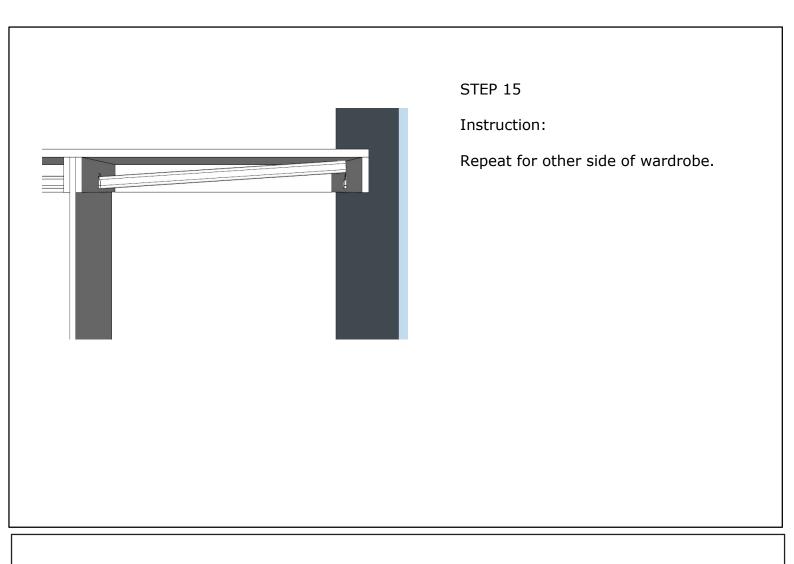

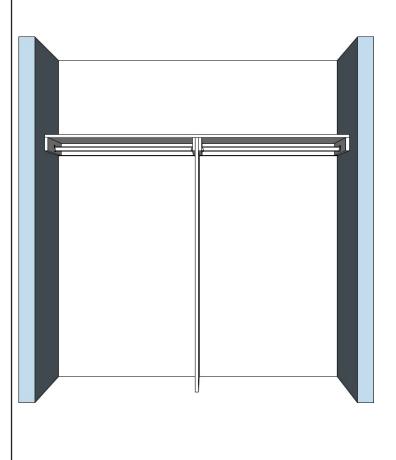

Interior is now complete.