

HANGERS

HOW TO MEASURE A WARDROBE



This measure guide is for wardrobes fitted into an alcove/between two walls.

You are measuring an area where you are building this wardrobe, please ensure best care is taken when checking and measuring the area.

Wardrobe recommendations.

We recommend that the front edge of the wardrobes start at least 640mm from the rear wall, this allows for clothing to be clear of the doors when they are in their hung location. If 640mm is not achievable due to the constraints of your wall space then the minimum is 600mm but this may cause clothes snagging on the doors.


The maximum height we are able to supply doors/wardrobes at is 2500mm.

If you are changing flooring between measuring and fitting the wardrobe, this will affect the wardrobe suitability. If you are planning to change flooring then we recommend that you measure from the floor underneath the flooring and fit to this. Fit the new flooring after as this will also enhance the finish of the wardrobe.

Check to ensure that the wardrobe area is free from light switches, plug sockets, radiators, or any other similar obstructions.

STEP 1

Measure both sides of the opening to ensure a minimum depth of 600mm can be achieved.

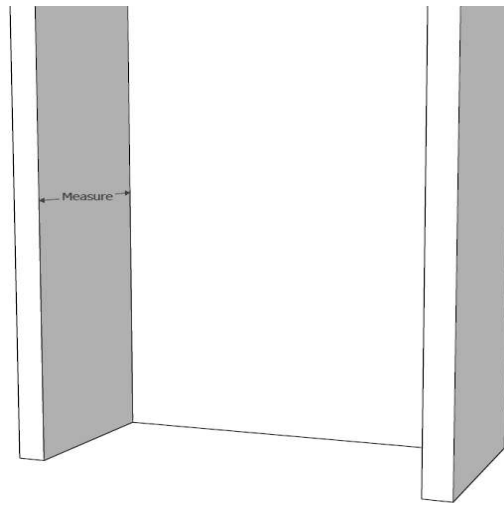


STEP 2

Measure to where the front of the wardrobe is to be located. This will be the same distance out from the rear wall as the opposite side of the wardrobe.


At this measurement, measure the distance from the floor to ceiling in mm.

Compare the two measurements taken for the height of the wardrobe. You will need to record the lowest of these two measurements

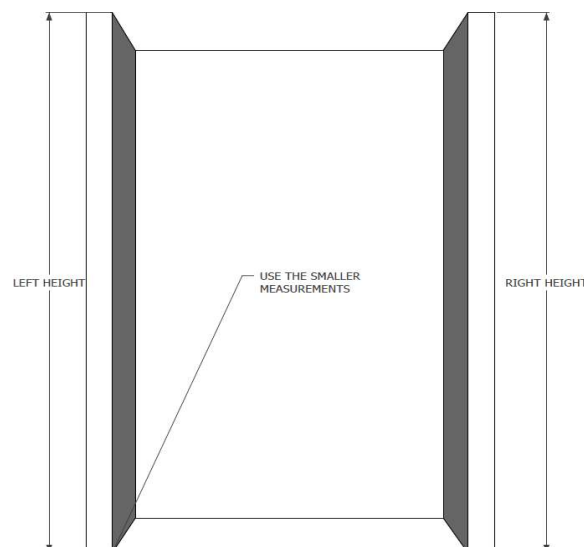

STEP 3

At the mid height point of where the front of the wardrobe will be located, measure the width of the opening. Record width measurement in mm.

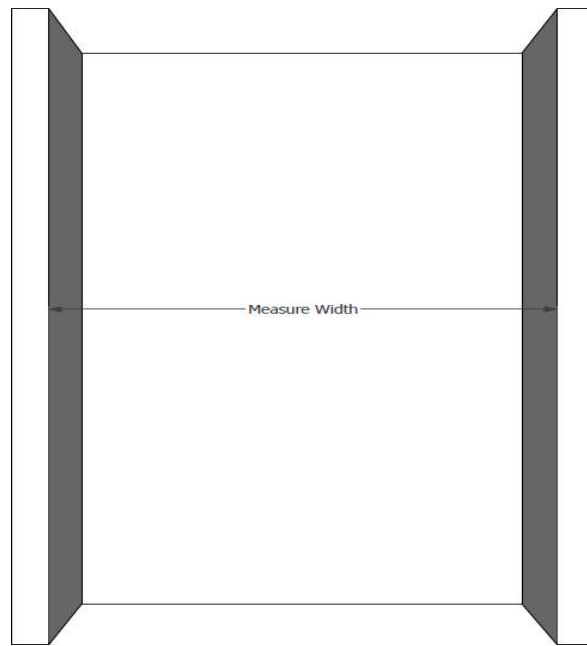

STEP 4

Once you have recorded these measurements you will now need to consider the deductions needed for your Doors. If you intend to add an Aperture Liner Kit (either wall to wall, wall to end panel, or end panel to End panel) to your order you will need to deduct 36mm from your measurement and 18mm from your height measurement. These measurements should then be entered into the boxes on Start your journey.

If you already have linings to your wardrobe conduct your measurements between these linings and use These as your finished opening sizes. No deductions will be required.