


STEP 1 : PREPARE VEHICLE BY CLEARING ANY DEBRIS IN THE CARGO AREA AND REMOVE AND SET ASIDE TIE DOWN POINTS.

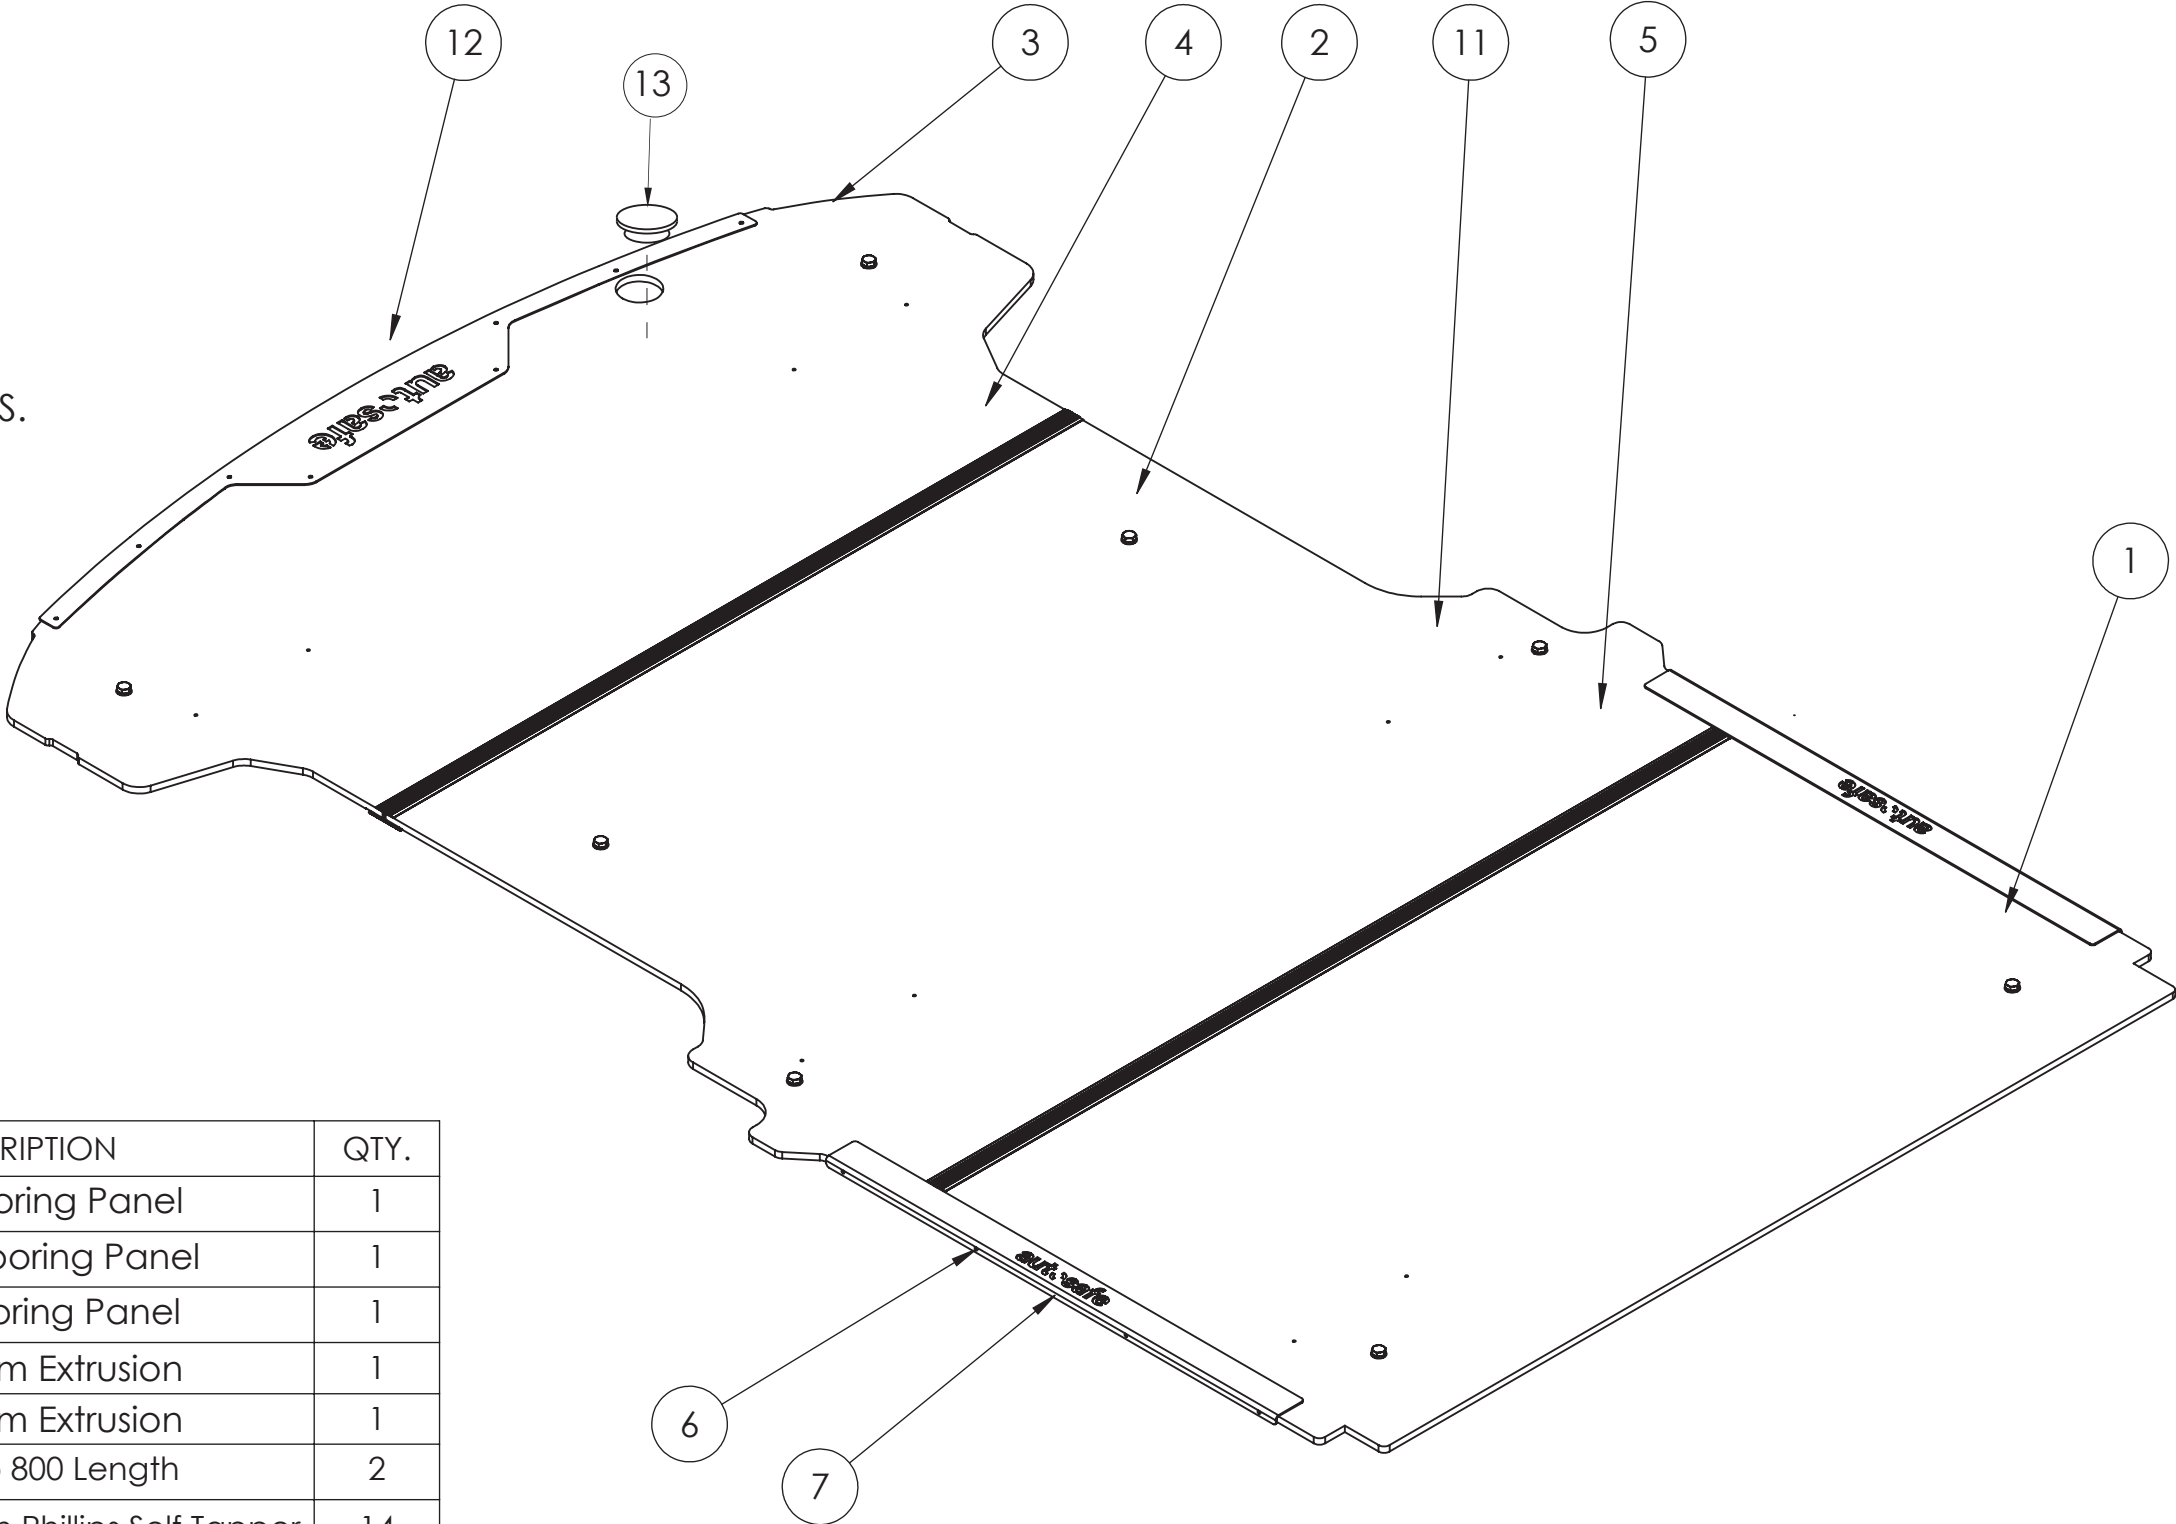


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	PTKT-FHST21F	Front Flooring Panel	1
2	PTKT-FHST21M	Middle Flooring Panel	1
3	PTKT-FHST21R Rev2	Rear Flooring Panel	1
4	Floor Joiner Extrusion 1226	Aluminium Extrusion	1
5	Floor Joiner Extrusion 1395	Aluminium Extrusion	1
6	PTKT-SC800	Step Cap 800 Length	2
7	10X12ZPPCRST	10g x 1/2 Zinc Pan Phillips Self Tapper	14
8	m10x32 washer	Washer	8
9	16 x 15mm spacer	Steel Spacer	8
10	16 x 6mm spacer	Steel Spacer	8
11	M10X55-HEXZP	M10-1.25x55 Hex Bolt 8.8	8
12	PTKT-SCHST21	Rear Step Cap	1
13	INTERNAL 64MM BLACK 7426	INTERNAL 64MM BLACK 7426	1

PART NUMBER: PTKT-FHST21-KIT

VEHICLE: Hyundai Staria 21

SHEET 2 OF 3

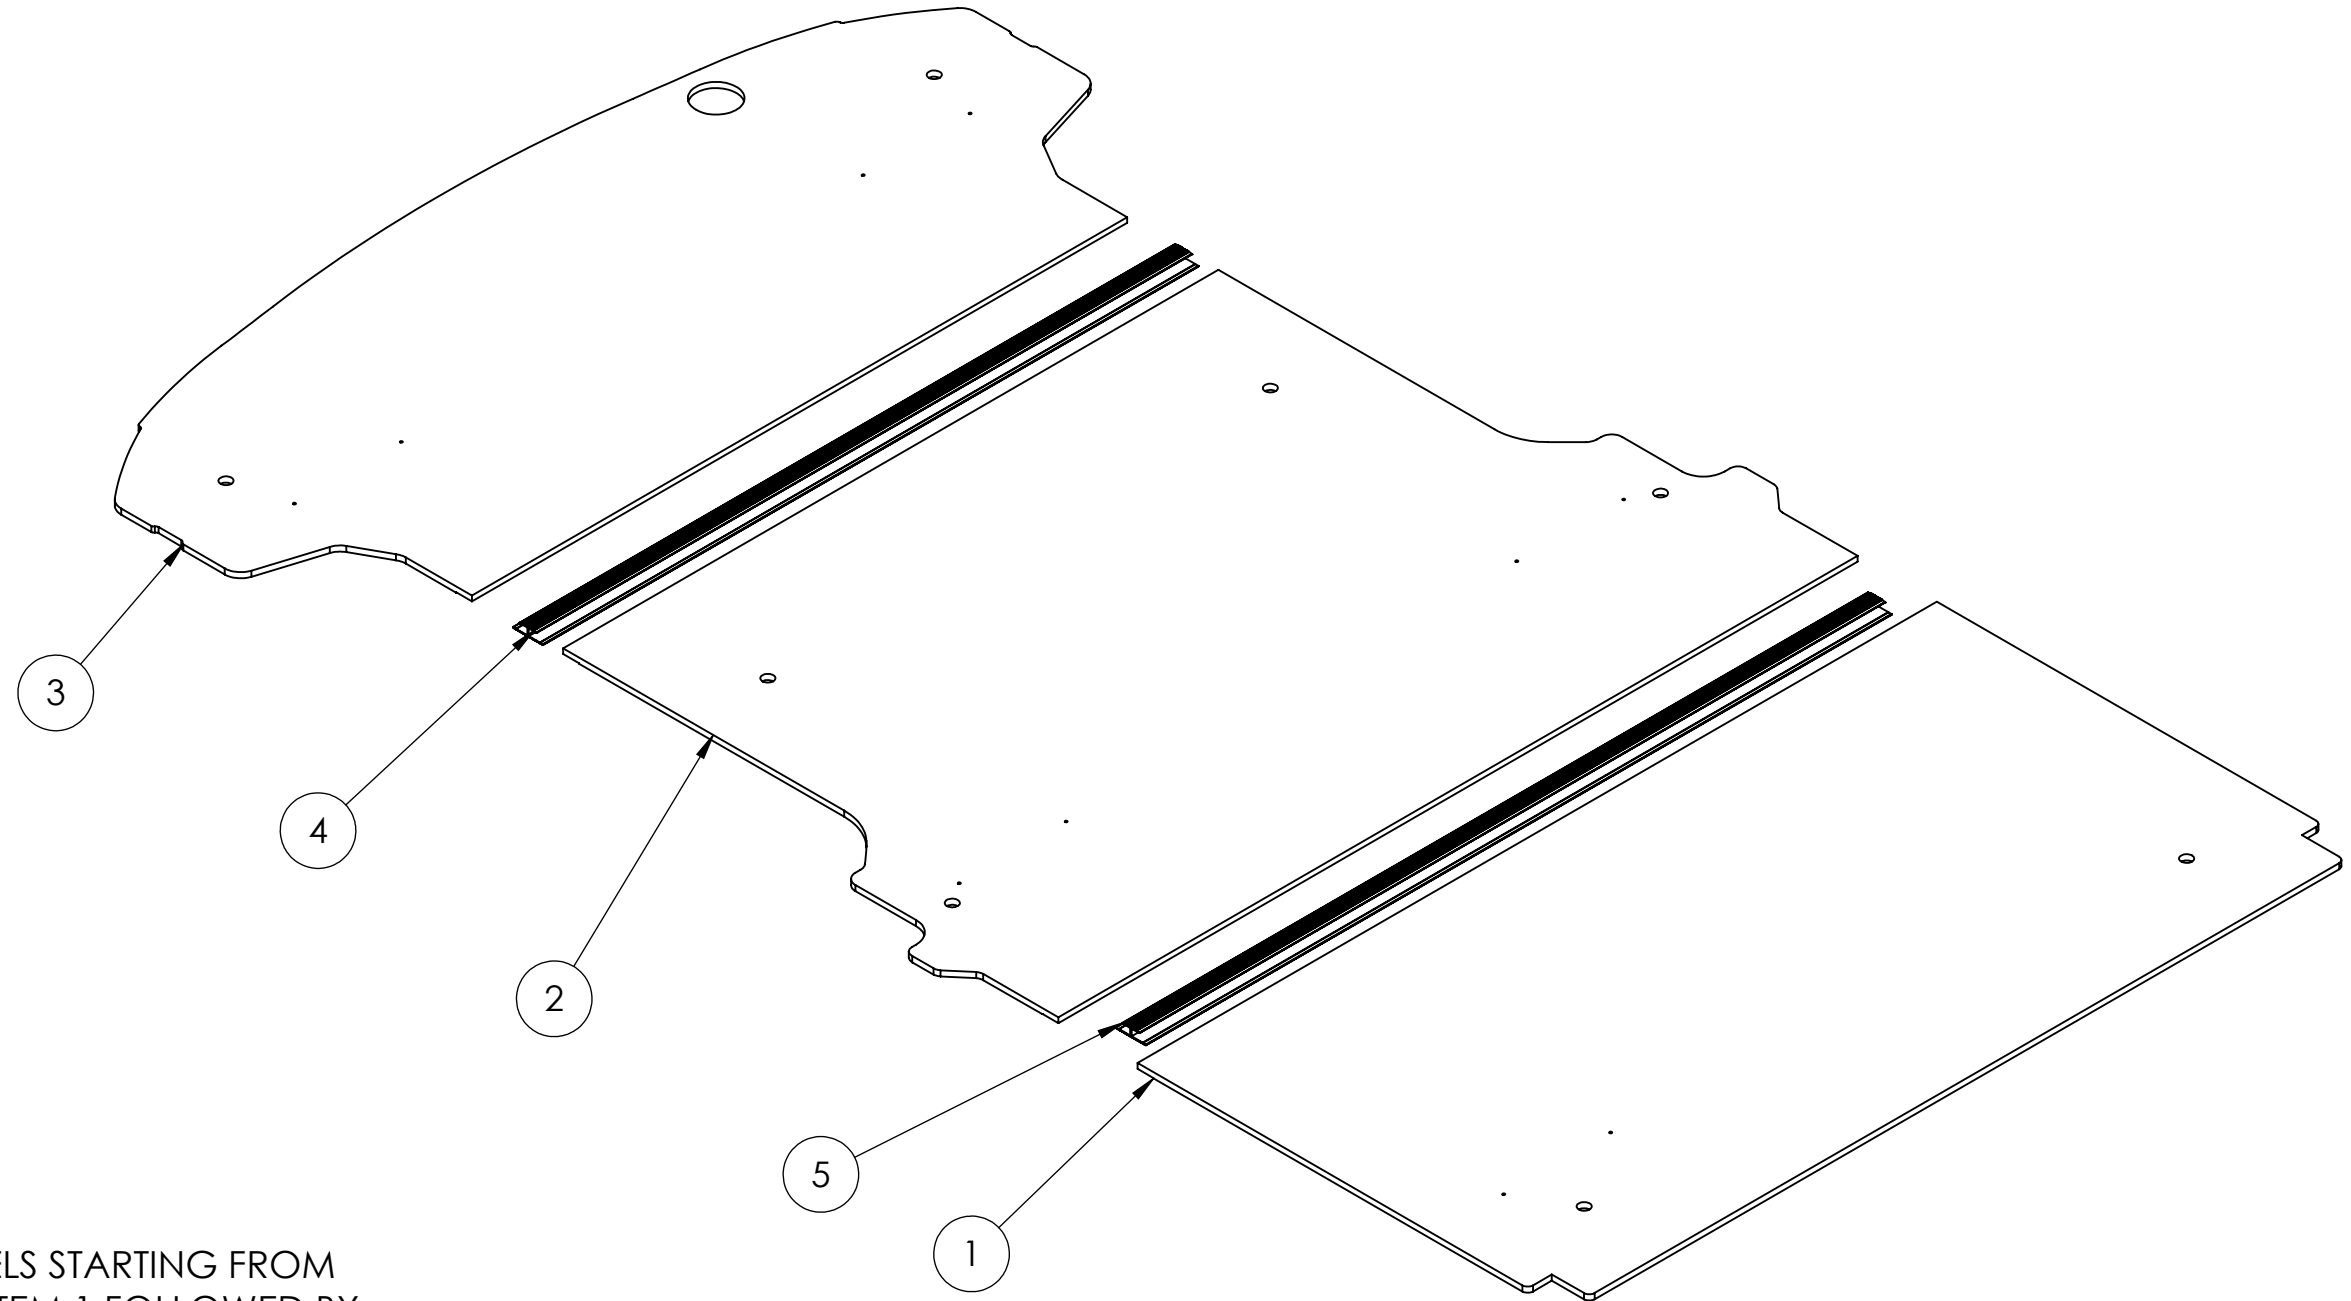


STEP 2: LAYOUT PANELS STARTING FROM FRONT OF VAN WITH ITEM 1 FOLLOWED BY ITEM 2 AND THEN ITEM 3. PLACING ALUMINIUM CHANNELS (ITEMS 4 AND 5) BETWEEN EACH PANEL

PART NUMBER: PTKT-FHST21-KIT

VEHICLE: Hyundai Staria 21

SHEET 3 OF 3

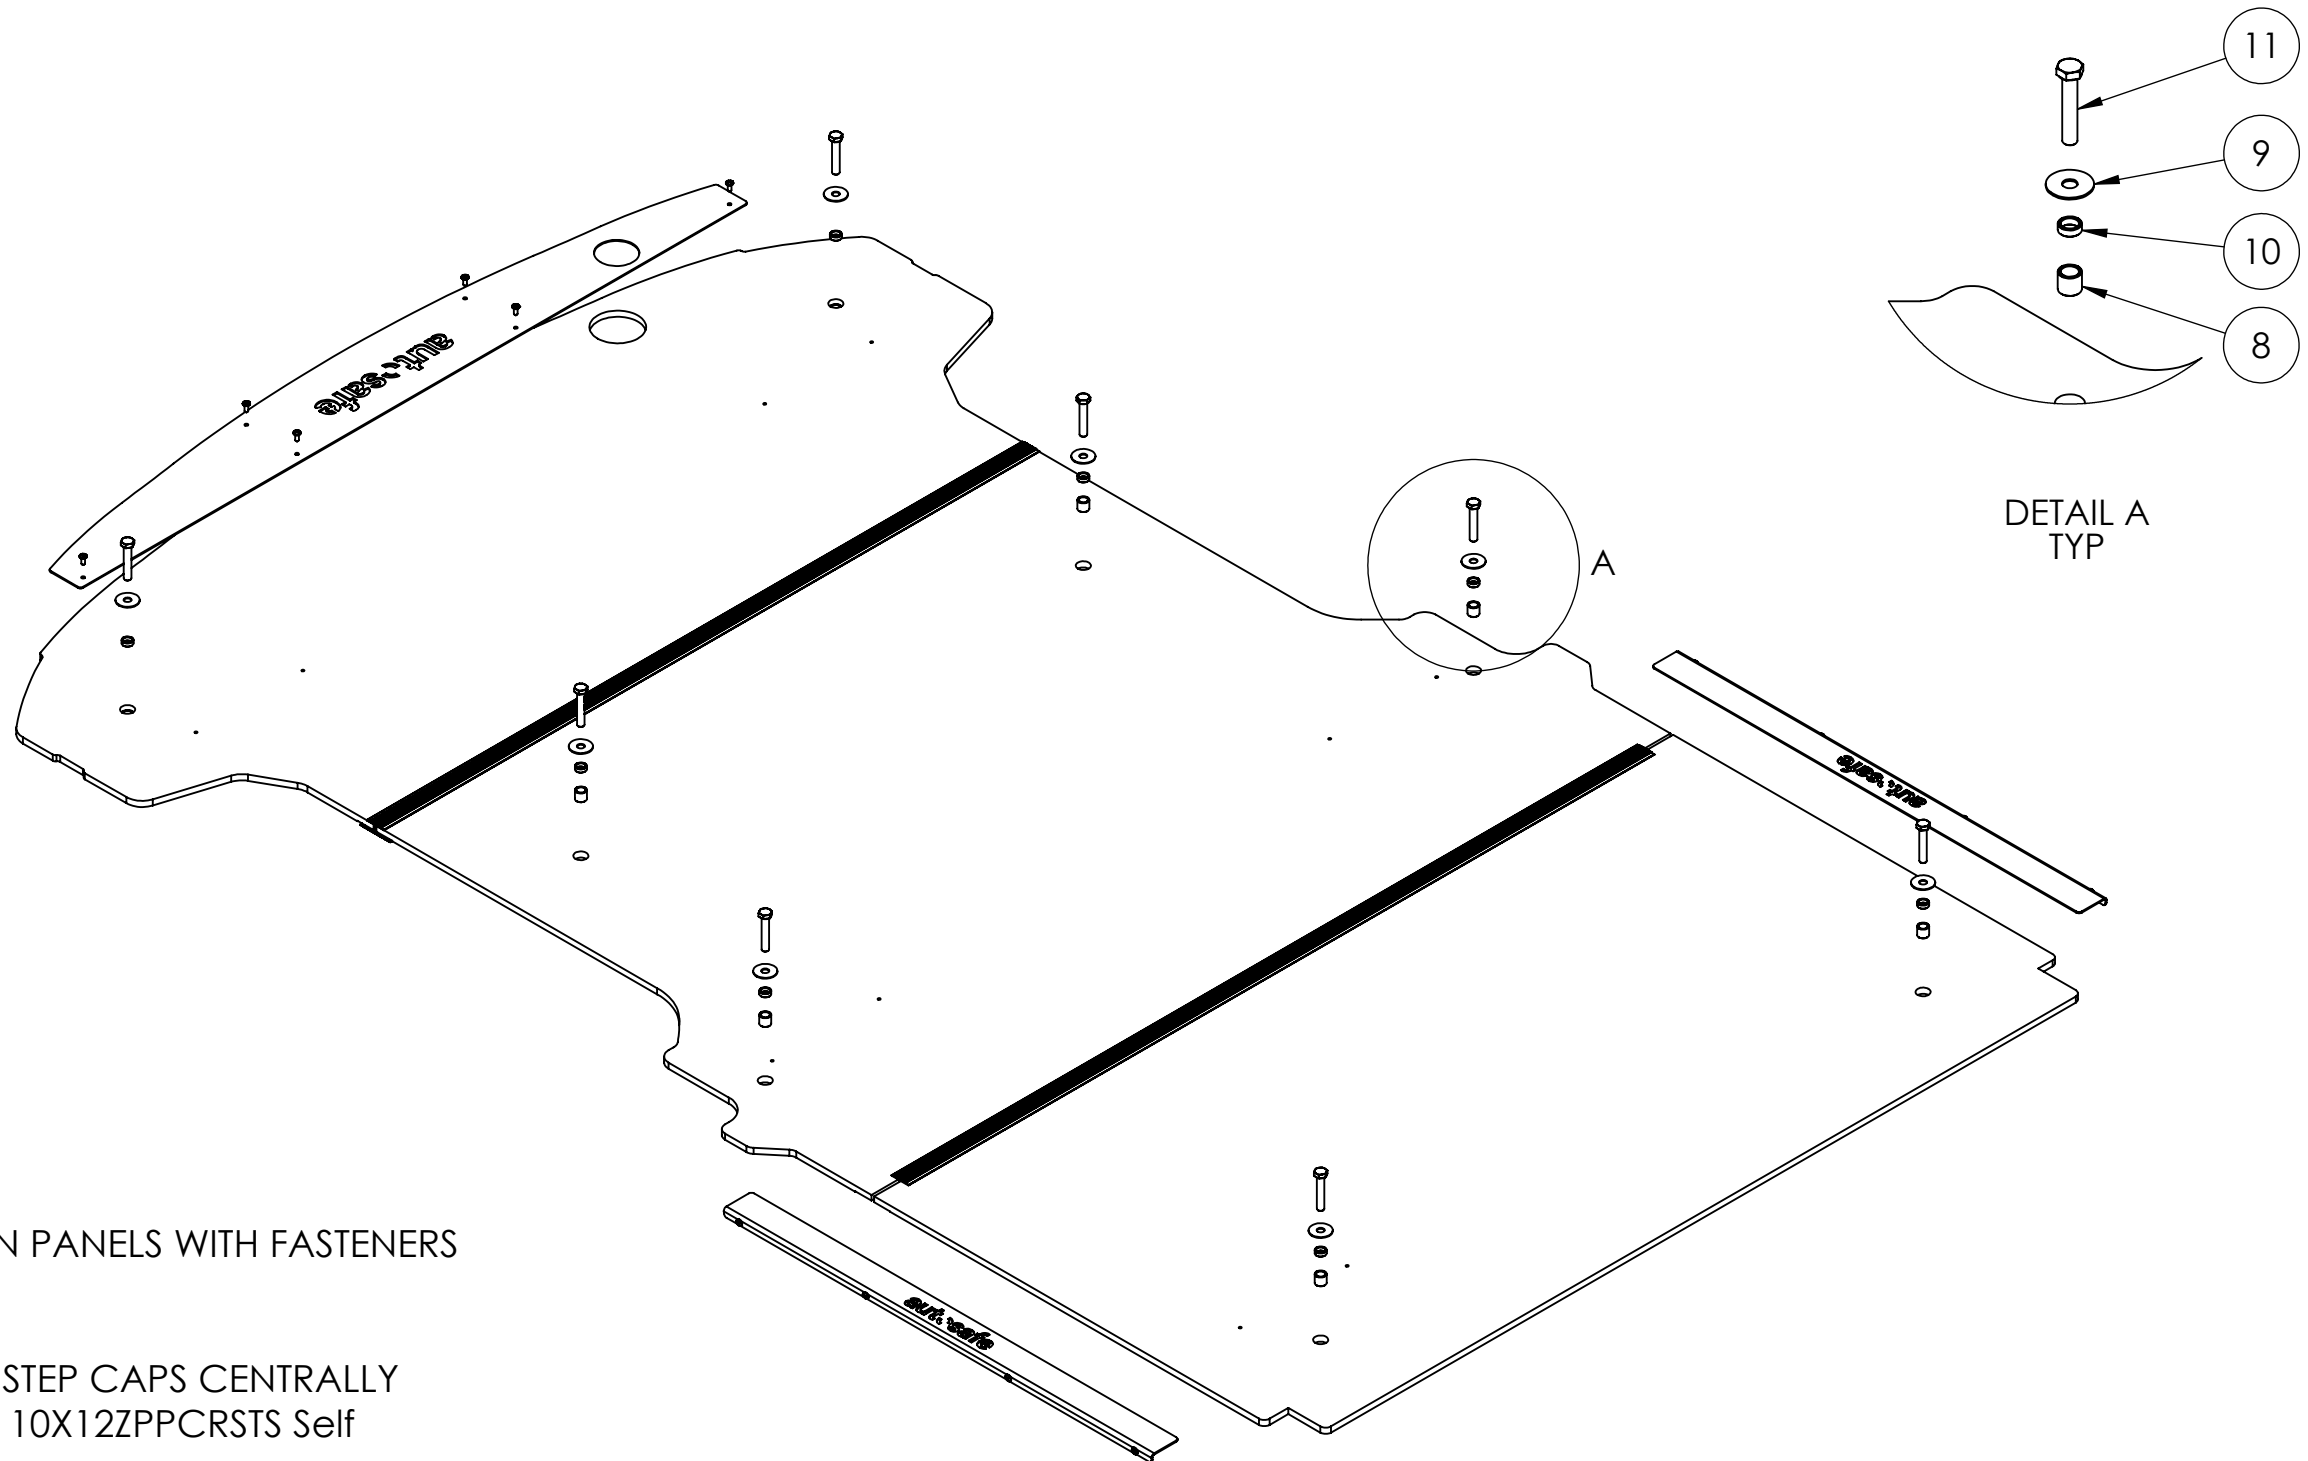

STEP 3 : FIX DOWN PANELS WITH FASTENERS
AS SHOWN.

STEP 4 : POSITION STEP CAPS CENTRALLY
AND AFFIX USING 10X12ZPPCRSTS Self
Tapping Screws