

KING GUBBY DESIGNS



STACKABLE BRICK FEET

FOR AUFERO LASER 2 (LU2-2)



INSTALLATION MANUAL

Watch the install video here

Or

<https://youtu.be/vsGSfHnirts>



COMPONENTS




KGD

**4 x Stackable
Brick Tops**



**4 x Stackable
Brick Bottoms**

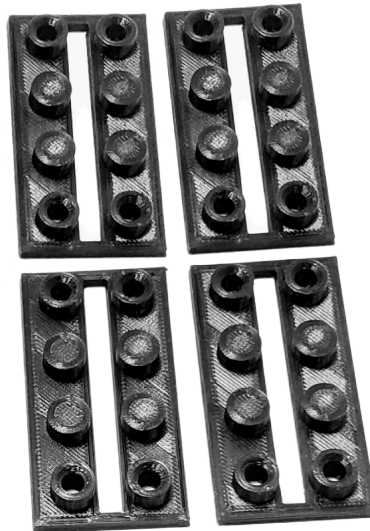

4 x M5 Screws




4 x M5 Nuts




IMPORTANT

Our Stackable Brick Feet Work With Large Bricks

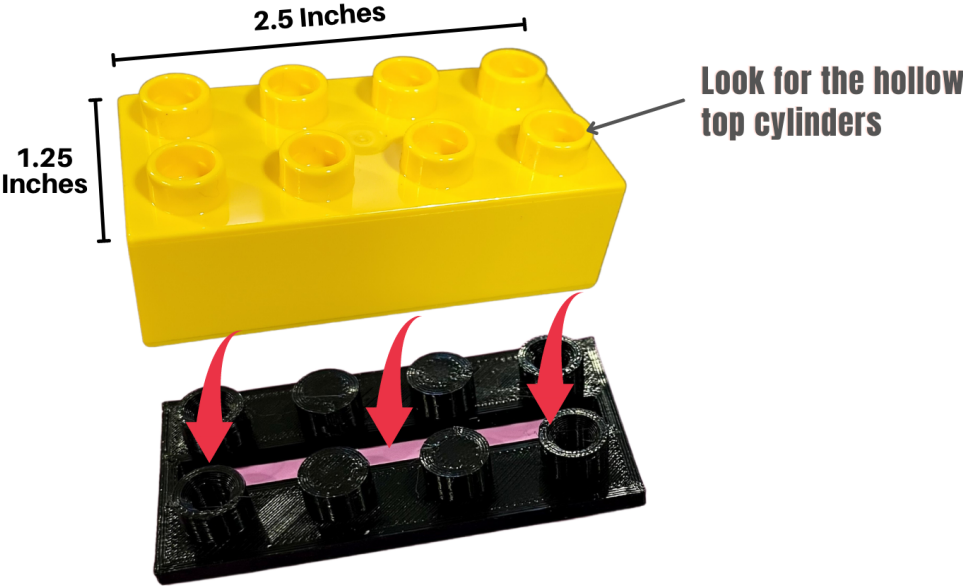

**Not
Standard Bricks**


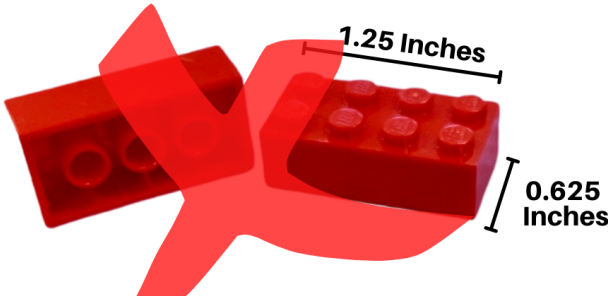


<https://snip.ly/d9qsw7>



**NEED BRICKS
FOR YOUR
NEW FEET?**

Works with Aufero Laser2 (LU2-2) and NO OTHER MODELS

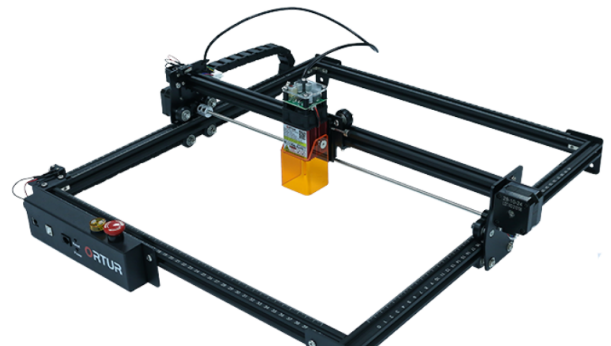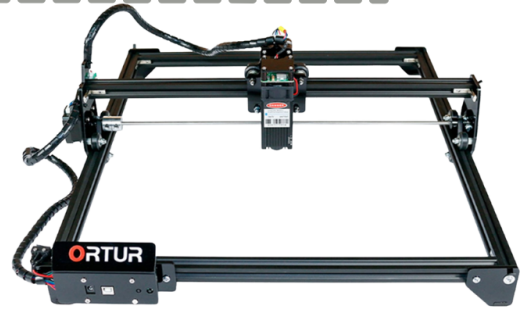

Step 1:

Simply slide the nut into the underside of the brick top.



Step 2:

Insert the screw THROUGH THE HOLE IN YOUR LASER'S FOOT and into the hole in the brick foot top. Thread and tighten into the nut placed in step 1



Tag us in your projects



Once all of the "tops" are attached to your laser's feet watch the following video to see how to align and anchor your Brick Bottoms to your waste board.

Watch the install video here

Or

<https://youtu.be/vsGSfHnirts>



When completed, it should look like this



<https://snip.ly/d9qsw7>



**NEED BRICKS
FOR YOUR
NEW FEET?**

Tag us in your projects

