

# Upholstered Headboards

## FIXING METHODS & POWER CUT OUTS

### FIXING METHODS

#### WALL MOUNTED (AVAILABLE FOR ALL HEADBOARDS)

We use a split batten wall fixing method which comes with a top and bottom cleat attached to the headboard. These are to be fixed to the wall at your desired height - we suggest just above your skirting board or just touching the floor.

We recommend fixing this through the wall into a stud for adequate strength. Headboard top cleat, gets placed over the bottom cleat, and the 45 degree edge helps pull it tight against the wall.

We supply the split batten cleats, but installation is excluded.

#### BED FIXED

Headboard is supplied with two vertical slots which allow for the headboard to be bolted to a NZ standard mattress base. The fabric is stapled off around the vertical slots.


This method is NOT available for the following headboards:

- Parker
- Ellis
- Piper
- Arlo

#### FREE STANDING

The headboard is supplied without any split batten wall fixing or slots for bed fixing. The headboard sits on the ground between the wall and the mattress / bed base.

This method is suggested for thicker headboards such as Piper or Arlo but is suitable for all headboards.

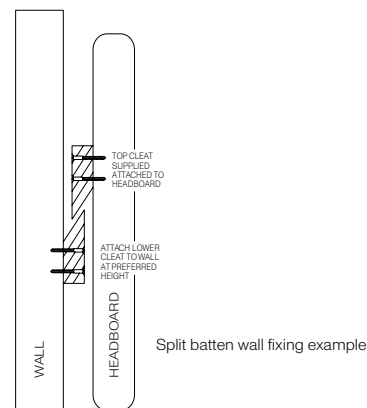

### POWER CUT OUTS

Provision for switches, lighting and power points can be cut into to certain headboards upon request. This will incur an additional cost as well as a custom-design fee.

This is NOT available for the following headboards:

- Ellis
- Parker
- Piper
- Arlo

If you would like power cut-out's applied please see our process below:

- Client sends through specifications for switch, lighting or powerpoint specification to allow for correct size cut out including vertical and horizontal location.
- We provide a detailed line drawing that clearly shows the required cut-outs
- Once approved, we will process the design for production

Please note:

Woodwrights does not arrange or carry out any electrical works required for installation of switches, lighting or powerpoints.