



## Assembly Notes for 1-¼” kit.


You should have 2 parts and an anti wobble kit



Replace the lower Hitch Stud shown below with the parts as shown



It should now look like this:

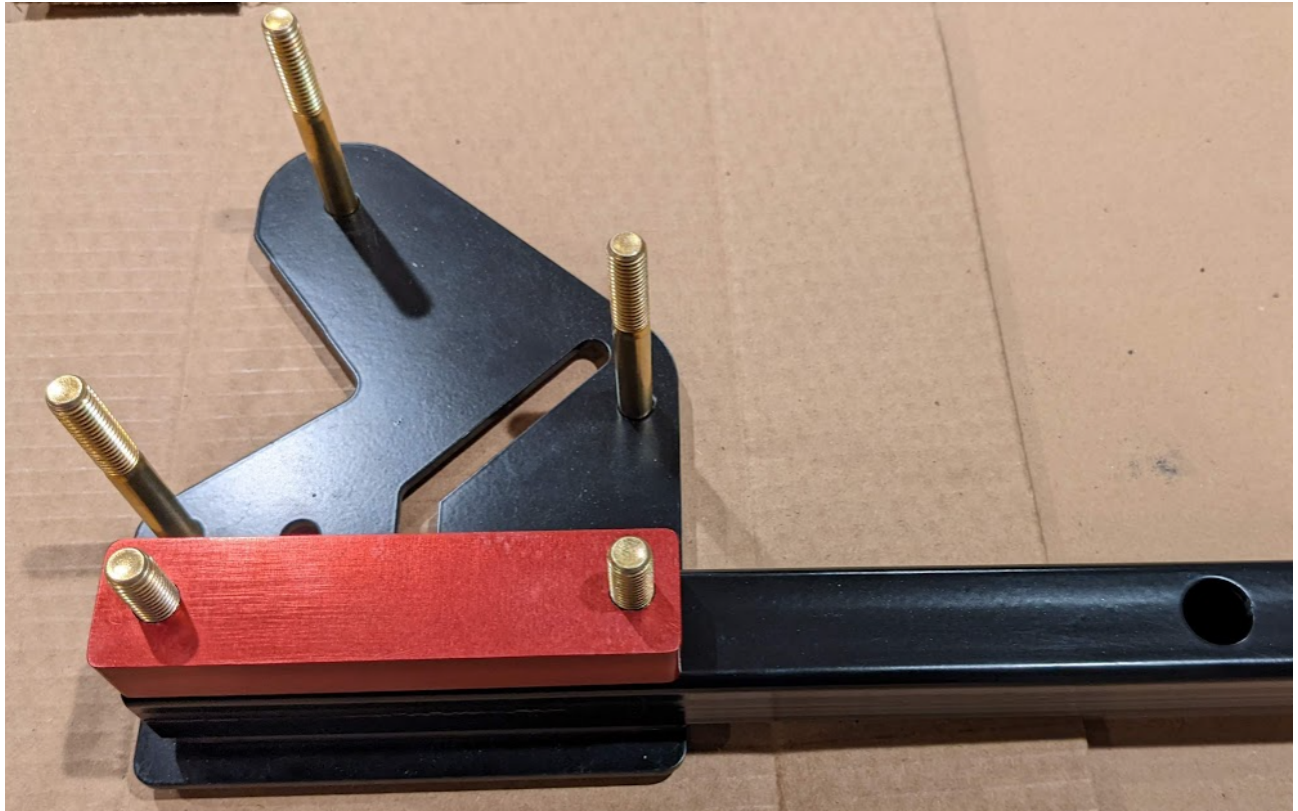

Add the Vertical post and finish as per the BASE Post instructions.

Notes on the anti rattle kit can be found here:

[www.curtmfg.com/part/22315](http://www.curtmfg.com/part/22315)

**Reminder:**

Chuck Rack BASE post with the **1- $\frac{1}{4}$ " retrofit kits are limited to a capacity of 150lbs.** Carefully inspect your Chuck Rack Base Post integrity prior to use and discontinue use if mechanical damage is present.