

### EQUIPMENT

*\*Required.*

- Tape Measure\*
- Sharp craft knife\*
- Hammer\*
- Broom\*
- Rake\*
- Spade/Shovel
- Wheelbarrow
- Compacter\*/roller (or something to compact the area you have)
- Straight edge (level or a wooden plank will do)
- Kiln Dried (Tennis) Sand\* (10-15kg/m<sup>2</sup>)
- Weedmat staples or nails\* (150mm, galvanised, flat head)
- Artificial grass joining tape\* (if joining more than one piece)
- Top course\*



### INSTRUCTIONS



1. Dig 60- 80mm out off the lawn and level it. With any boggy patches, dig deeper until you get a firm base.


2. Lay 50-70mm of your top course. You want the top course height to be 10-15mm lower than the level you're trying to achieve:



a. Pour out the top course



b. Level it with a rake and straight edge

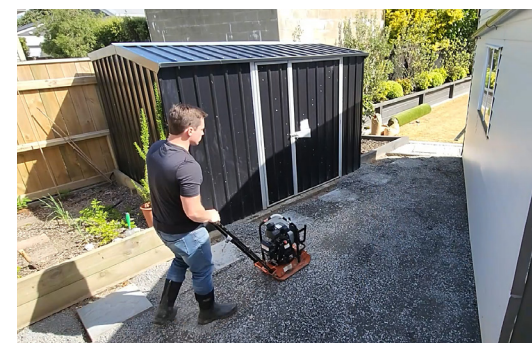

c. Compact it

# ARTIFICIAL GRASS ONTO LAWN.

# INSTALLATION GUIDE



**3.** Measure out the area to work out the most efficient laying method and where the joins will be.



**4.** Lay out the grass (ensuring each strip is the same direction). Overhang the lawn into any garden edges - you'll cut these accurately shortly.



**HINT:** If the grass has an excess black edge, trim this off.



**5.** To join two strips of grass together, butt the pieces together, fold back the join and lay joining tape (sticky side up) where the join will run.



**6.** Unpeel the joining tape and lay the two pieces of grass down on top of it. Press the grass in to get a good bond.



**7.** Pin the lawn into place with weed mat staples or nails (150mm, galvanised, flat head nails). Place them 60mm in from edges and about 200mm apart.

**HINT:** When you're pinning the grass down, ensure you're pulling it tight.



**8.** Once pinned down, trim the grass around the edges/garden borders. Ensure you use a strong sharp knife.

# ARTIFICIAL GRASS

## ONTO LAWN.

# INSTALLATION GUIDE



9. Use kiln dried sand (tennis sand) to weigh the grass down, help the strands stay up and give it a better feel underfoot. 10-15kg of sand per m<sup>2</sup> of grass if recommended.



10. Brush the sand into the grass to spread it and get it sitting below the surface.

**HINT:** Brush it against the grain to ensure the grass strands sit upright to give it a plush look.

Now it is complete! See below some images of completed Artificial Landscape Grass installations for your reference.

