



UV RESIN Making a Bracelet

SKILL LEVEL 1 | Less than 15 Minutes

TOOLS:

- Pliers (Optional)


MATERIALS:

- Charms
- Jump Rings
- Cord

DIRECTIONS:



PREPARE. Create a cluster of Charms to go on your bracelet. Cut 14" of cord.

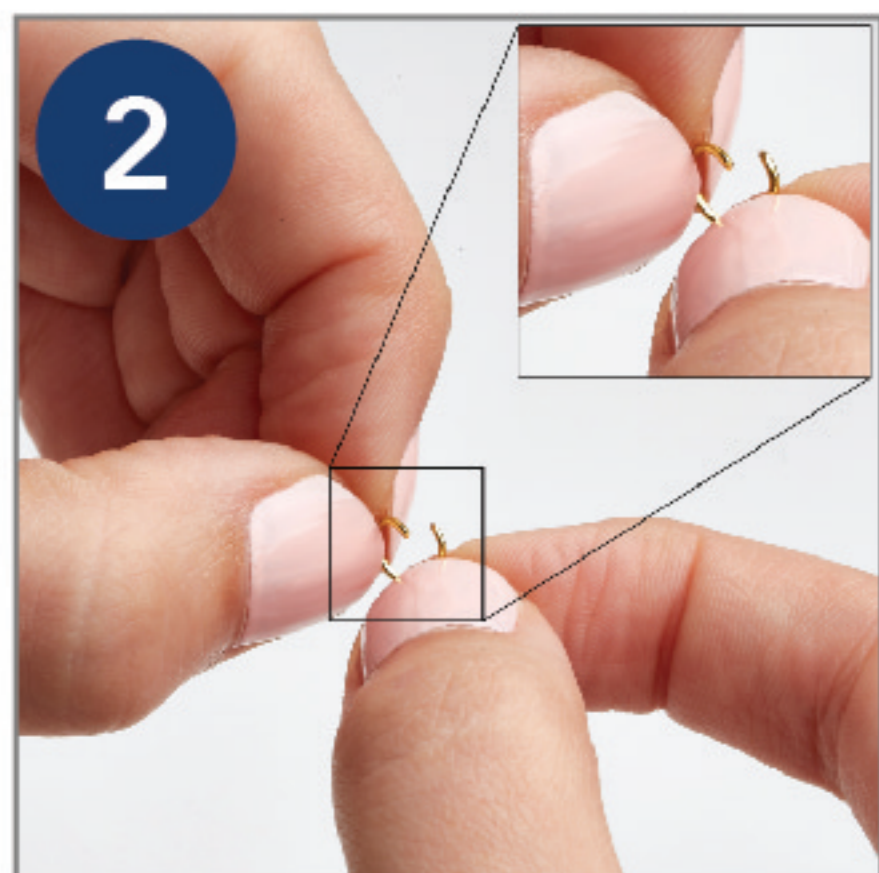

ATTACH. Add a jump ring to the top of your charm(s) by opening a ring with your fingers or pliers. Add this to the charm and close the jump ring.



THREAD. Thread each jump ring onto the cord.



KNOT. Bring the left cord end over the right. Tie a knot as shown. Tighten well.



KNOT & TRIM. Tie a knot in the other side as shown. Tighten well, and trim as needed.