



Ultimate Chicken Coop – Automatic Door Opener Assembly Instructions




Tools Needed:

1. 3/8" or 10mm Socket / Ratchet
2. 5/16" or 8mm Wrench
3. Ratchet
4. Phillips Screwdriver




Step 1: Remove Door Handle from Frame and Door

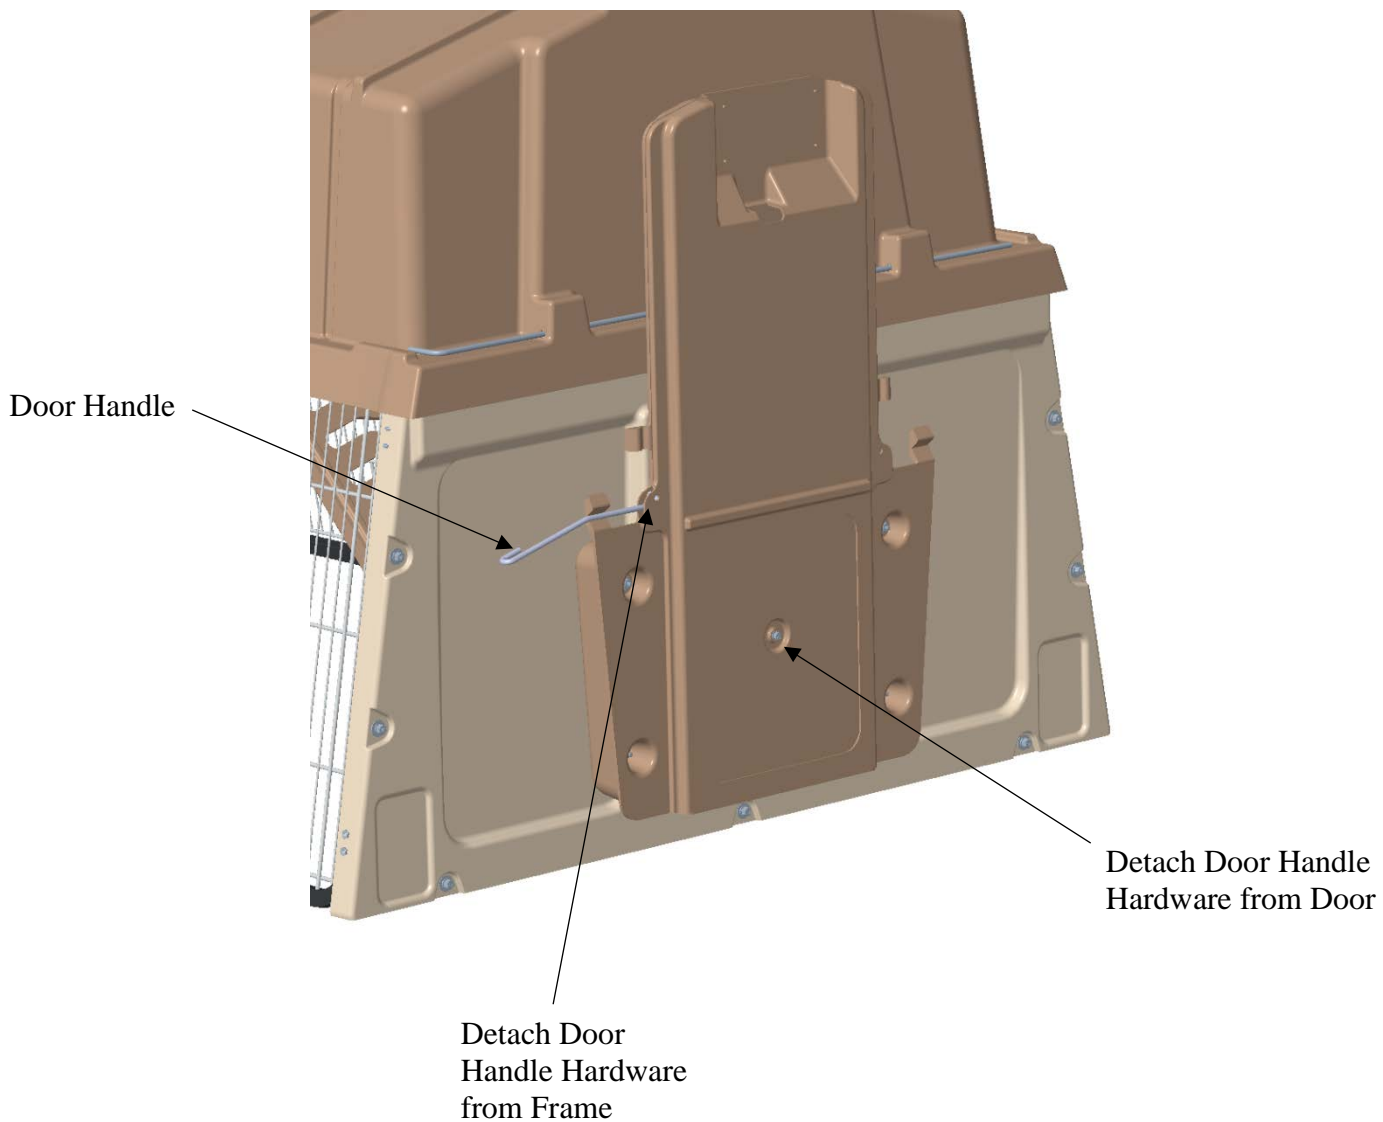



Step 2: Push Door all the way up so the hole in the top can be viewed through the notch in the frame

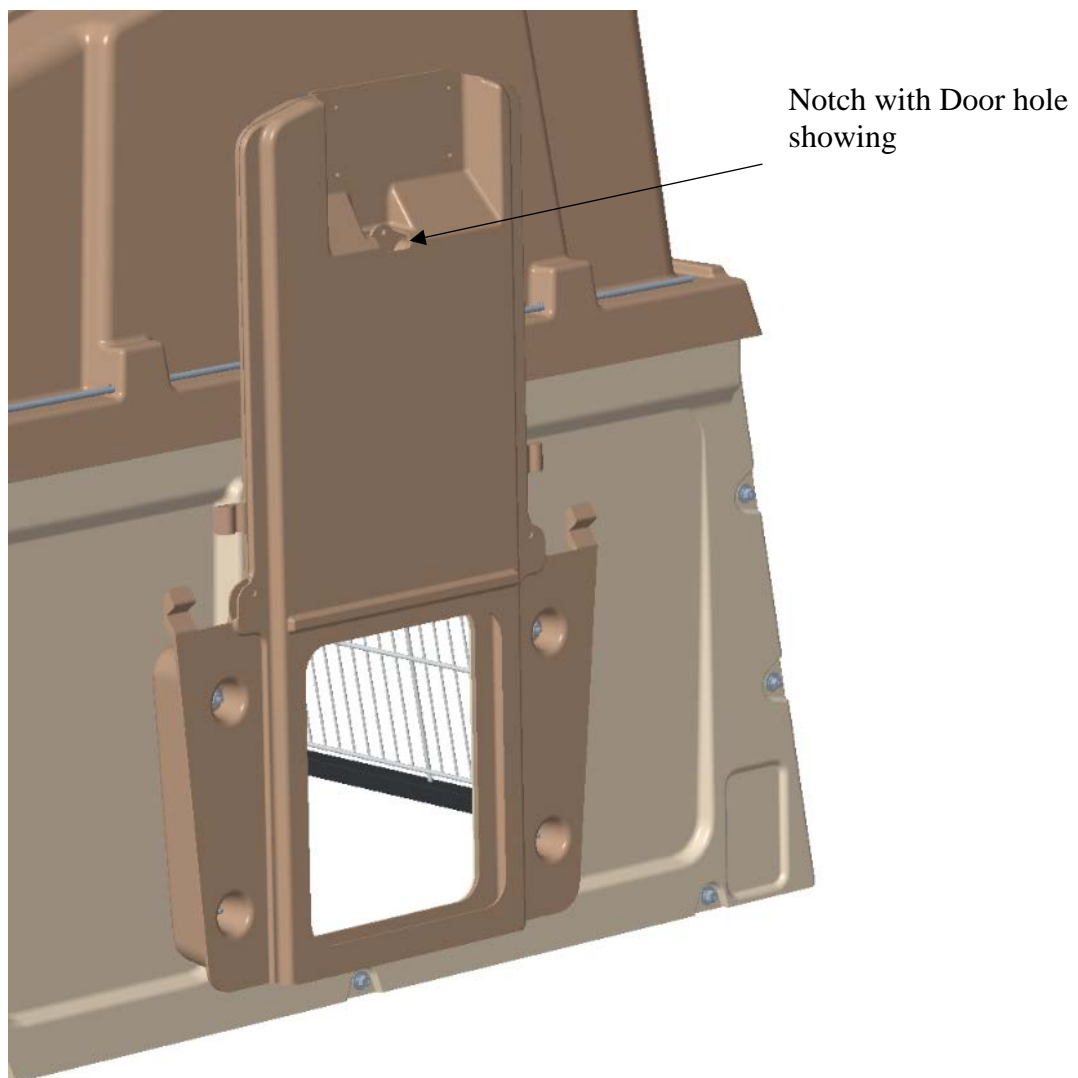



Step 3: Attaching string from Automatic Door Opener to the door and attach Door Opener to the door with screws included. Program the door opener as instructed.

