


PLASTIC GARDEN SHED 5x3FT

Instructions for Assembly

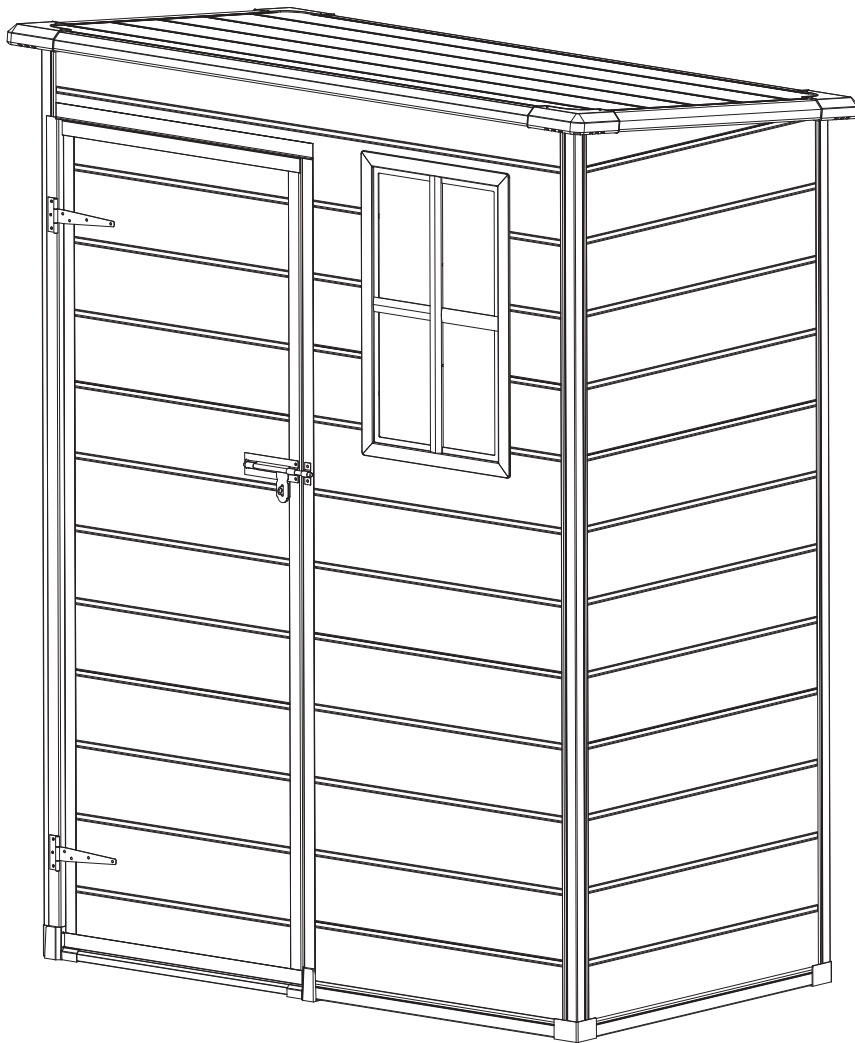


WARNING



Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | PREPARACIÓN DEL LUGAR | VORBEREITUNG DES AUFSTELLUNGSORTES | VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | PREPARAÇÃO DO LOCAL


Level the ground surface | Nivelez la surface du sol | Nivele la superficie del suelo | Ebenen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivele a superfície do solo

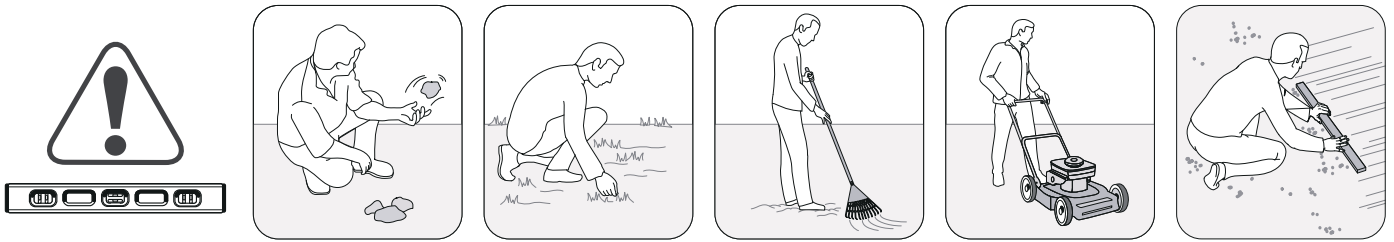

Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação

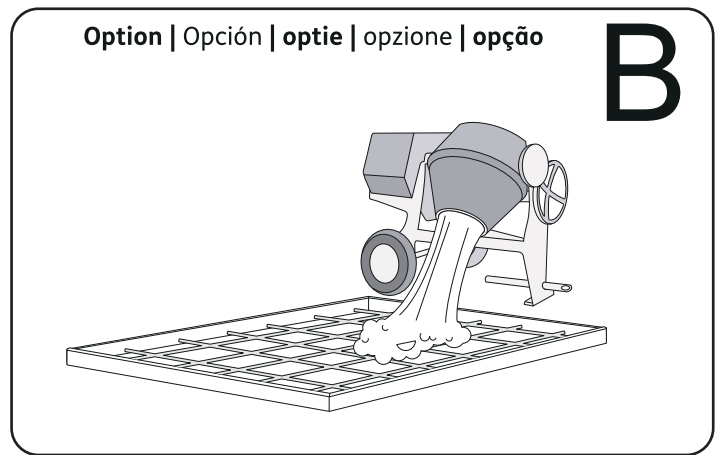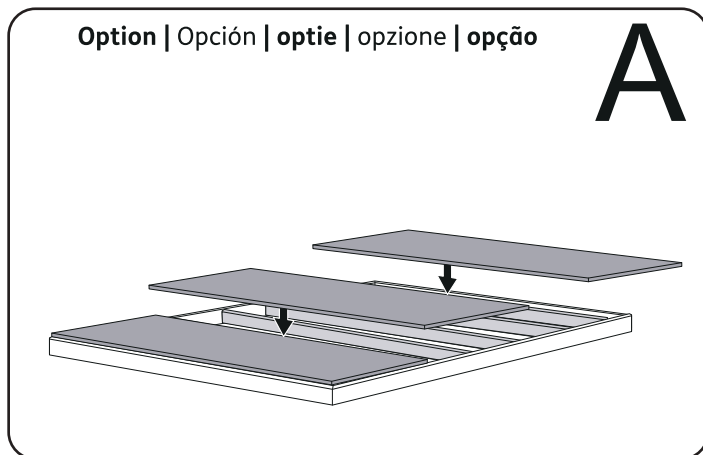

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:

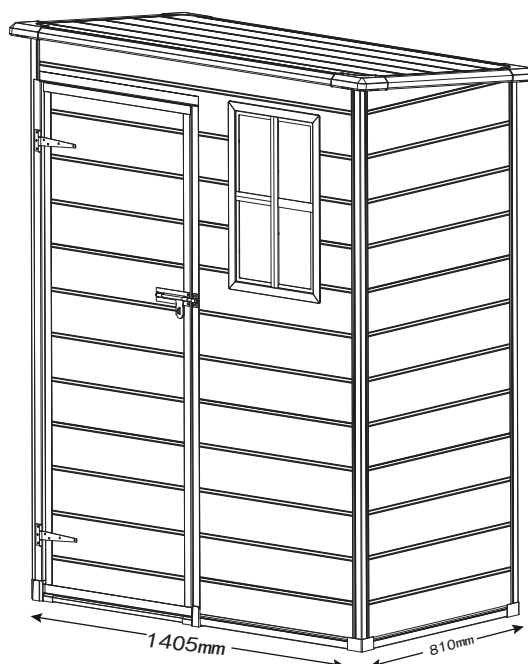

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | ANTES DE EMPEZAR EL ARMADO | VOR MONTAGEBEGINN | VOORDAT U BEGINT TE MONTEREN | PRIMA DI INIZIARE L'ASSEMBLAGGIO | ANTES DE INICIAR A MONTAGEM

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze opeen schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizzarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | HERRAMIENTAS NECESARIAS | BENÖTIGTE WERKZEUGE | BENODIGD GEREEDSCHAP | ATTREZZATURA OCCORRENTE | FERRAMENTAS NECESSÁRIAS



SPATULA | SPATULE | ESPÁTULA | SPACHTEL | SPATEL | SPATOLA | ESPÁTULA

- Use spatula (part "SG8") for easier insertion of panel into profile.
- Utilisez la spatule (partie "SG8") pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza "SG8") para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung "SG8"), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça "SG8") para facilitar a inserção do painel no perfil.
























































SG8 x2




ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | SE NECESITAN DOS PERSONAS PARA ARMARLO | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | MONTAGE VEREIST TWEE PERSONEN | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | A MONTAGEM EXIGE DUAS PESSOAS

PARTS LIST


NO.	PART.	Qty.
AW1-1		6
AW1-2		1
AW1-3		1
AW2-1		1
AW2-2		1
AW2-3		1
AW3-1		3
AW3-3		1
AD1-1		1
AD1-2		1
AD1-3		1
AR1-1		1
SG12		1
AP1		1
AP2		2
AP3		2
AP4		1
AP5		1
AA3		1
AA1R		1
AAP1		1
AA2R		1
AA2L		1
AA4		1
AS1		1
AR1-2		1
AF1-2		1

NO.	PART.	Qty.
AF1-1		1
SG10		1
SG101		1
M01		2
M03-6R		1
M03-7		1
M04		1
SG8		2
SG9		3
Drill		1
Z410		53
Z420		106
ZW413		18
AP7		1
AP8		2
AP9		2
SG7-2		1
SG7-3		1
SG11		1
SG2		4
SG6		3
SG102		2
SG103		2
SG14		2
SG15		2
AS2		1


- Use spatula  (part "SG8") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing




Floor Assembly

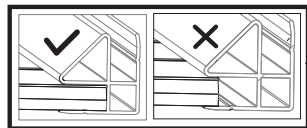

- Fully fit the panel inside the profile

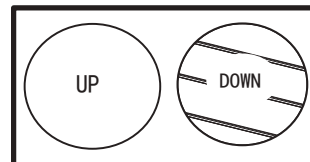


- Note: The crease line of the floor must be underneath

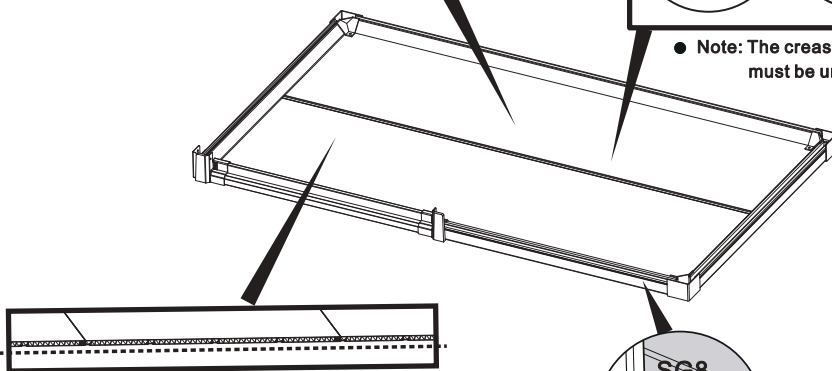



- The floor panels must be straight

- Use spatula  (part "SG8") for easier insertion of panel into profile


Step 1

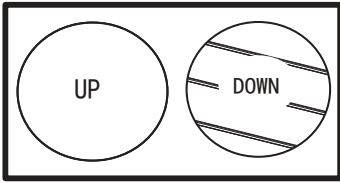



● Grain should be down

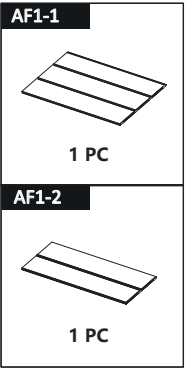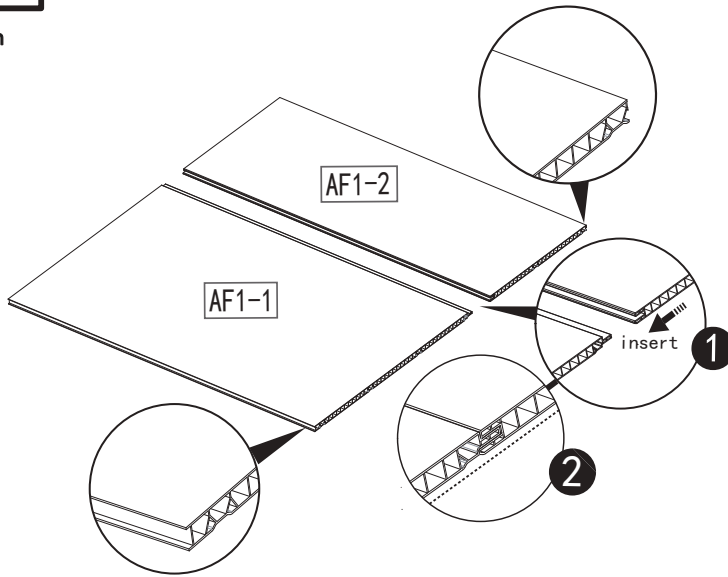




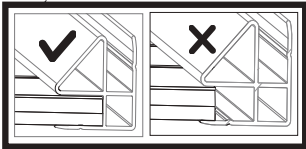


Step 2

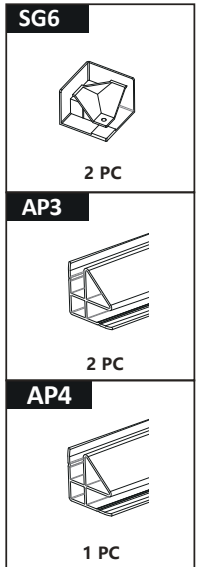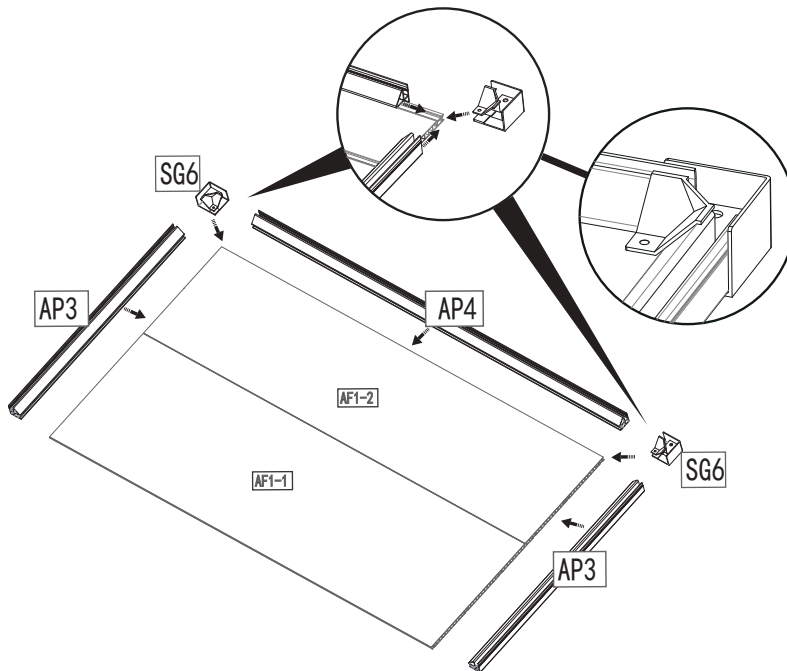


● Fully fit the panel inside the profile




Step 3



SG6  1 PC	AP5  1 PC
SG7-2  1 PC	AP7  1 PC
SG7-3  1 PC	
	

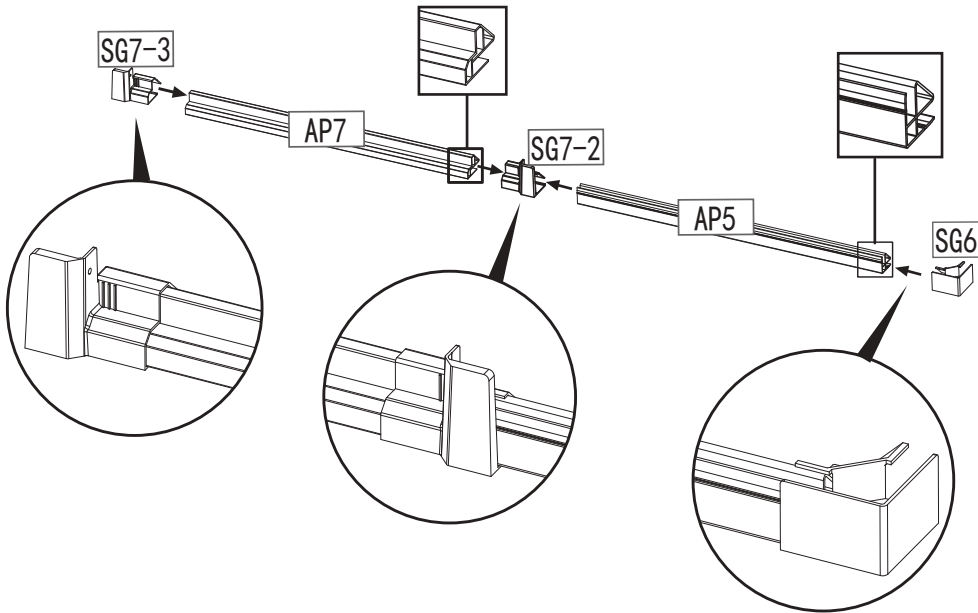

Step 4

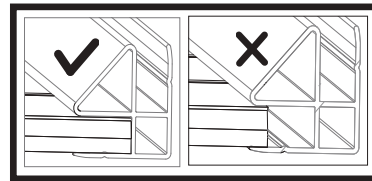

● Fully fit the panel inside the profile

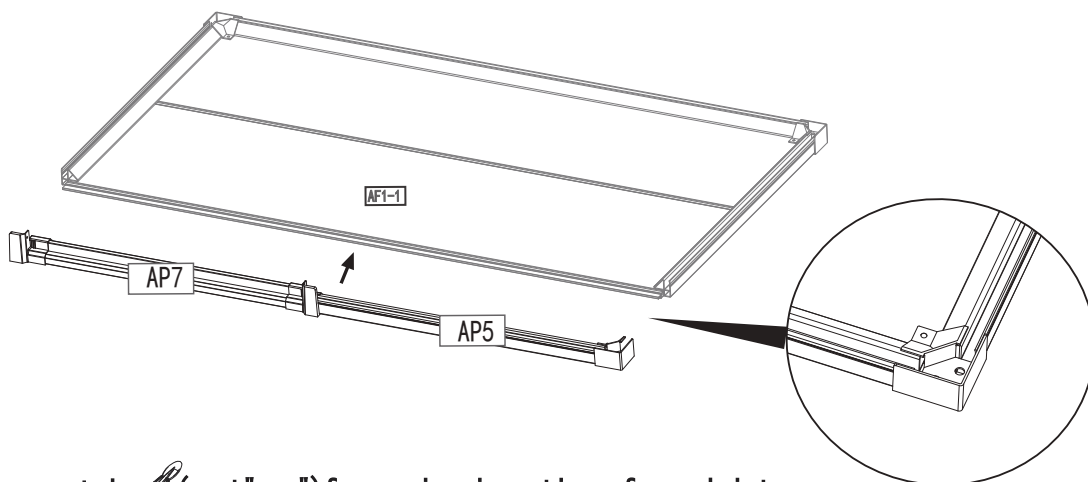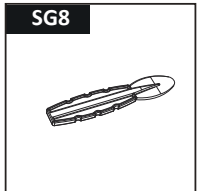



● Use spatula  (part "SG8") for easier insertion of panel into profile

Step 5

Z410




3 PC

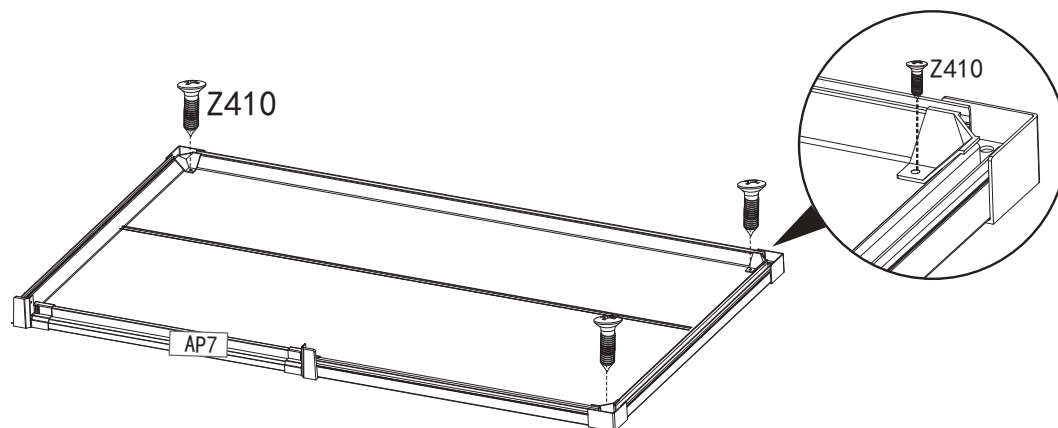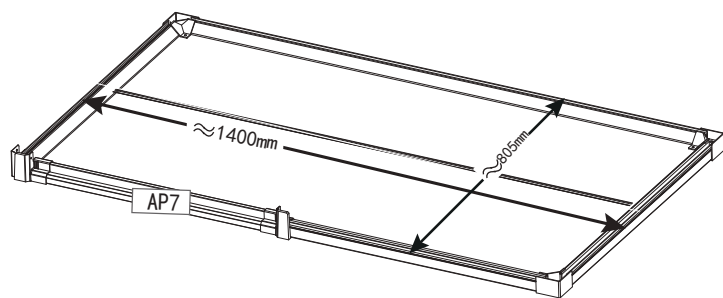


Step 6

● Turn over the floor panel

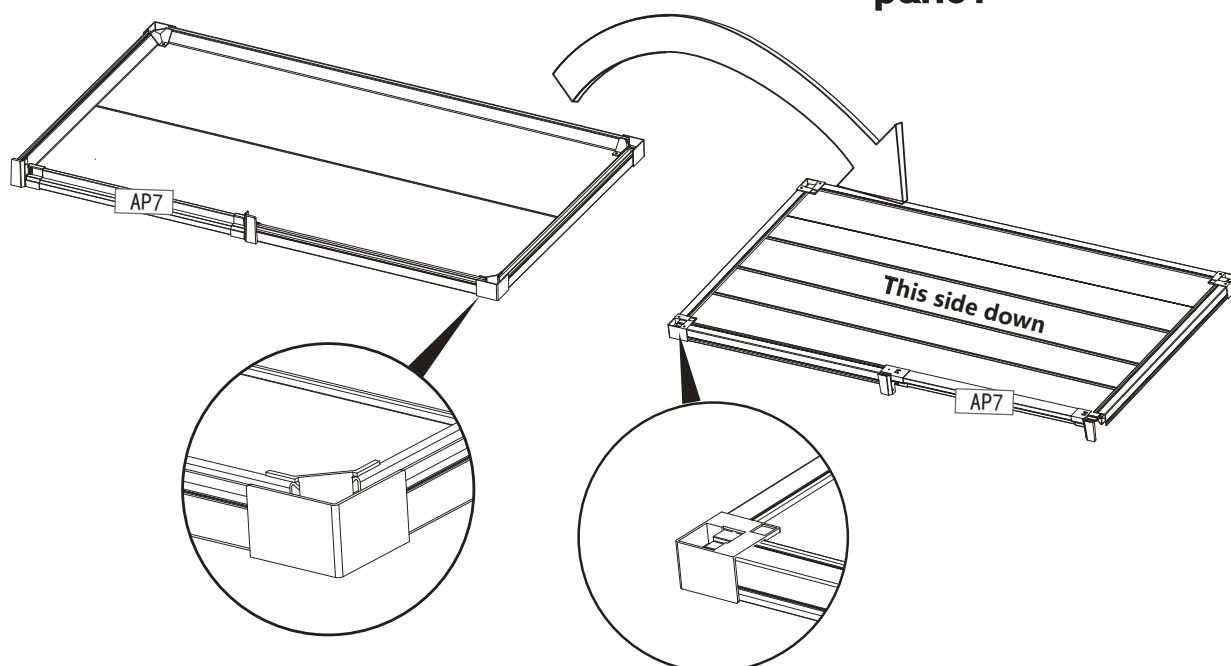


Step 7

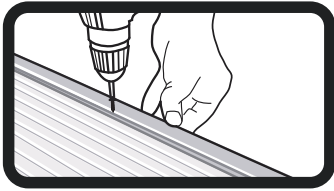

● Nail along the marked line on profile

Caution:


Please use Drill  to predrill a hole at depth 1mm before screw.




Z420



8 PC

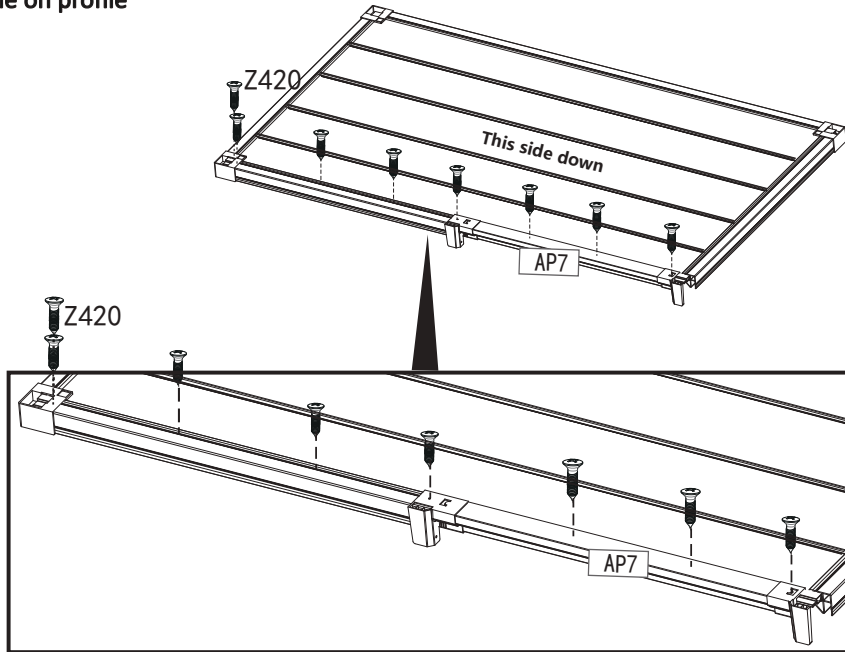


Step 8

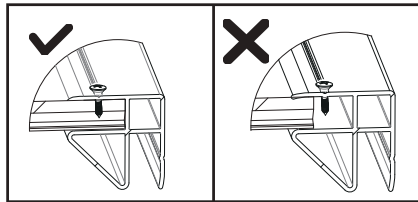

● Fully fit the panel inside the profile;
then screw on mark line

Caution:


Please use Drill  to predrill a hole at depth 1mm before screw.




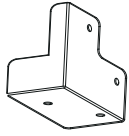
Z420




11 PC

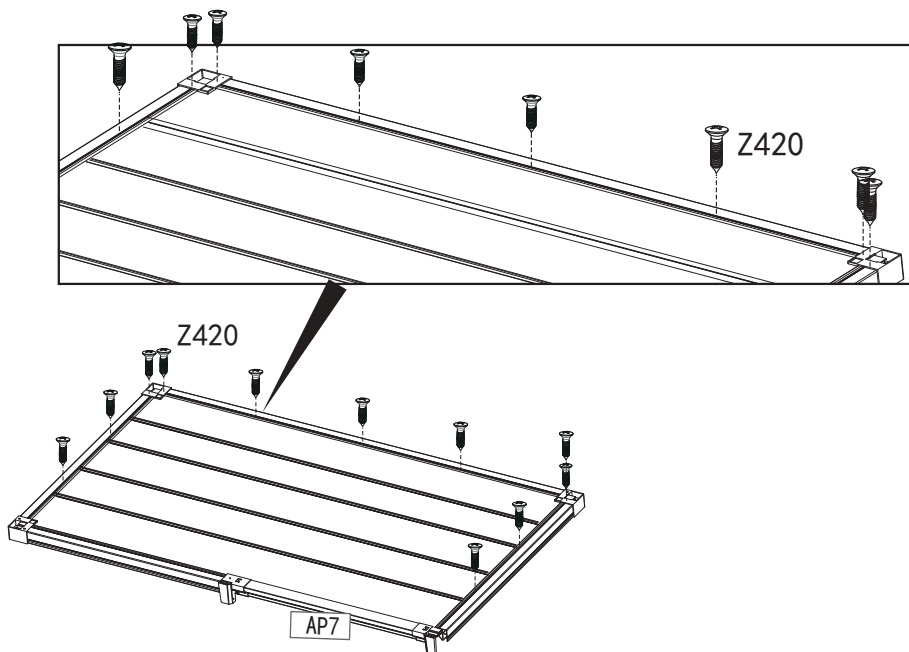


Step 9

Z420	SG11
	
2 PC	1 PC



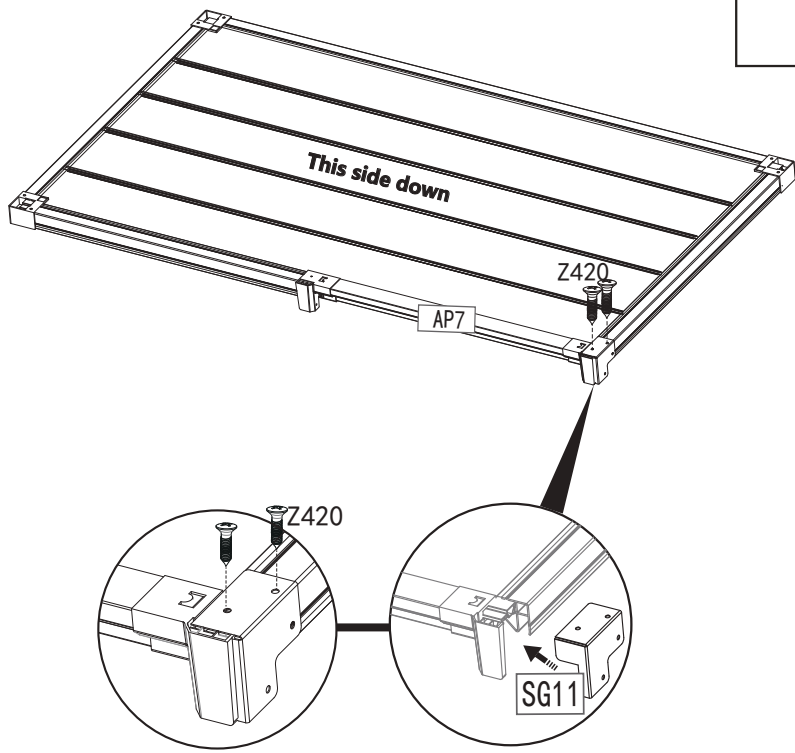


Step 10

● Turn over the floor panel




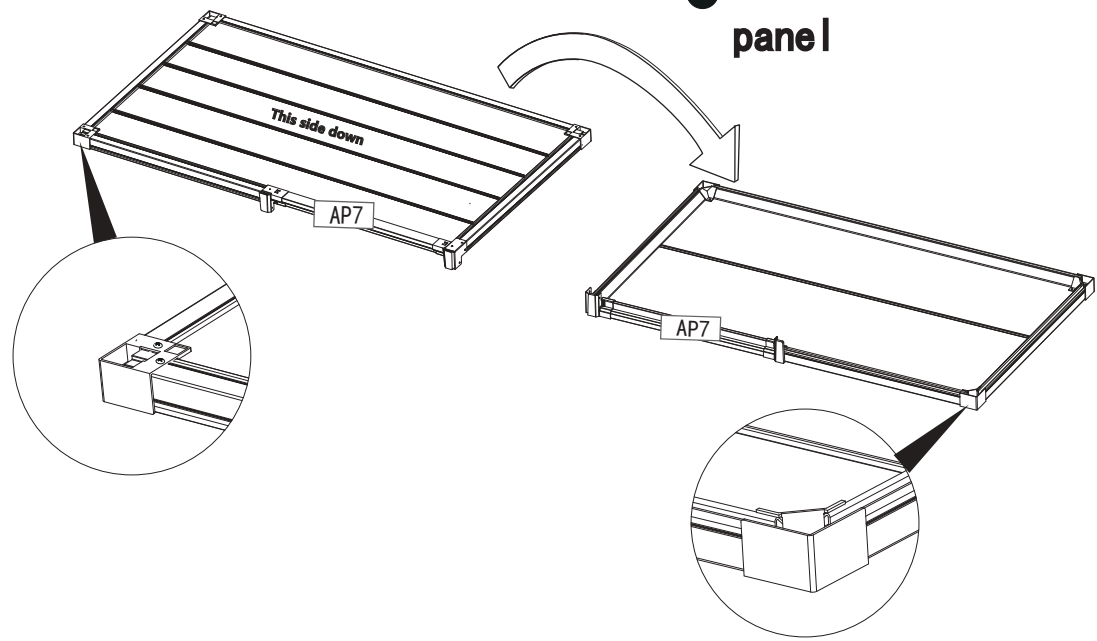


Wall Assembly

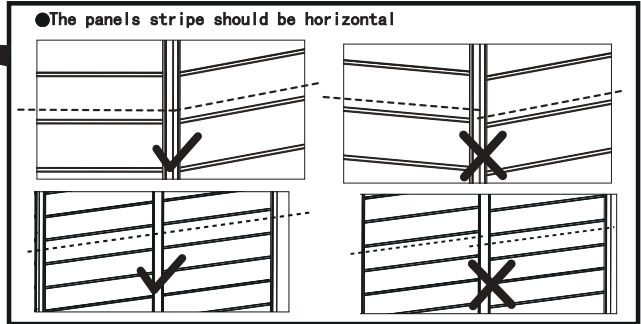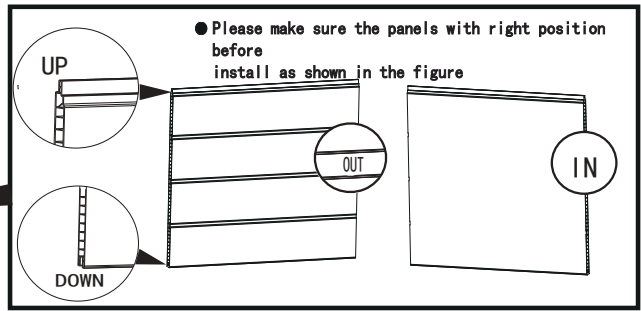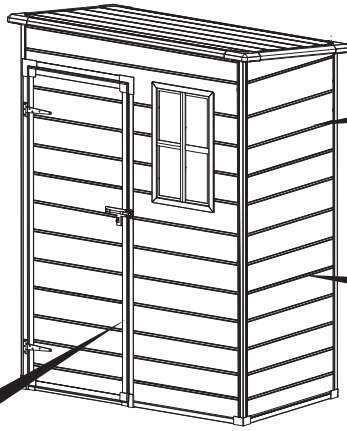


● Use spatula (part "SG8") for easier insertion of panel into profile



Step 11

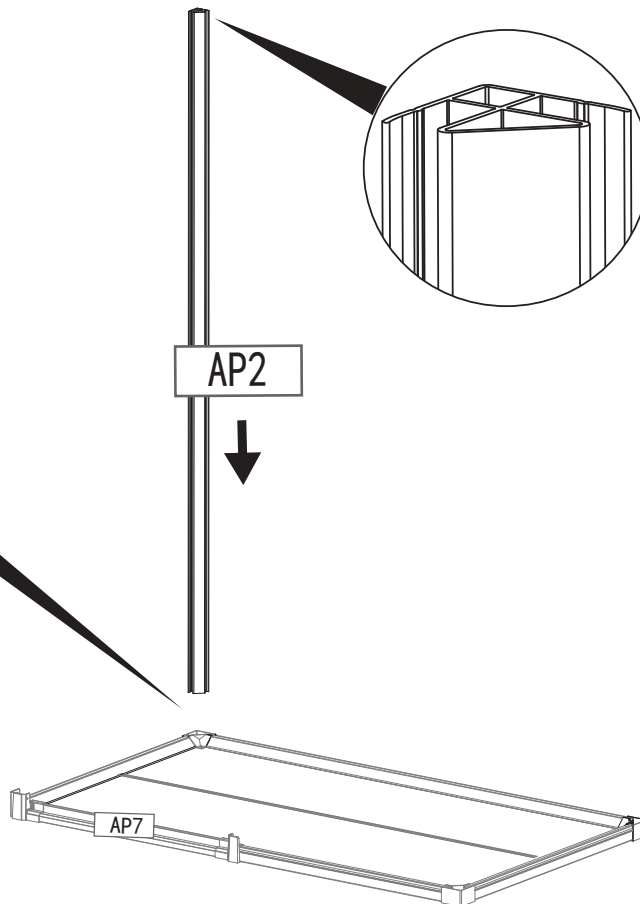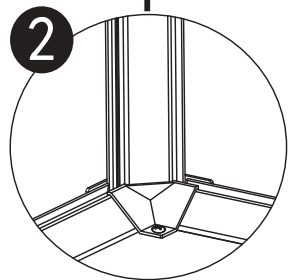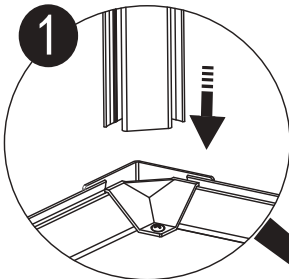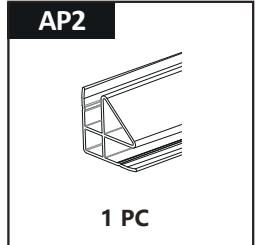



Step 12

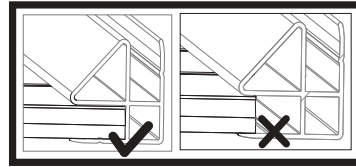


● Fully fit the panel inside the profile

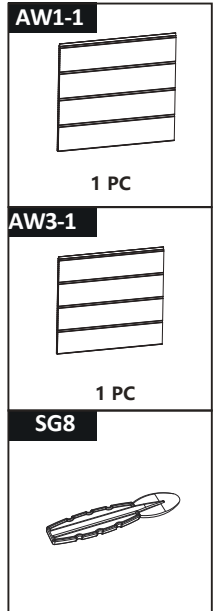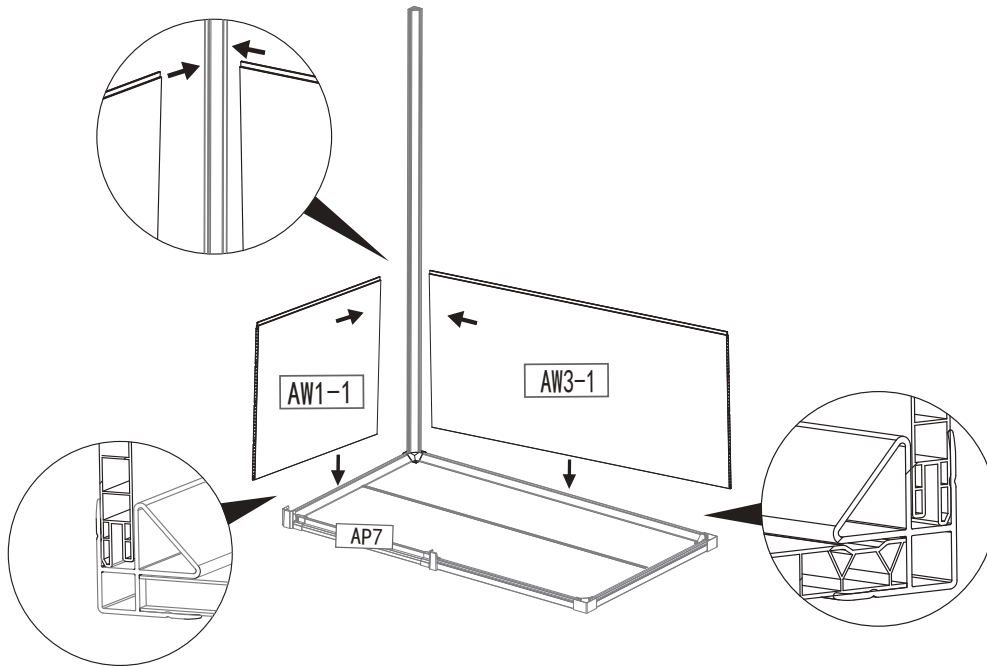



Step 13

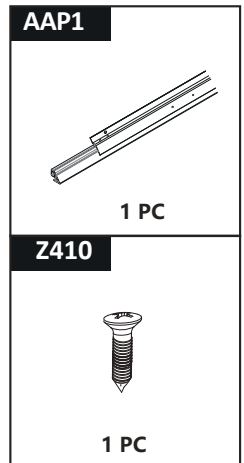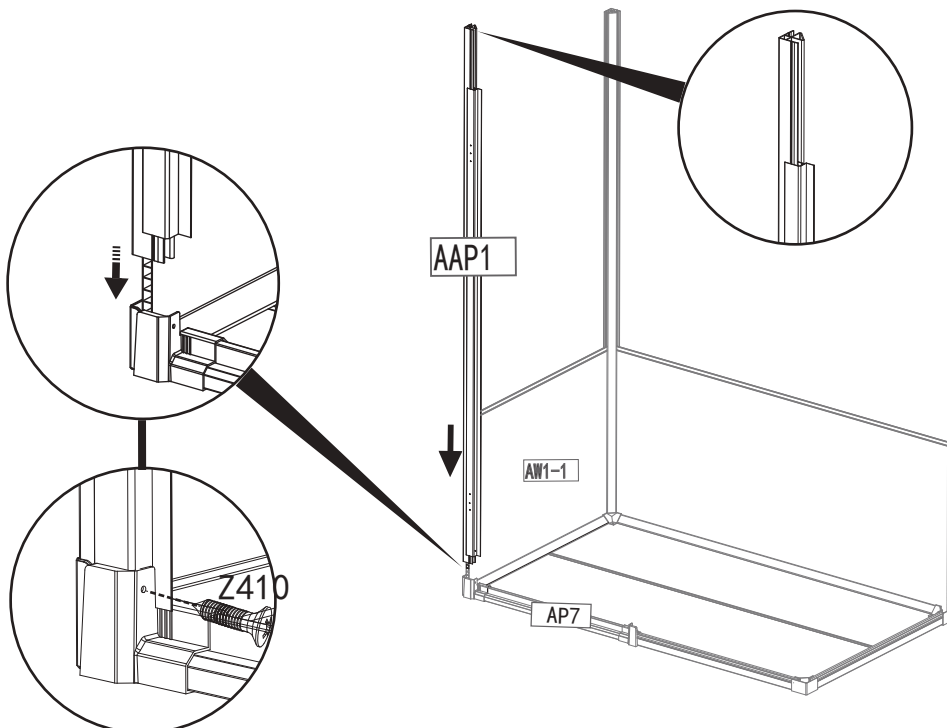



Step 14

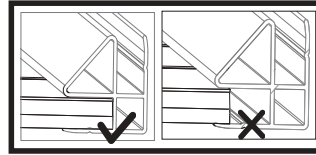


● Fully fit the panel inside the profile

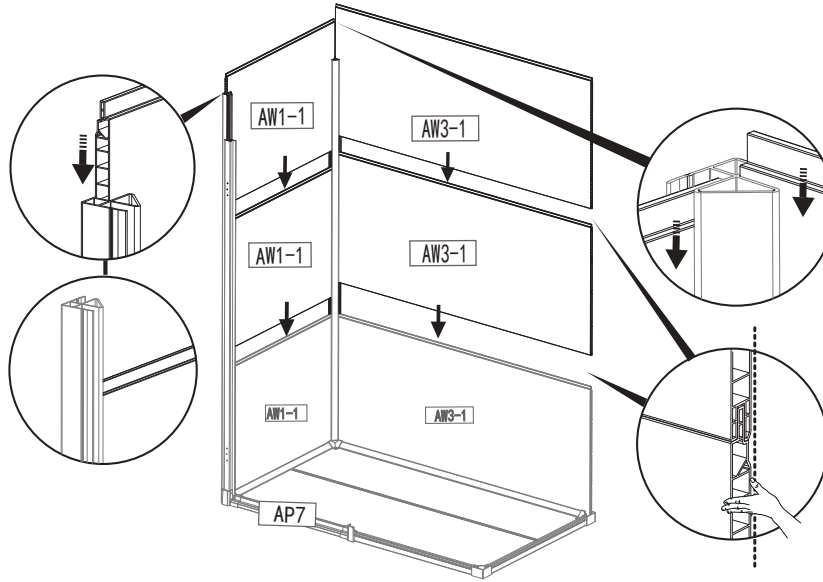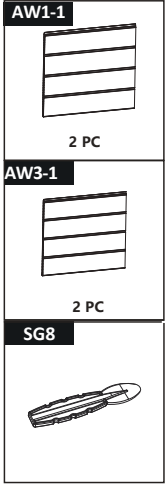


Step 15


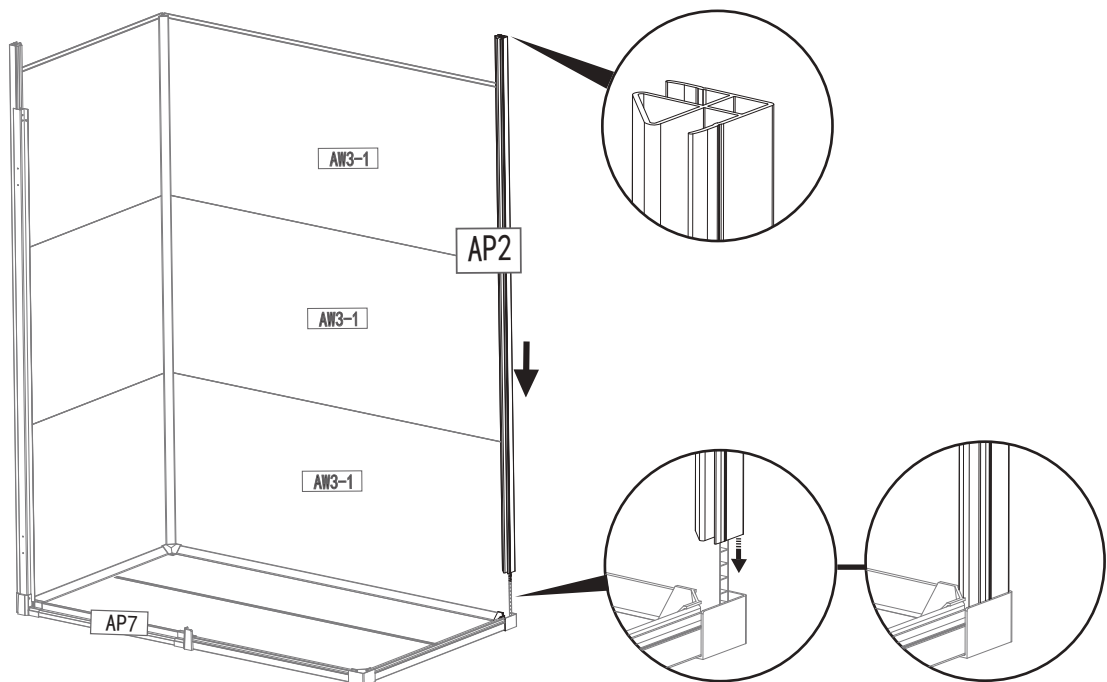
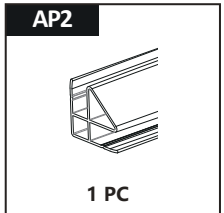


Step 16

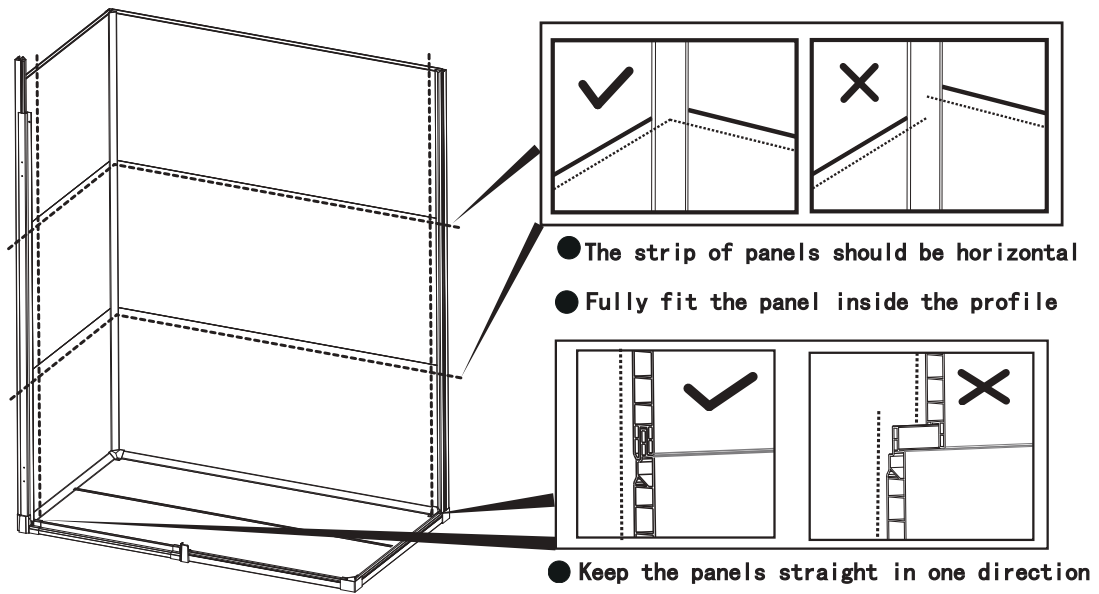

Step 17

Caution:
Please use Drill  to predrill
a hole at depth 1mm before screw.

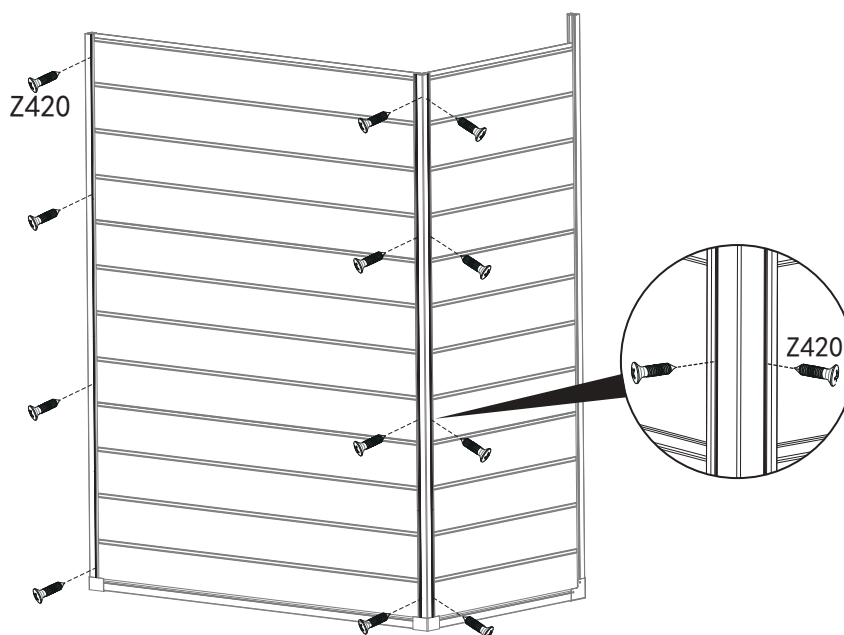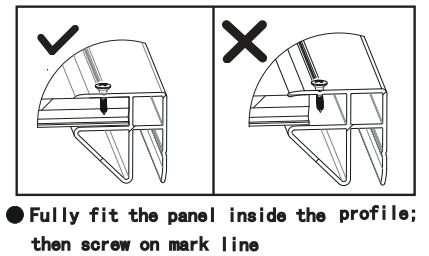


Z420



12 PC

Step 18

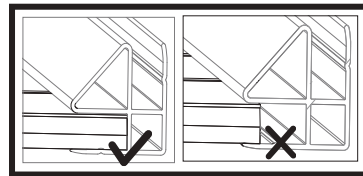


● Fully fit the panel inside the profile

AW1-1




1 PC

SG8

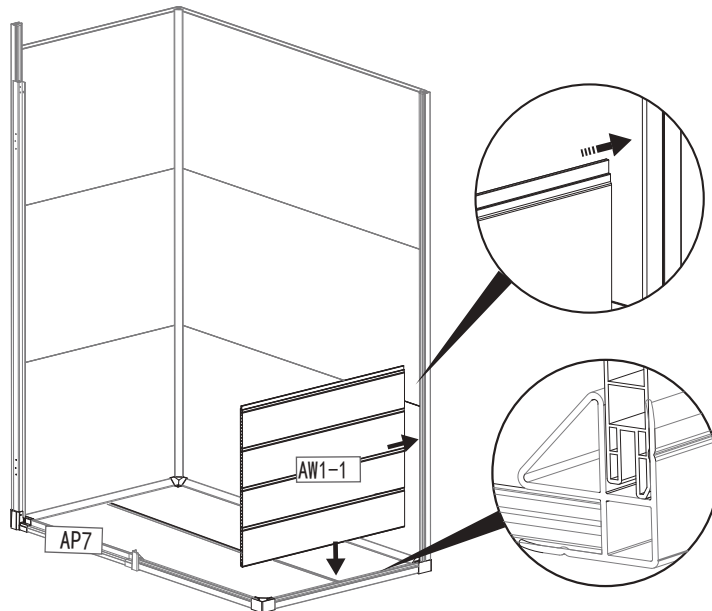

Step 19

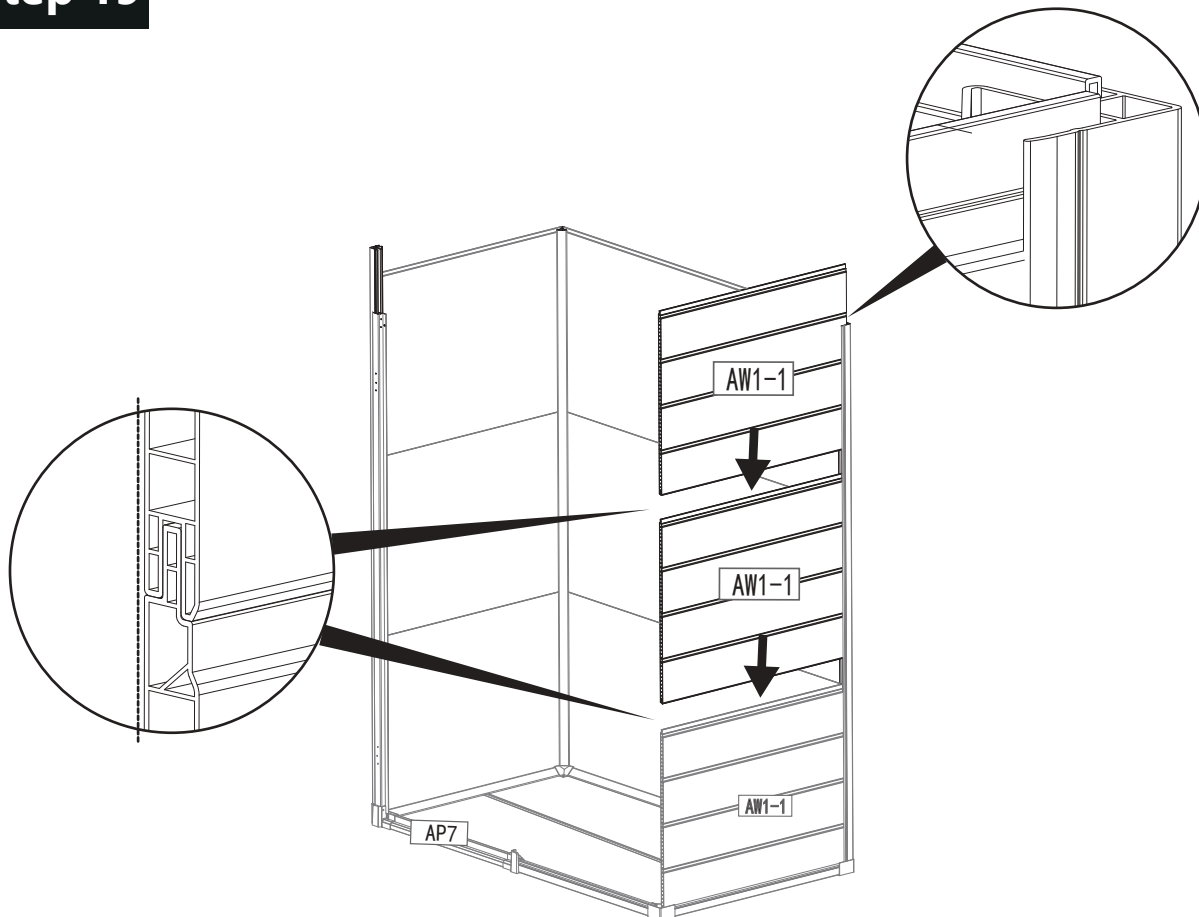


AW1-1





2 PC



SG8




Step 20

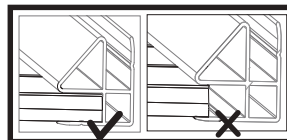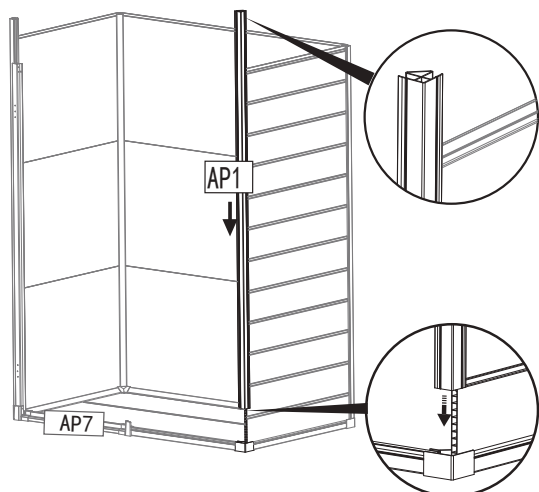

● Fully fit the panel inside the profile

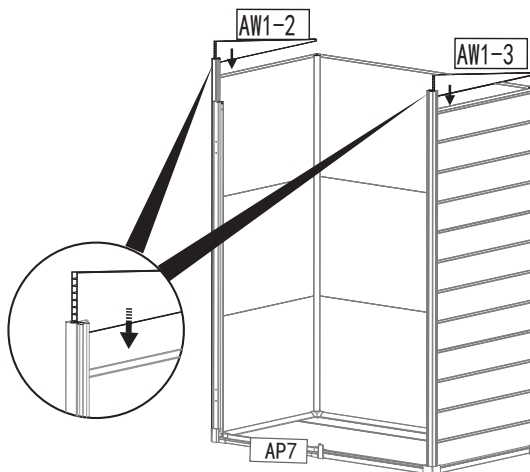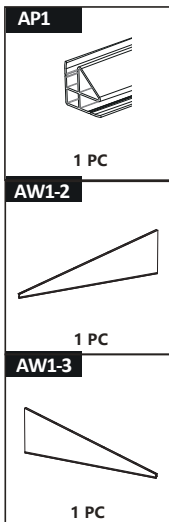


Step 21

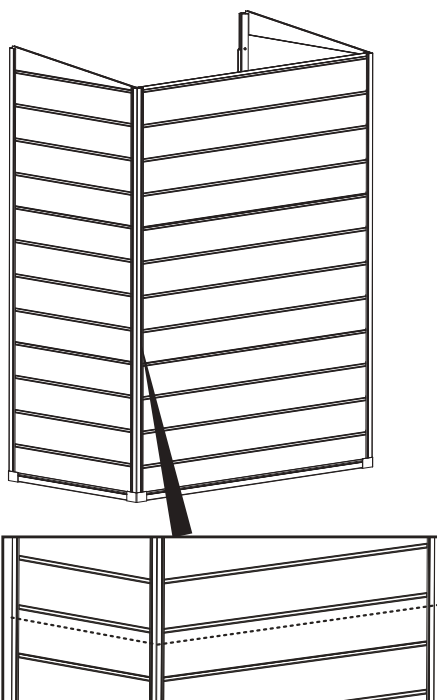



● The panels stripe should be horizontal

$$A B = C D$$

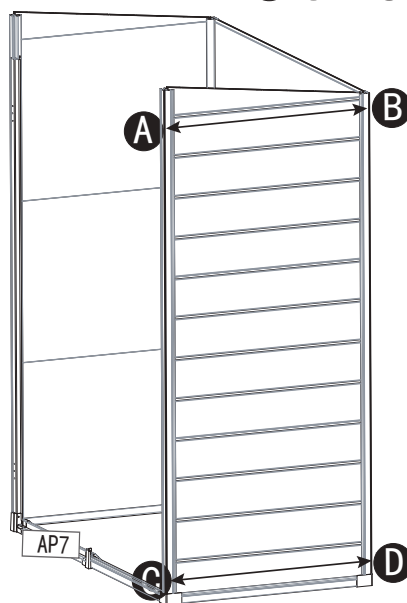

Step 22

Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.

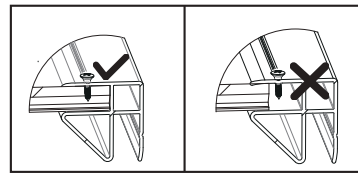


●Nail along the marked line on profile.

Z420




16 PC


●Fully fit the panel inside the profile

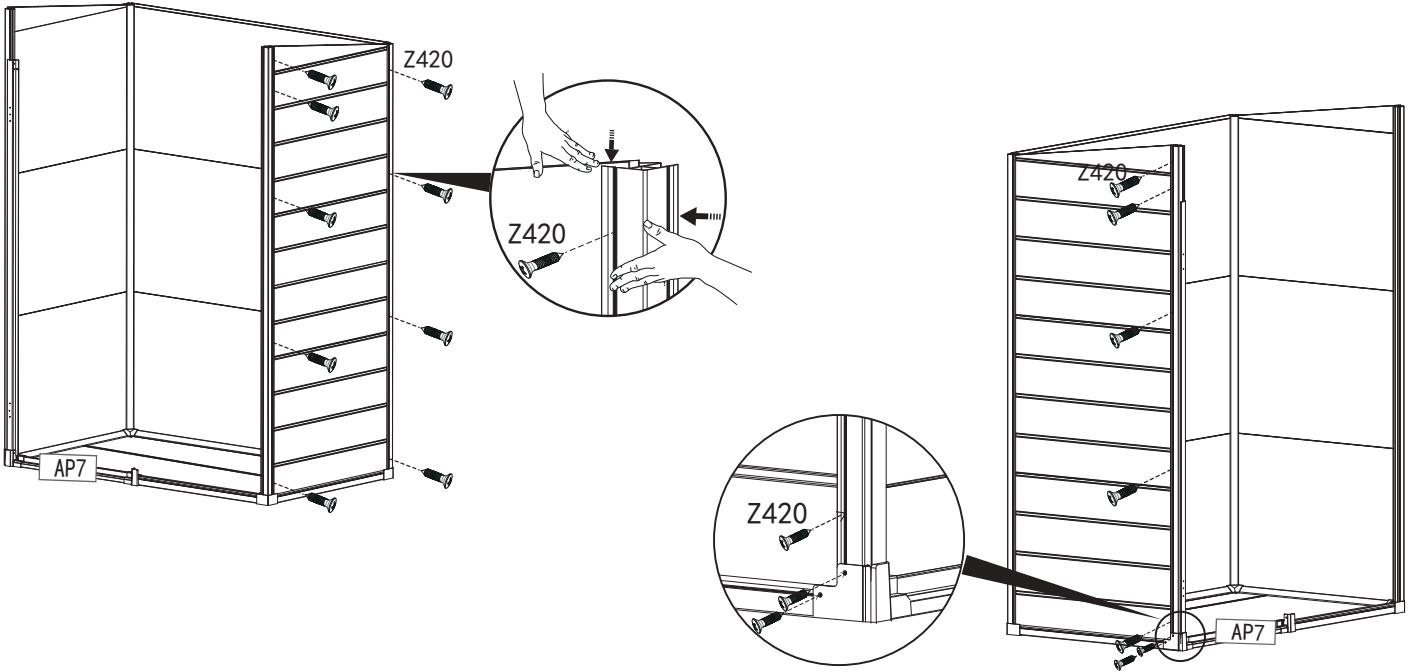

Step 23

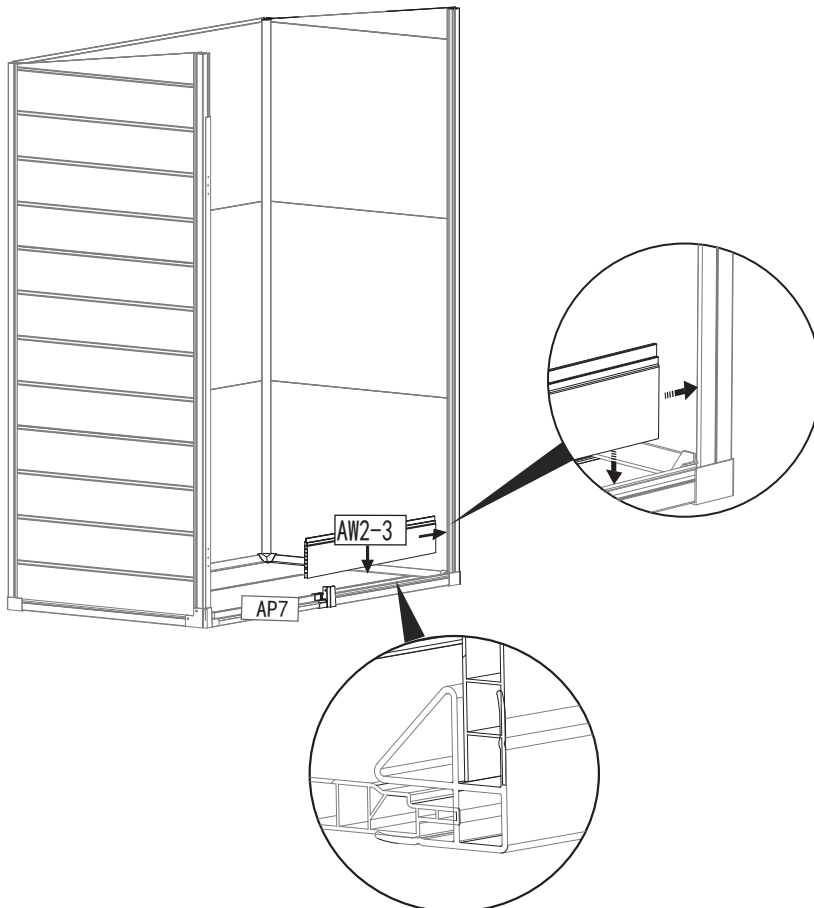


AW2-3




1 PC

SG8



Step 24

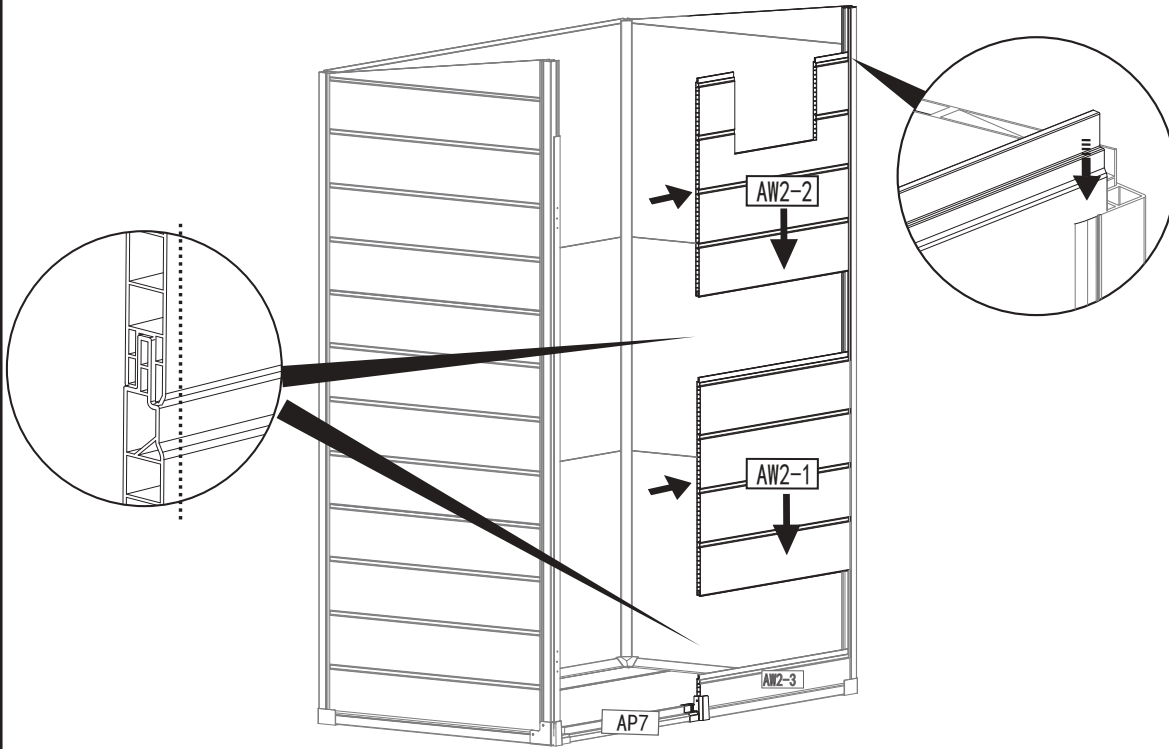


AW2-1



1 PC

AW2-2




1 PC


SG8



Step 25

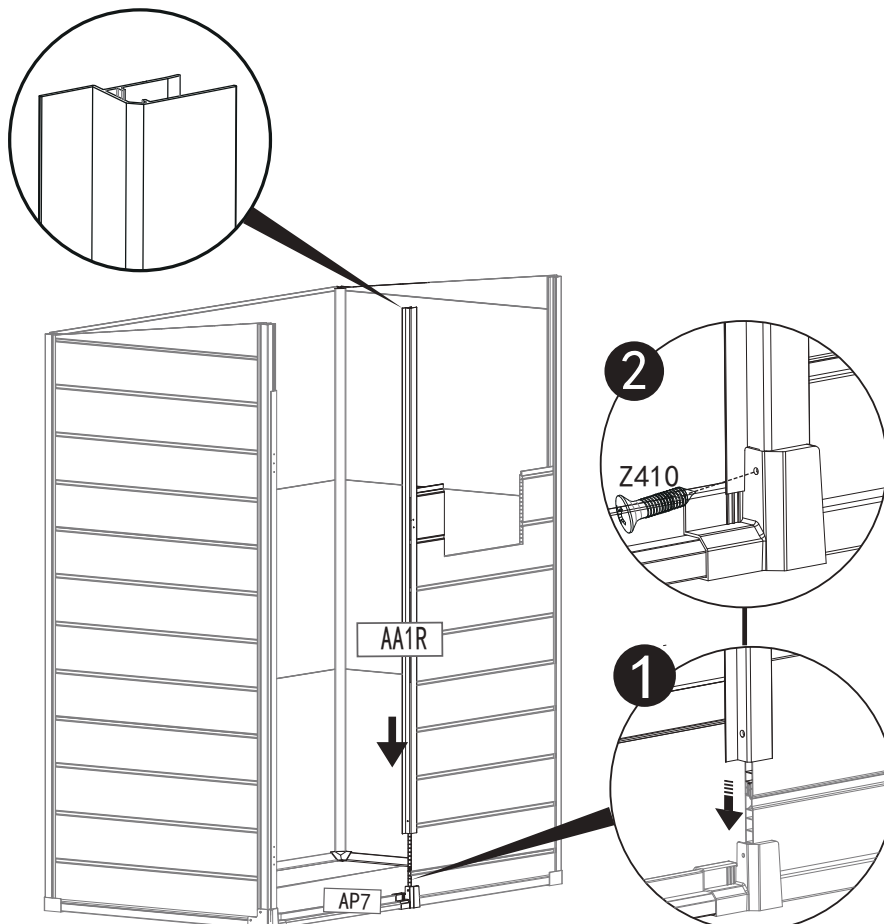

AA1R




1 PC

Z410




1 PC

Step 26

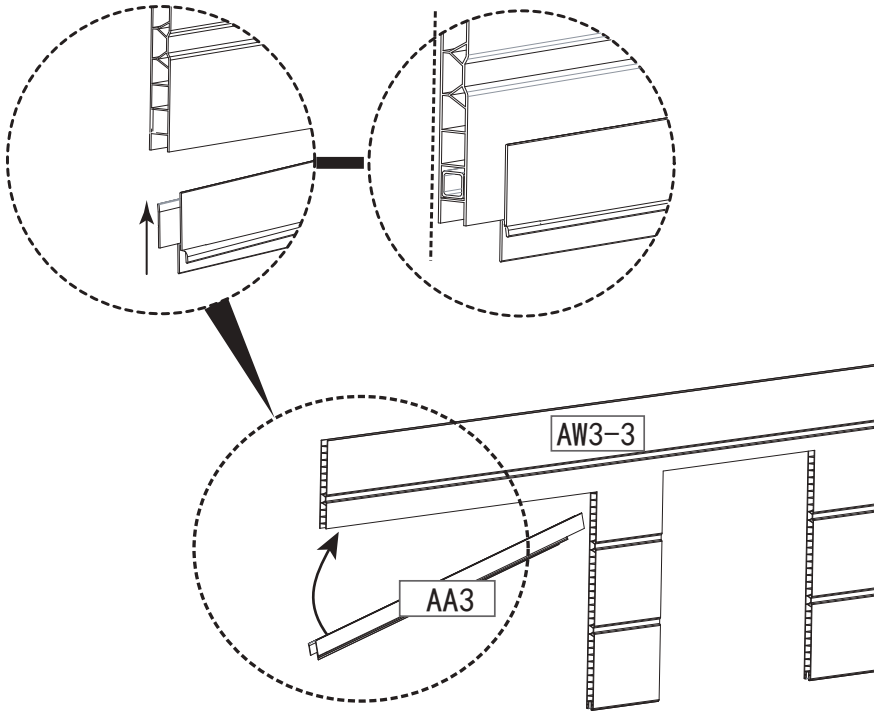


AW3-3

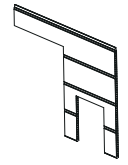


1 PC



AA3

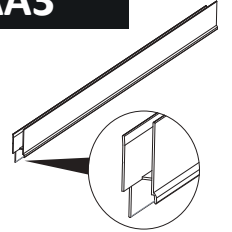



1 PC

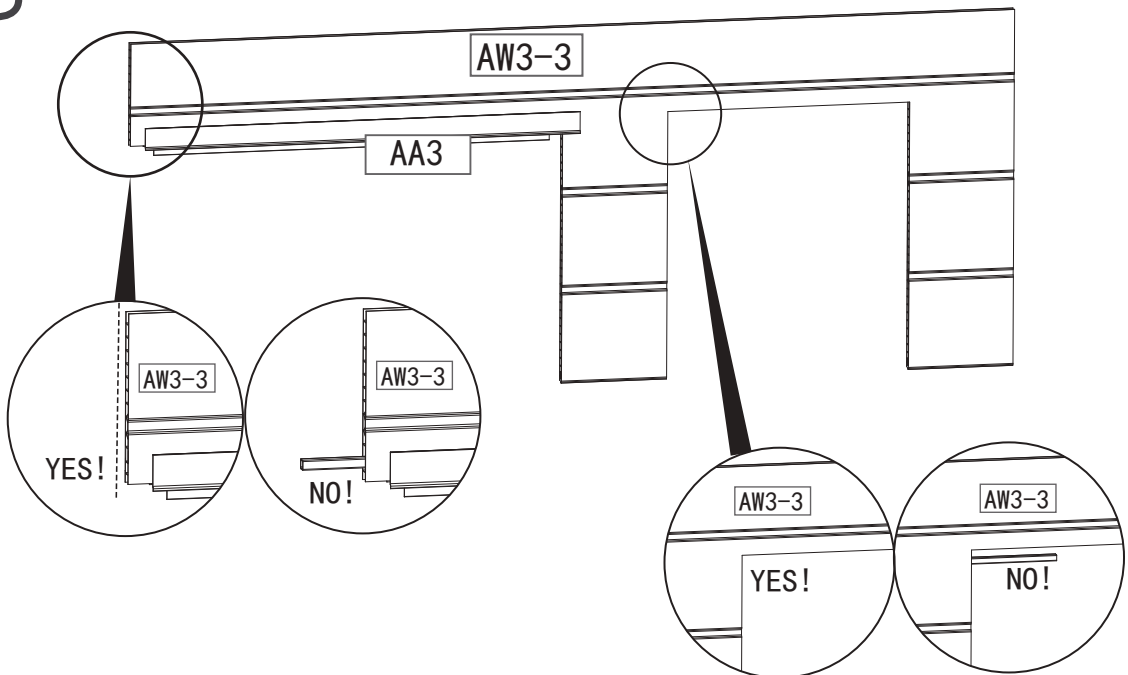





Step 27

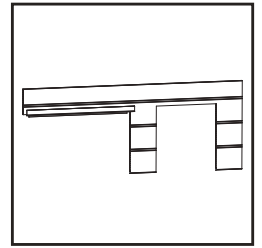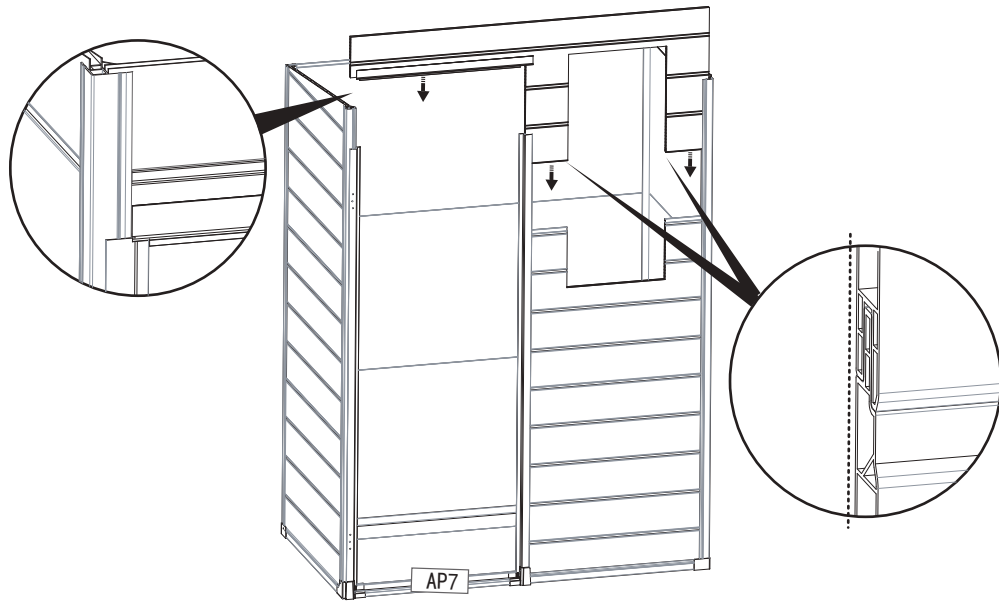


Step 28

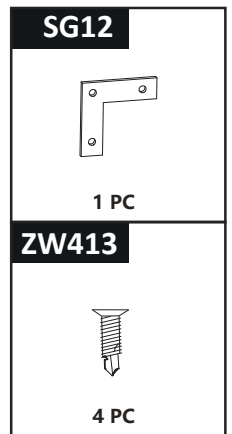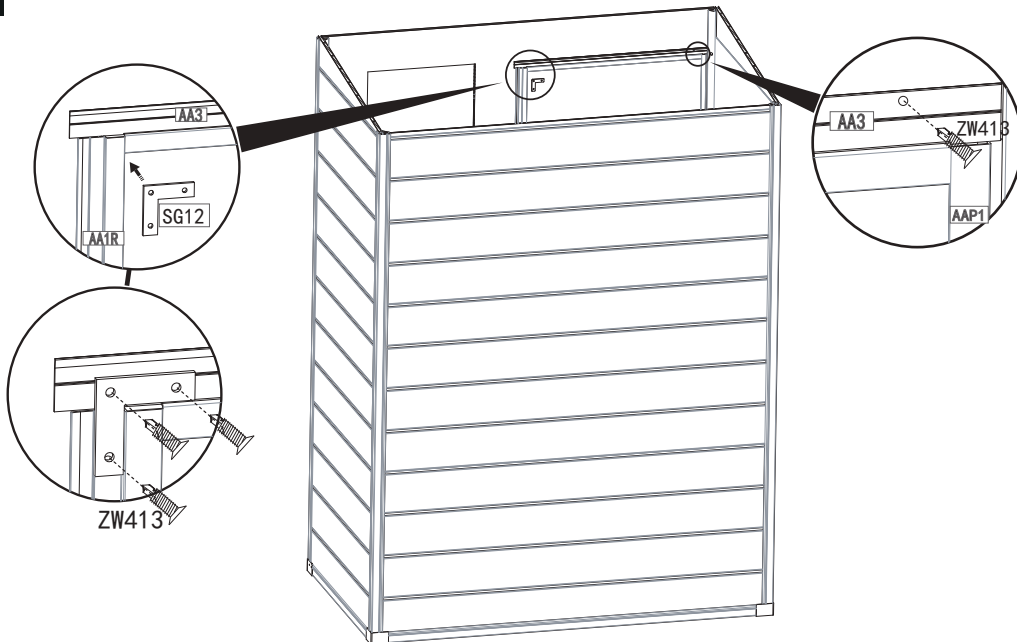

• fixation after aligning!

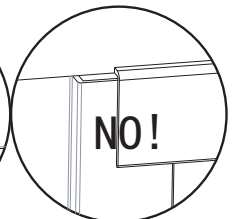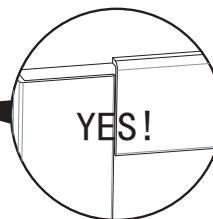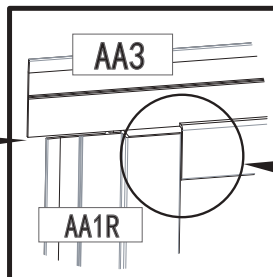
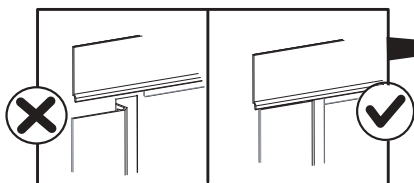


Step 29


Caution:
Please use Drill  to predrill
a hole at depth 1mm before screw.




A B = C D

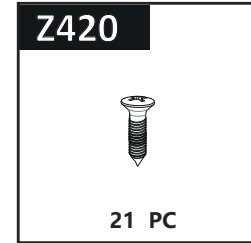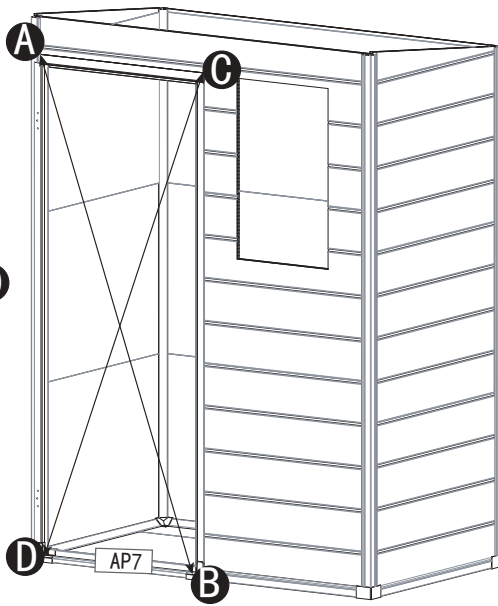



● Fully fit the panel inside the profile

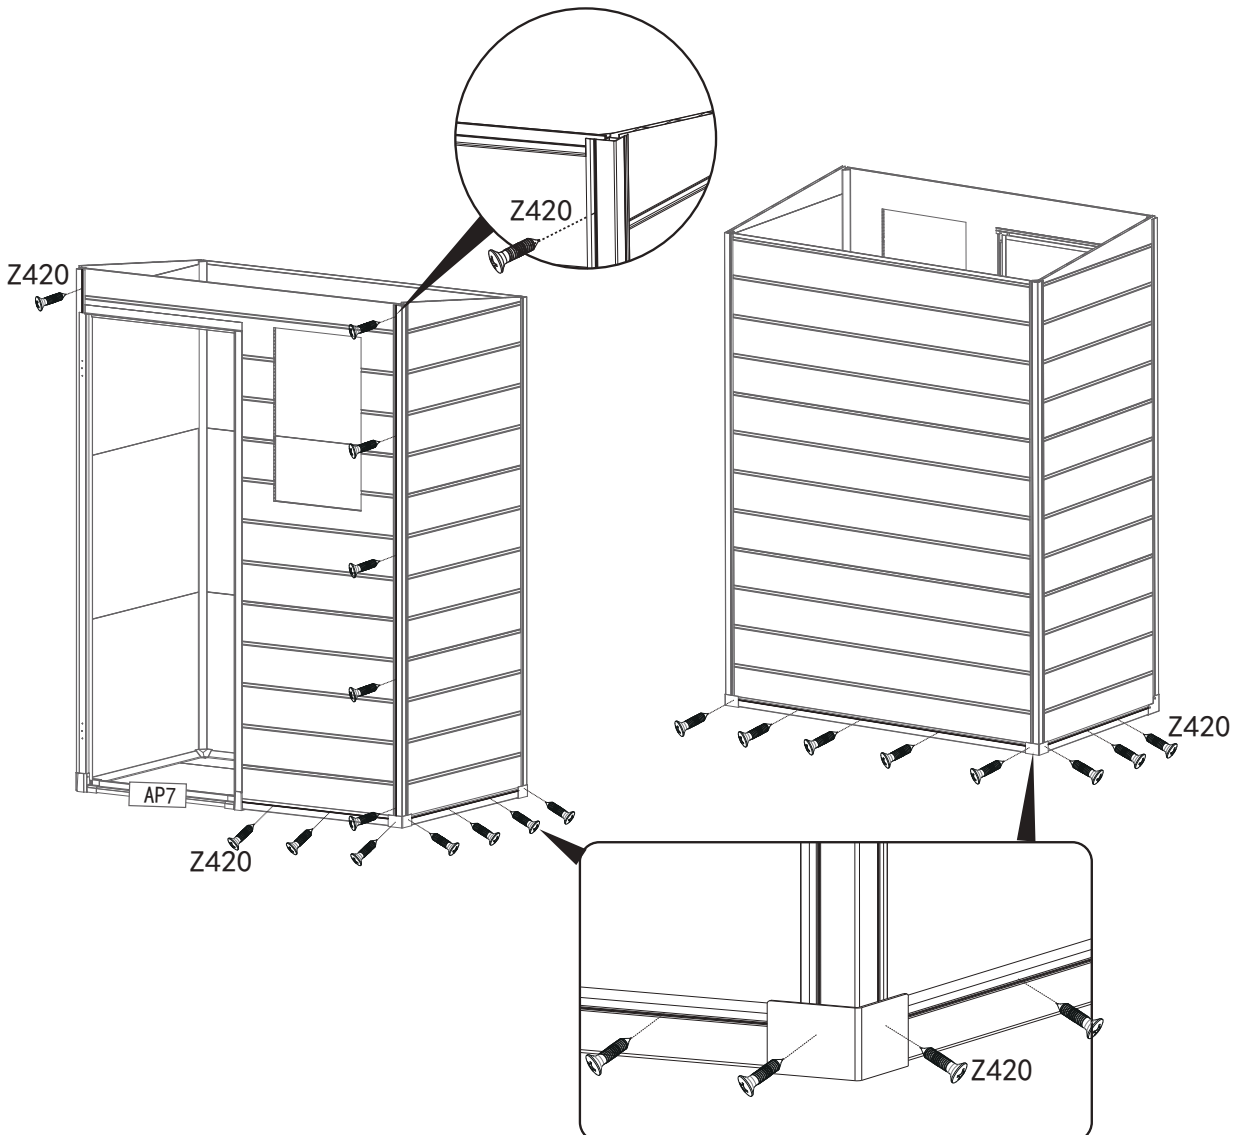


Roof Assembly



● The panels must be straight

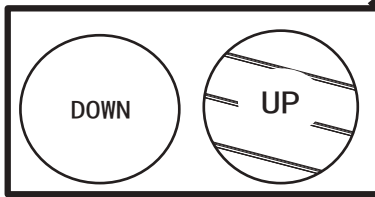
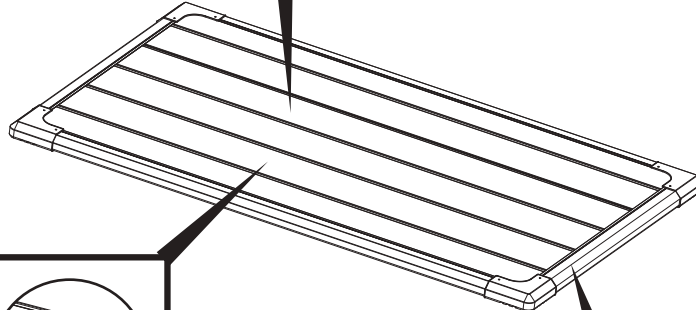


● The stripes should be upwards


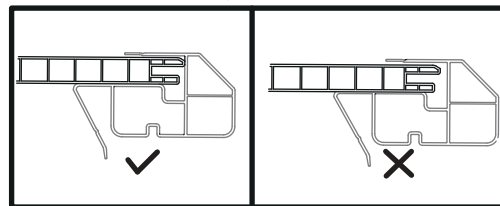


● Fully fit the panel inside the profile

Step 30

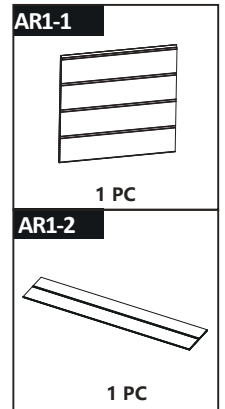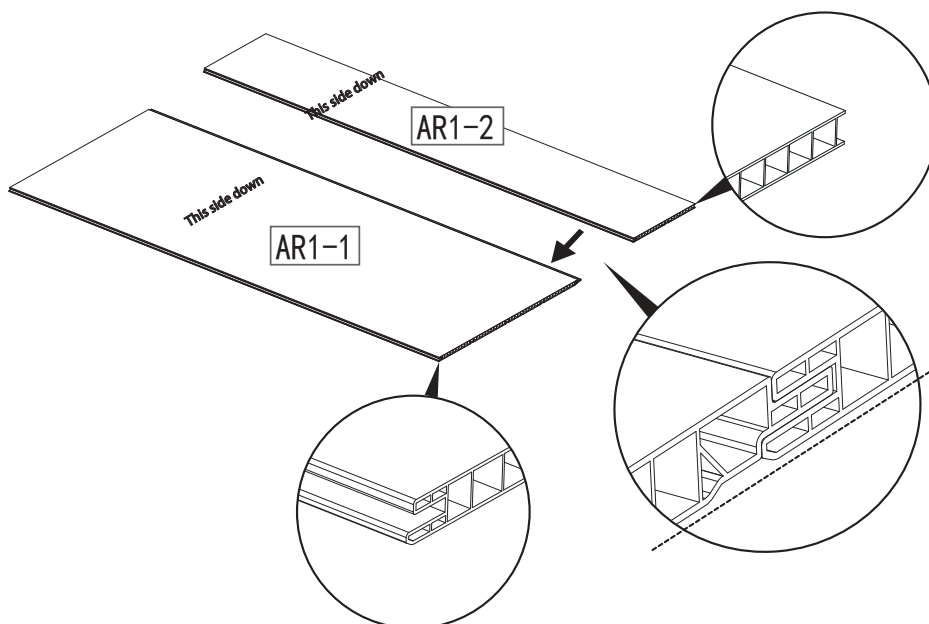

Step 31

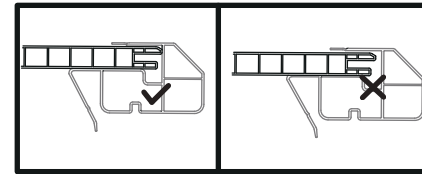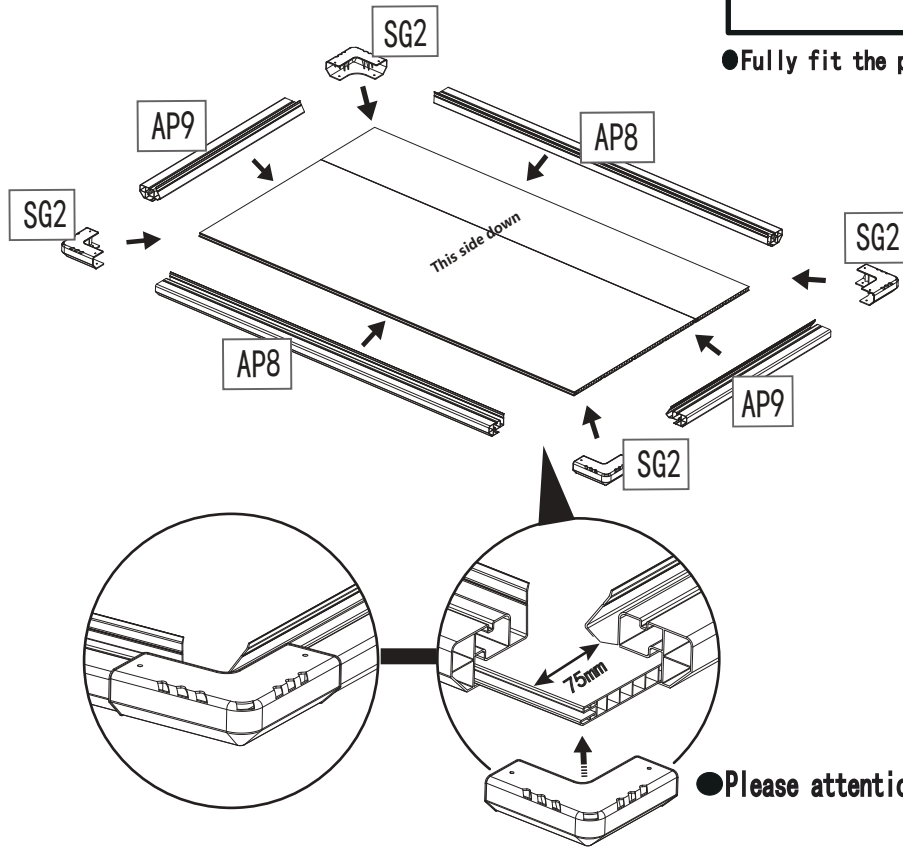

● Fully fit the panel inside the profile

AP8




2 PC

AP9



2 PC

SG2



4 PC




SG8



● Please attention to the size before install

Step 32

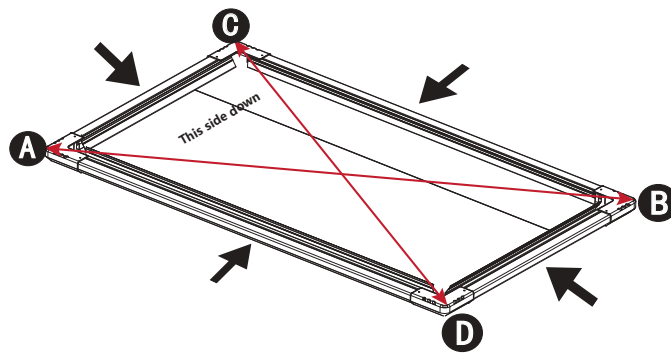


● Make sure $AB=CD$

Z410




8 PC

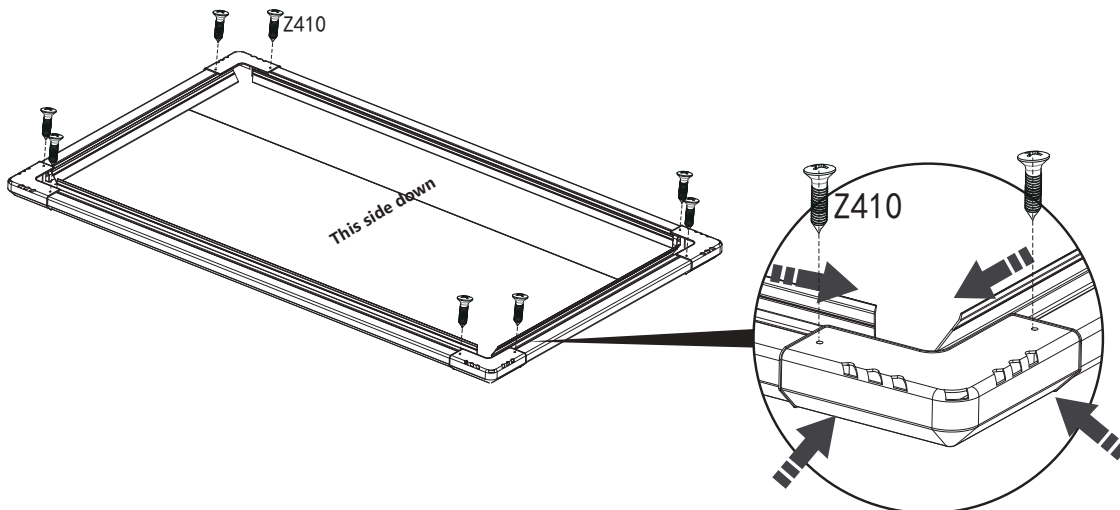


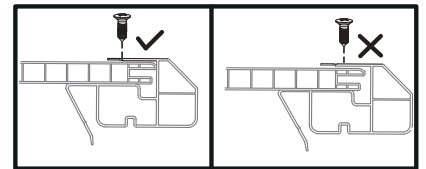

Step 33

● Turn over the roof panel

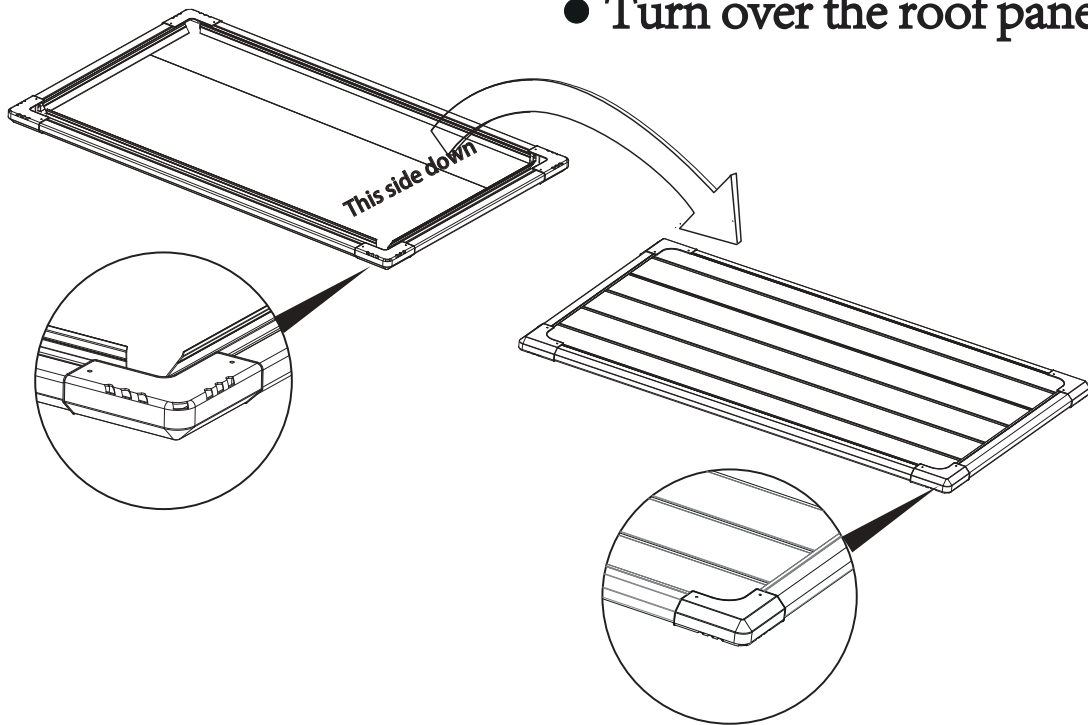


Step 34

Caution:
Please use Drill  to predrill
a hole at depth 1mm before screw.



● Nail along the marked line on profile.


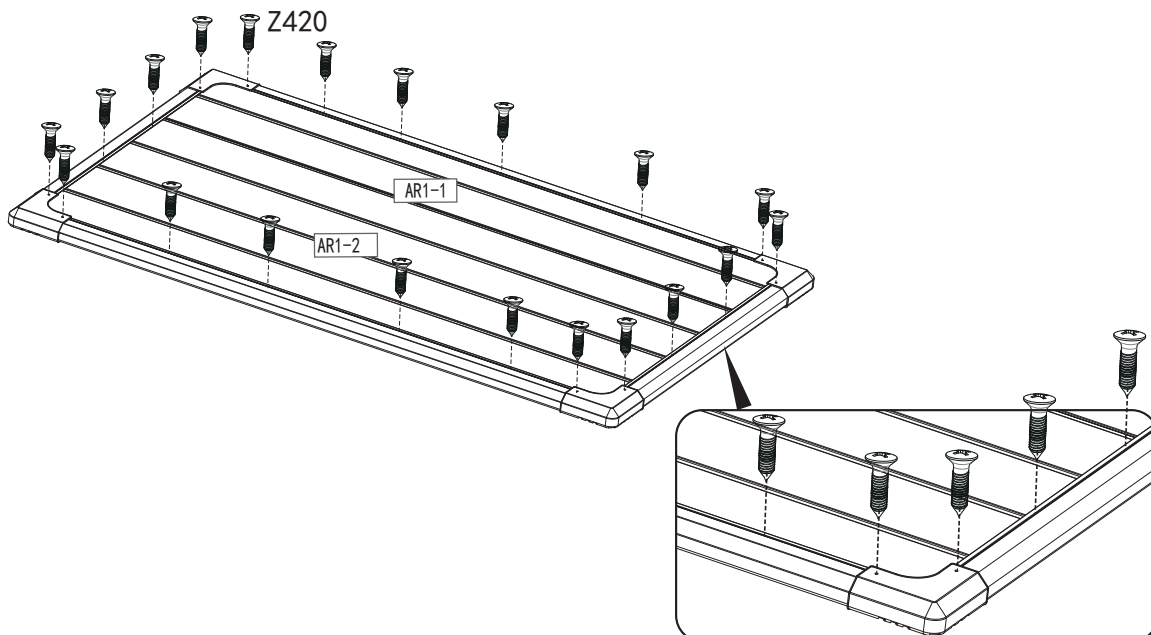


Z420



20 PC

Step 35

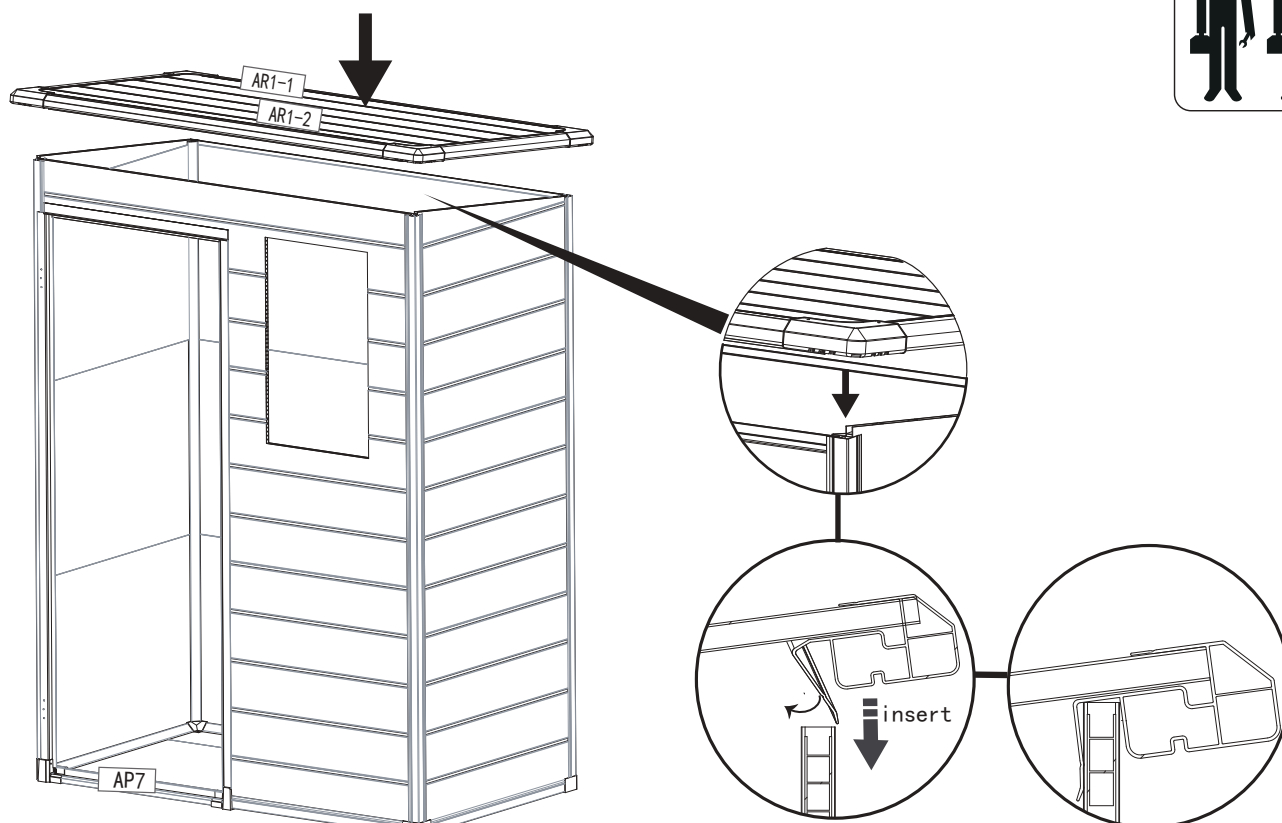
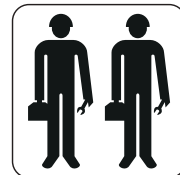


- Fully fit the panel inside the profile

Step 36




- Ensure fully fit the panels inside the profiles of the roof, using the spatula according to the following picture.

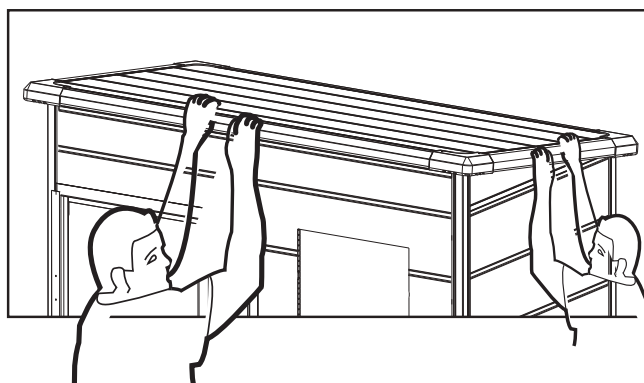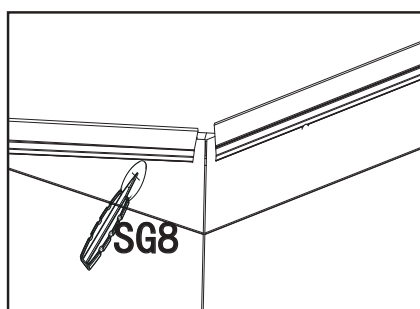

Step 37



• Please note the nailing direction.

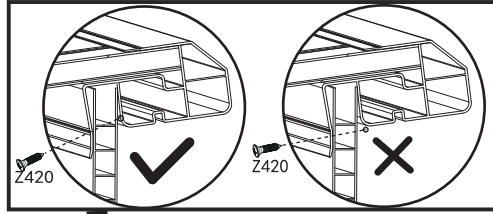


Z420



12 PC

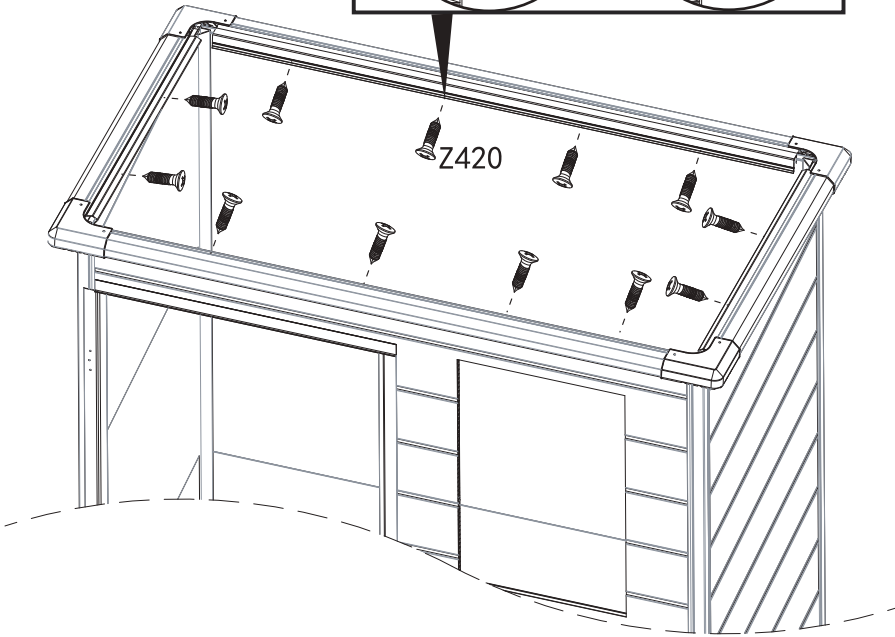
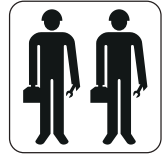


Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.






Step 38

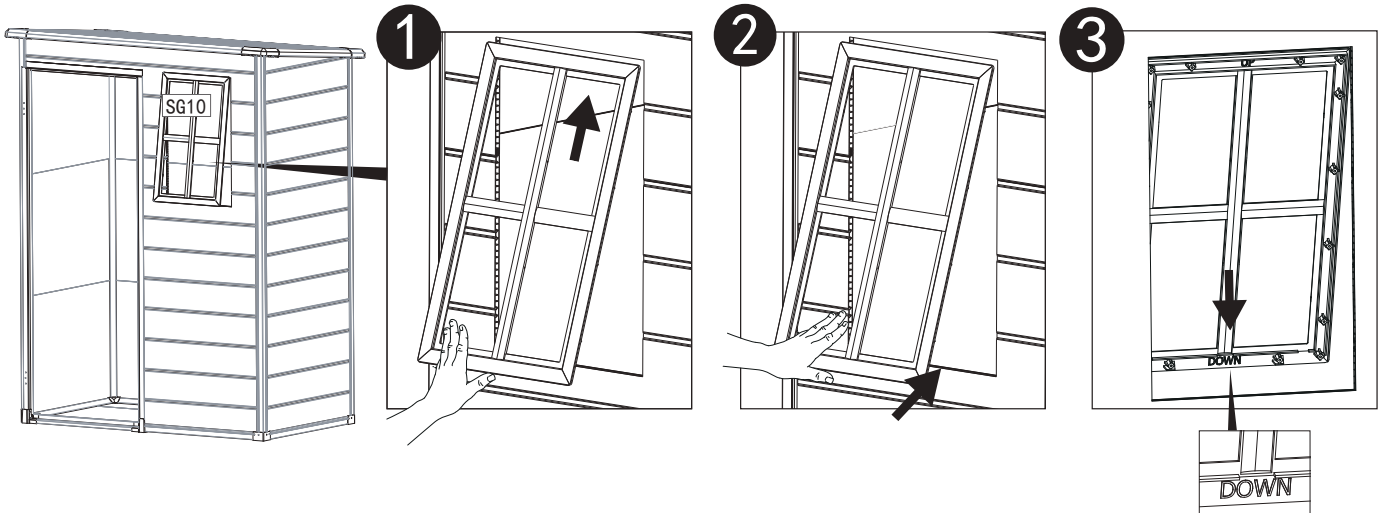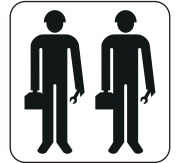

Step 39


- Remove the film before fixing SG101

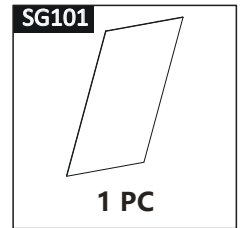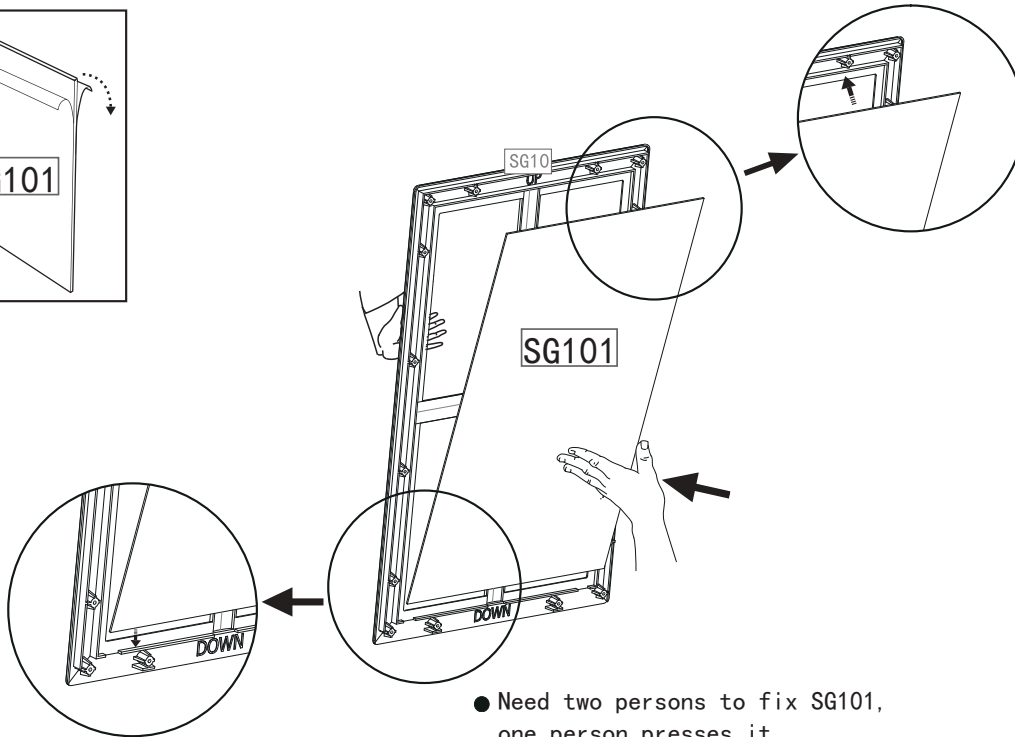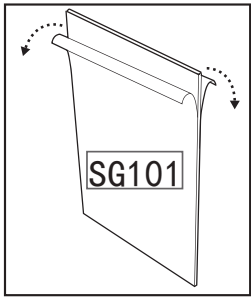





- Need two persons to fix SG101, one person presses it, and the other person assembles it.

Step 40

The press plate boss section shall be pressed against SG101

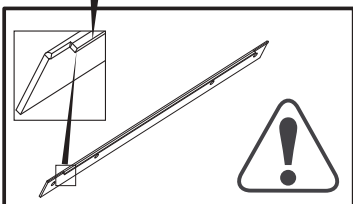


- Press tightly to avoid falling down
- Please note the side with bending edge be pressed to SG101
- It's better to fix just one screw on each SG102&SG103 before each one adjust into right location.

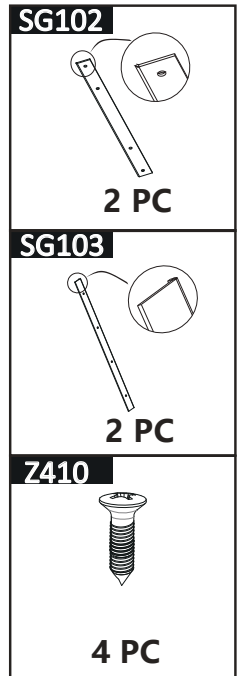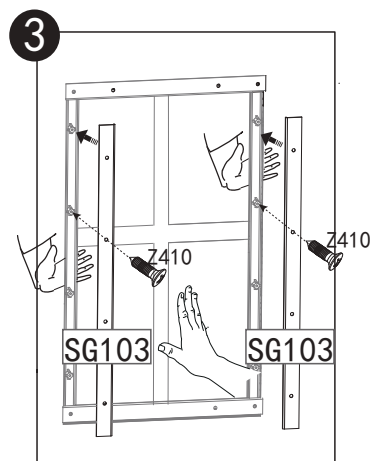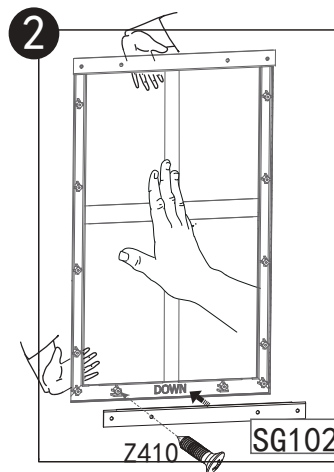
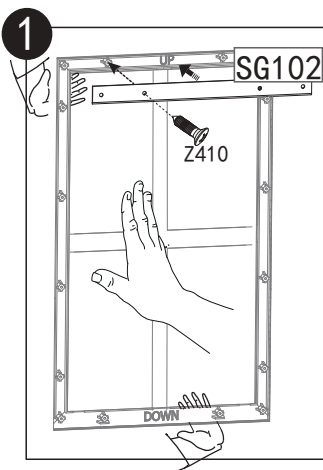


Step 41

Z410



12PC

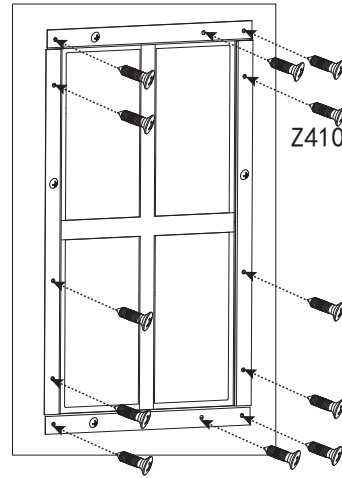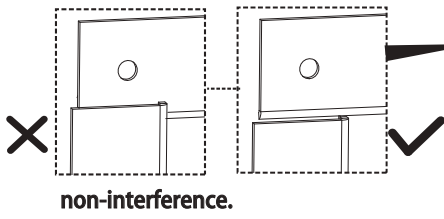


- Adjust SG102&SG103 in right location, then fix all screws





- How the Windows look when they are installed

DOOR SECTION

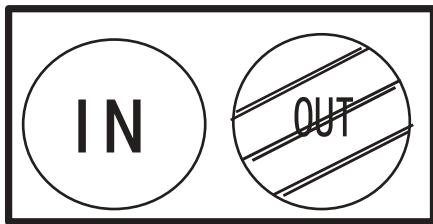


The stripes should be outside





Door mount this is above

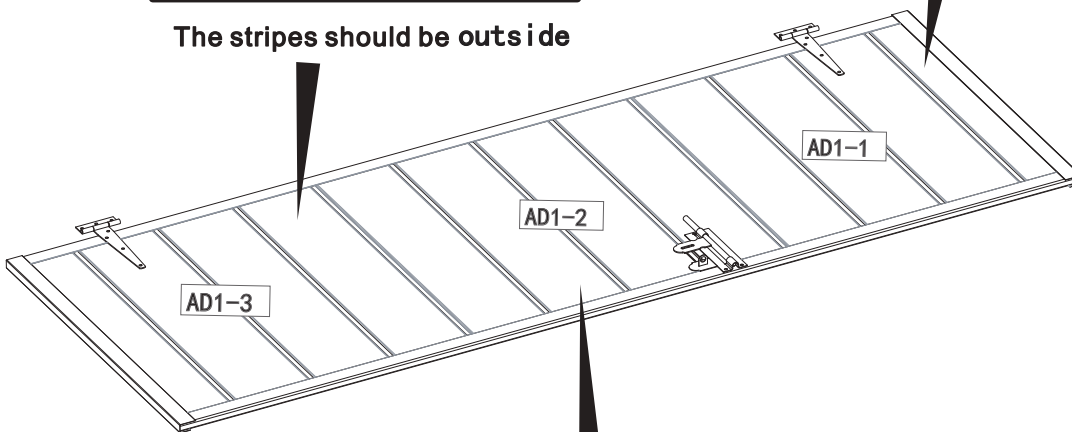


The boards must be straight


Step 42

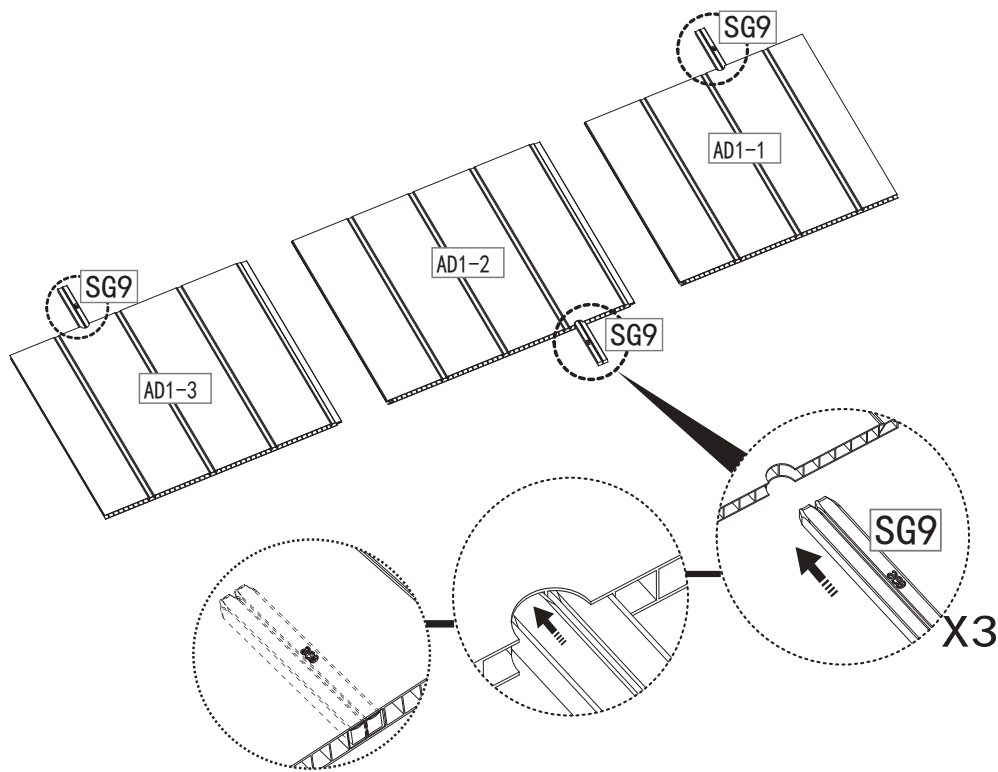


AD1-2		1 PC
AD1-3		1 PC
AD1-1		1 PC
SG9		3 PC

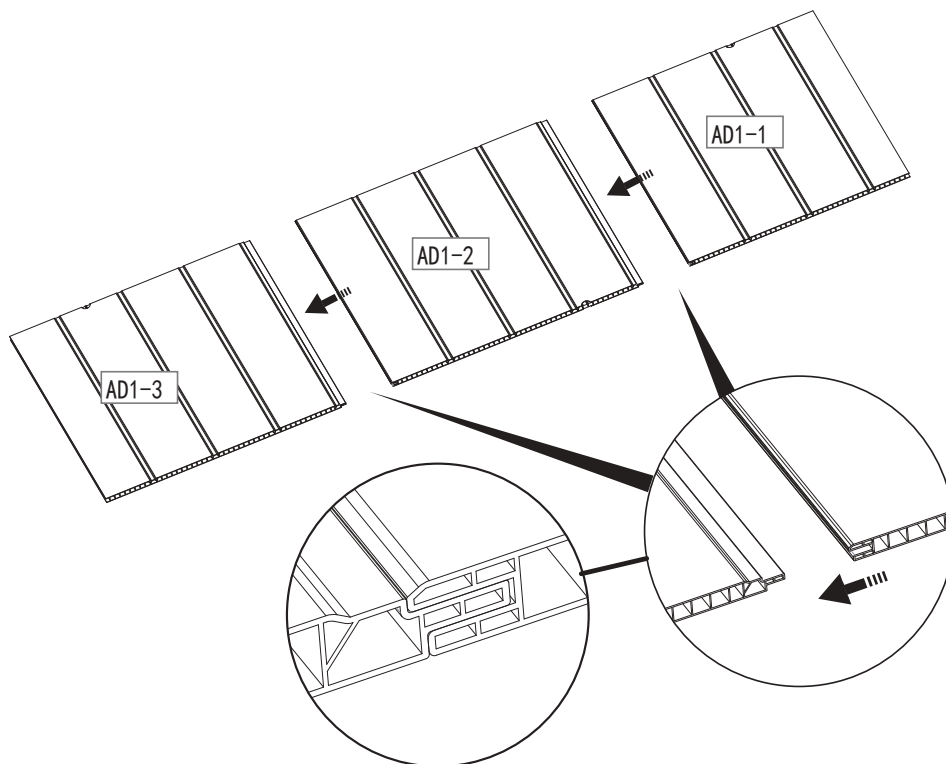

Step 43

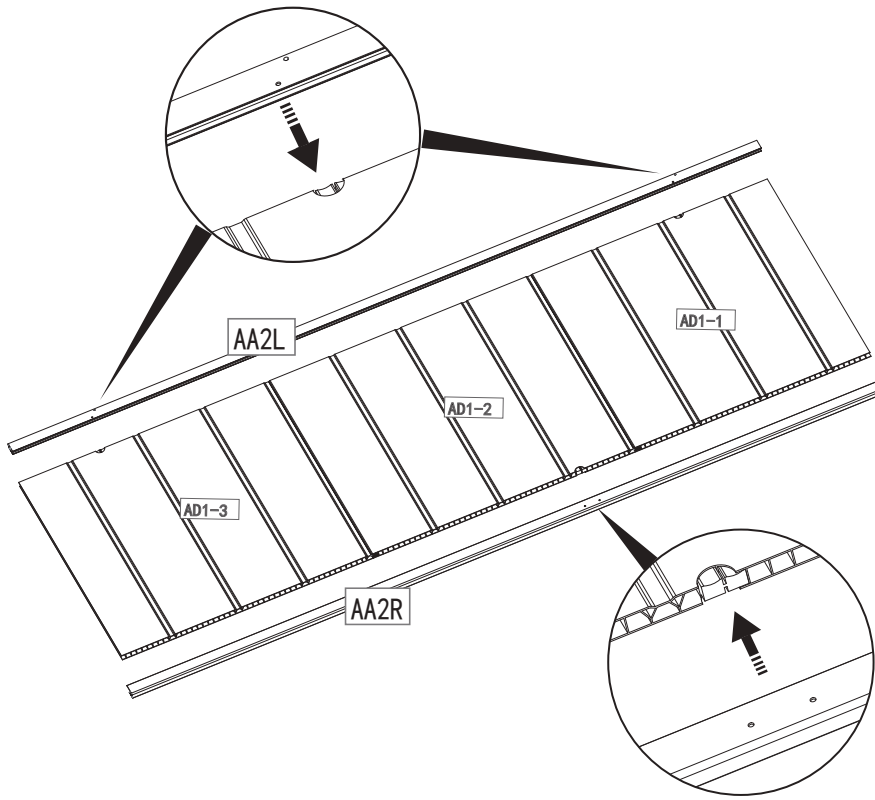

AA2R




1 PC

AA2L




1 PC

Step 44

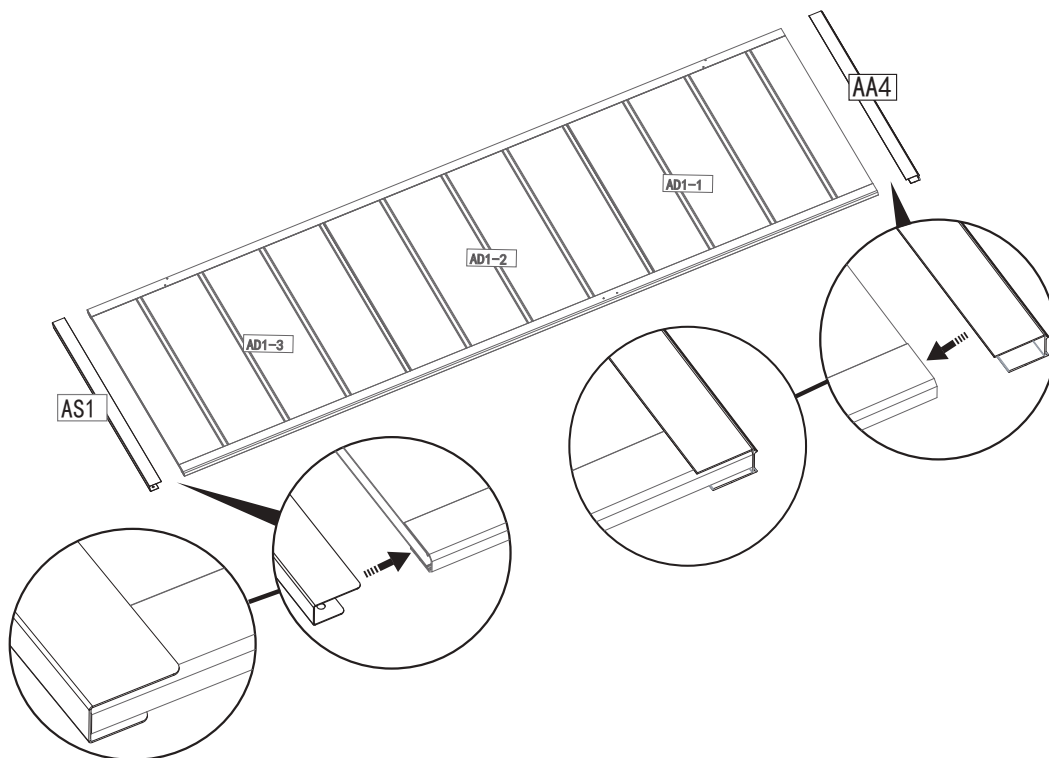


AA4




1 PC

AS1







1 PC

Step 45

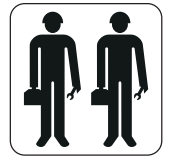


Turn the doors over

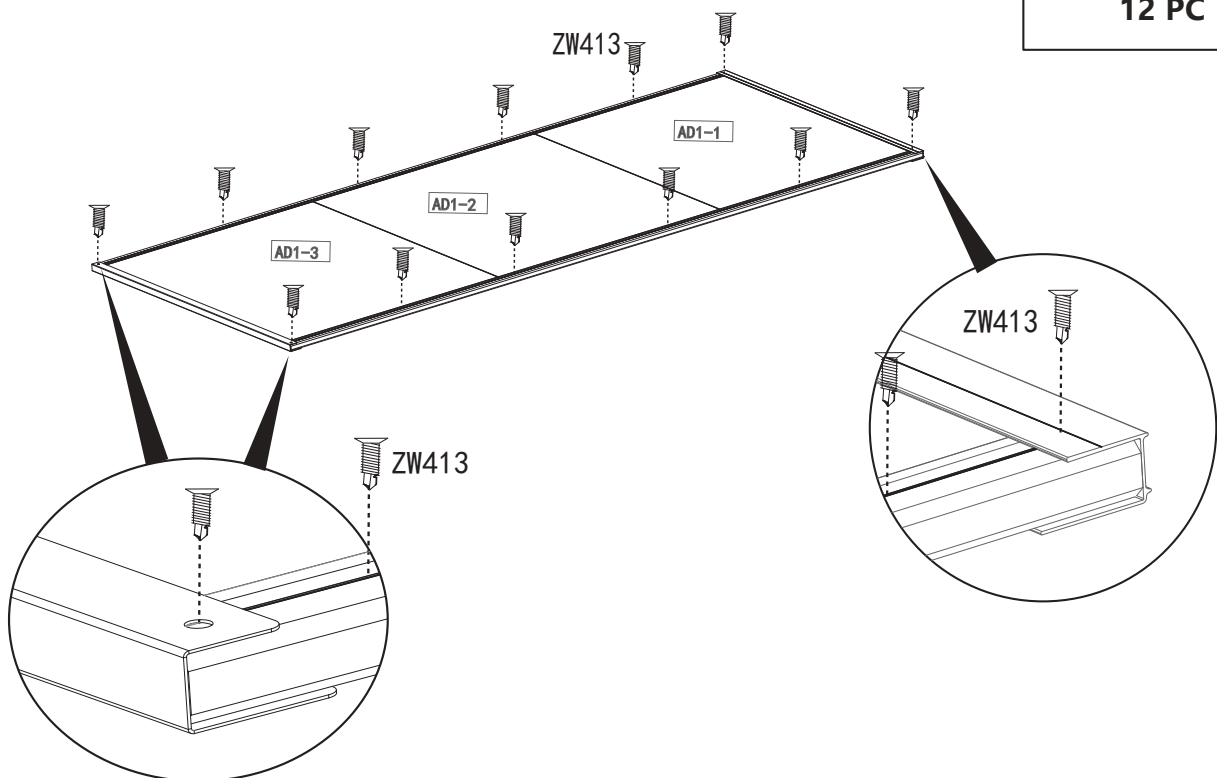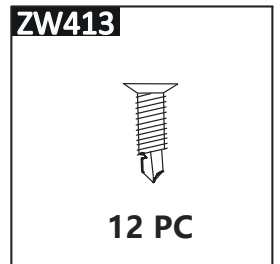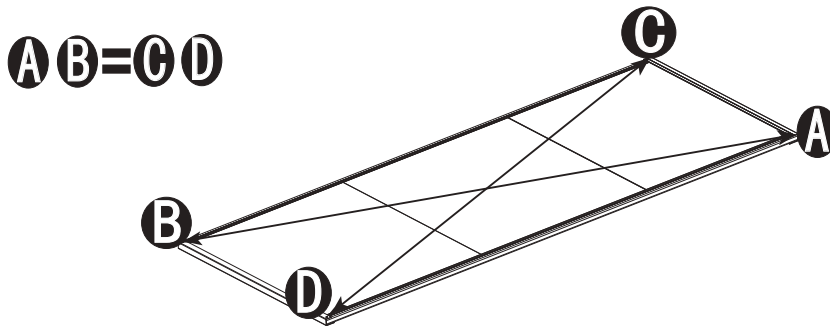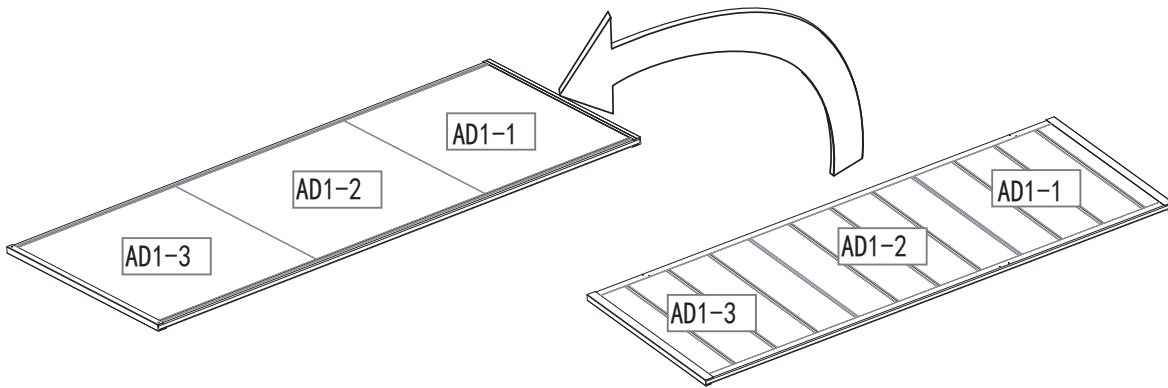


Step 46

Turn the doors over

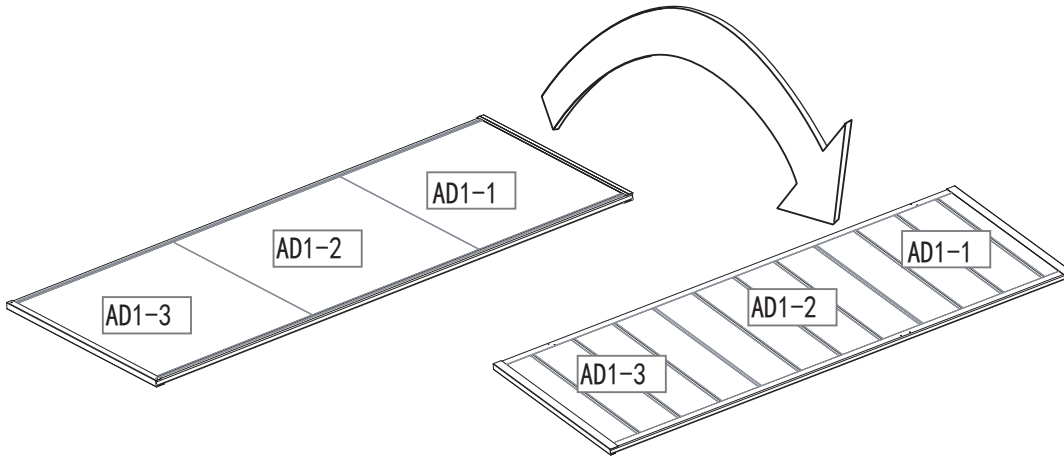

Step 47

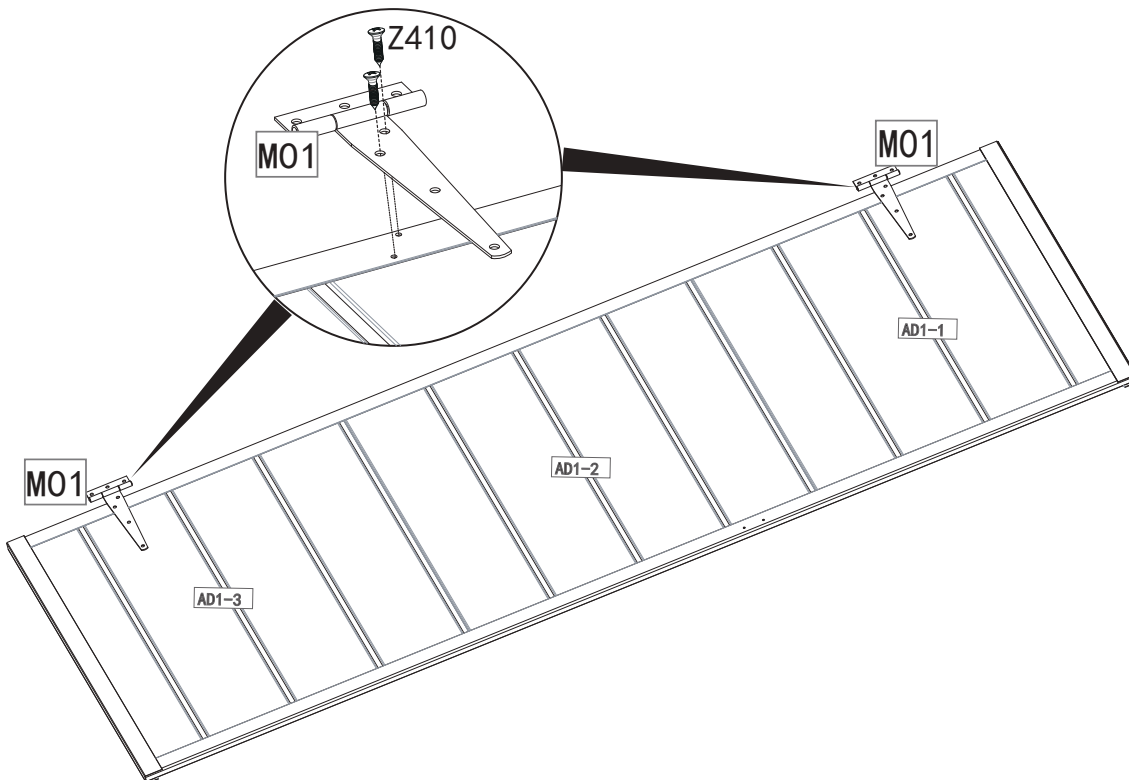


Z410







4 PC

MO1




2 PC

Step 48

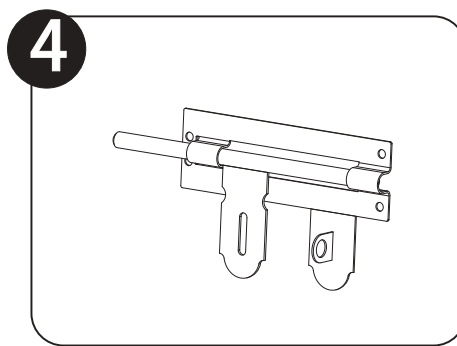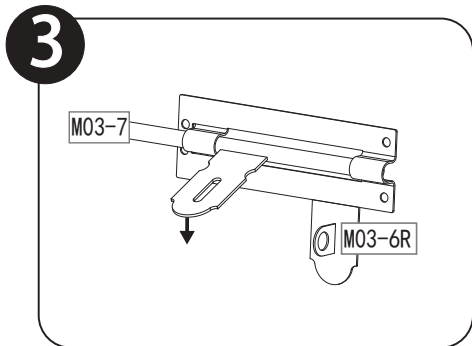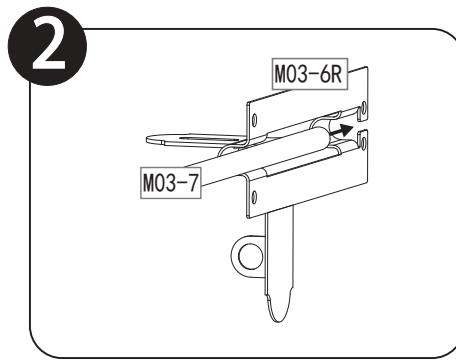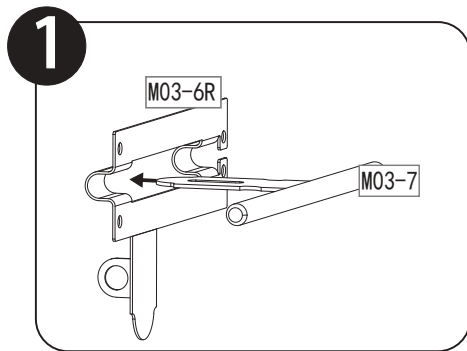


M03-6R




1 PC

M03-7



1 PC


Step 49

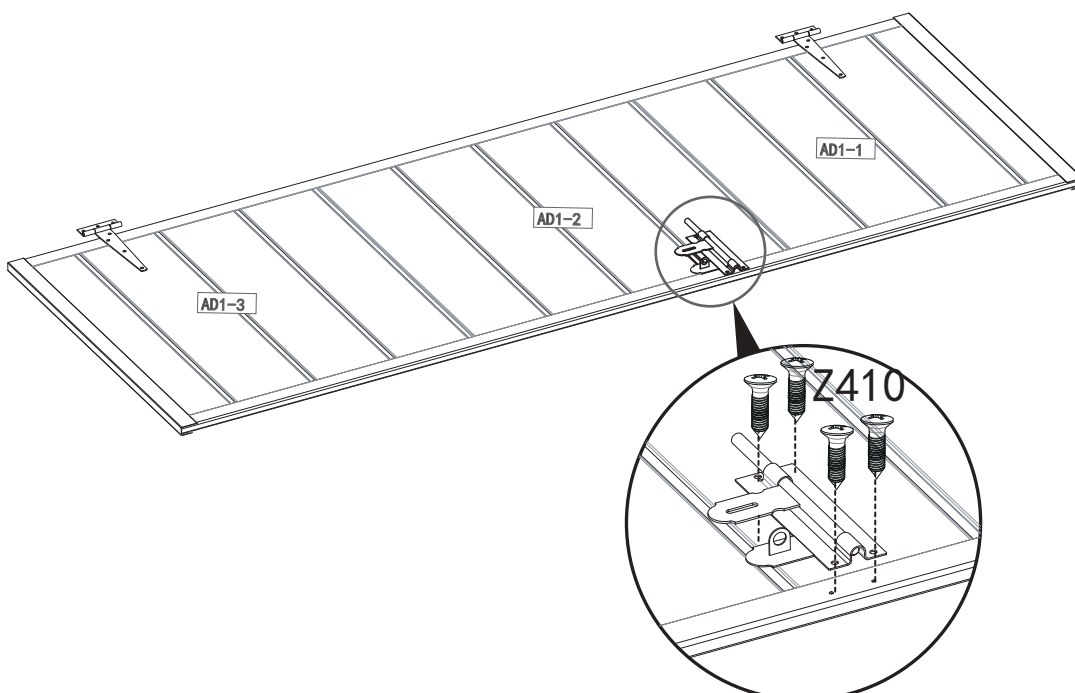

Z410



4 PC




Step 50

Z410



10 PC

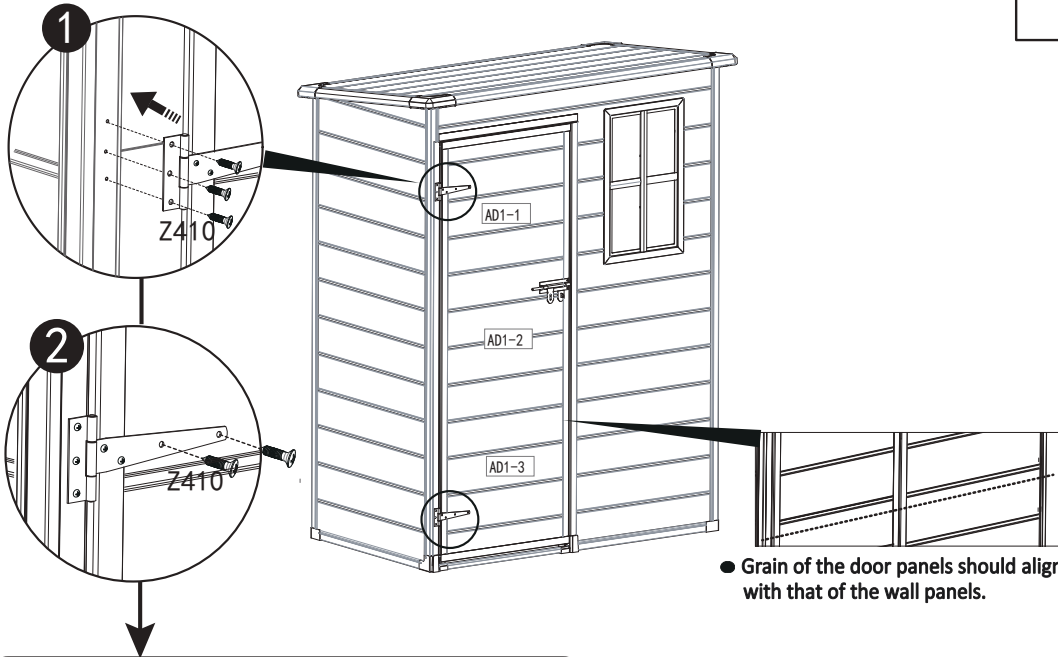

Nail the door after place adjustment and fasten all the screws.

Step 51

M04




1 PC




ZW413

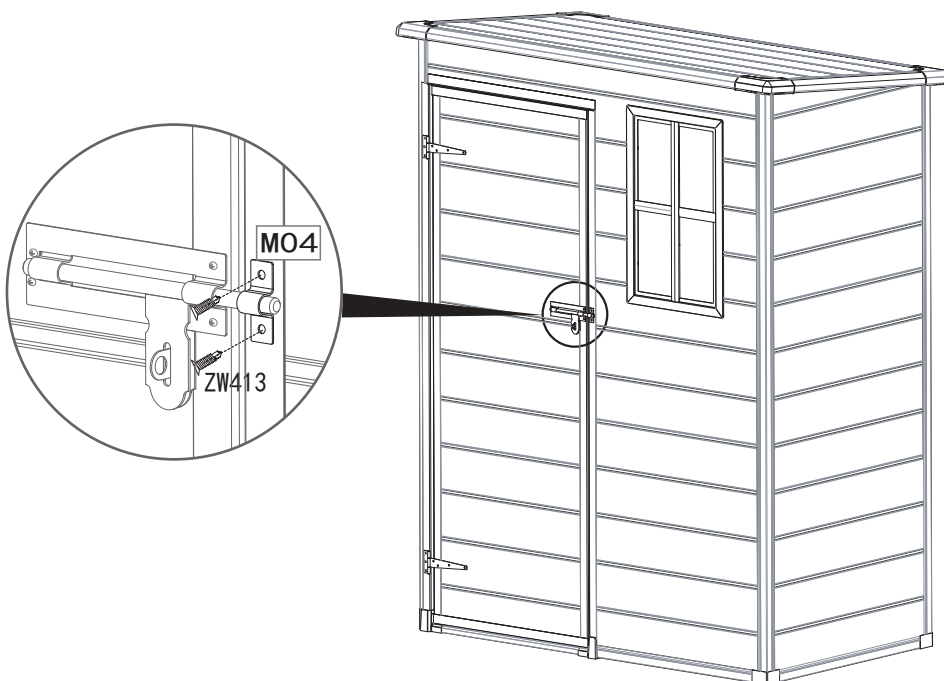


2 PC






Step 52


SG14	SG15	Z410
 2 PC	 2 PC	 4 PC

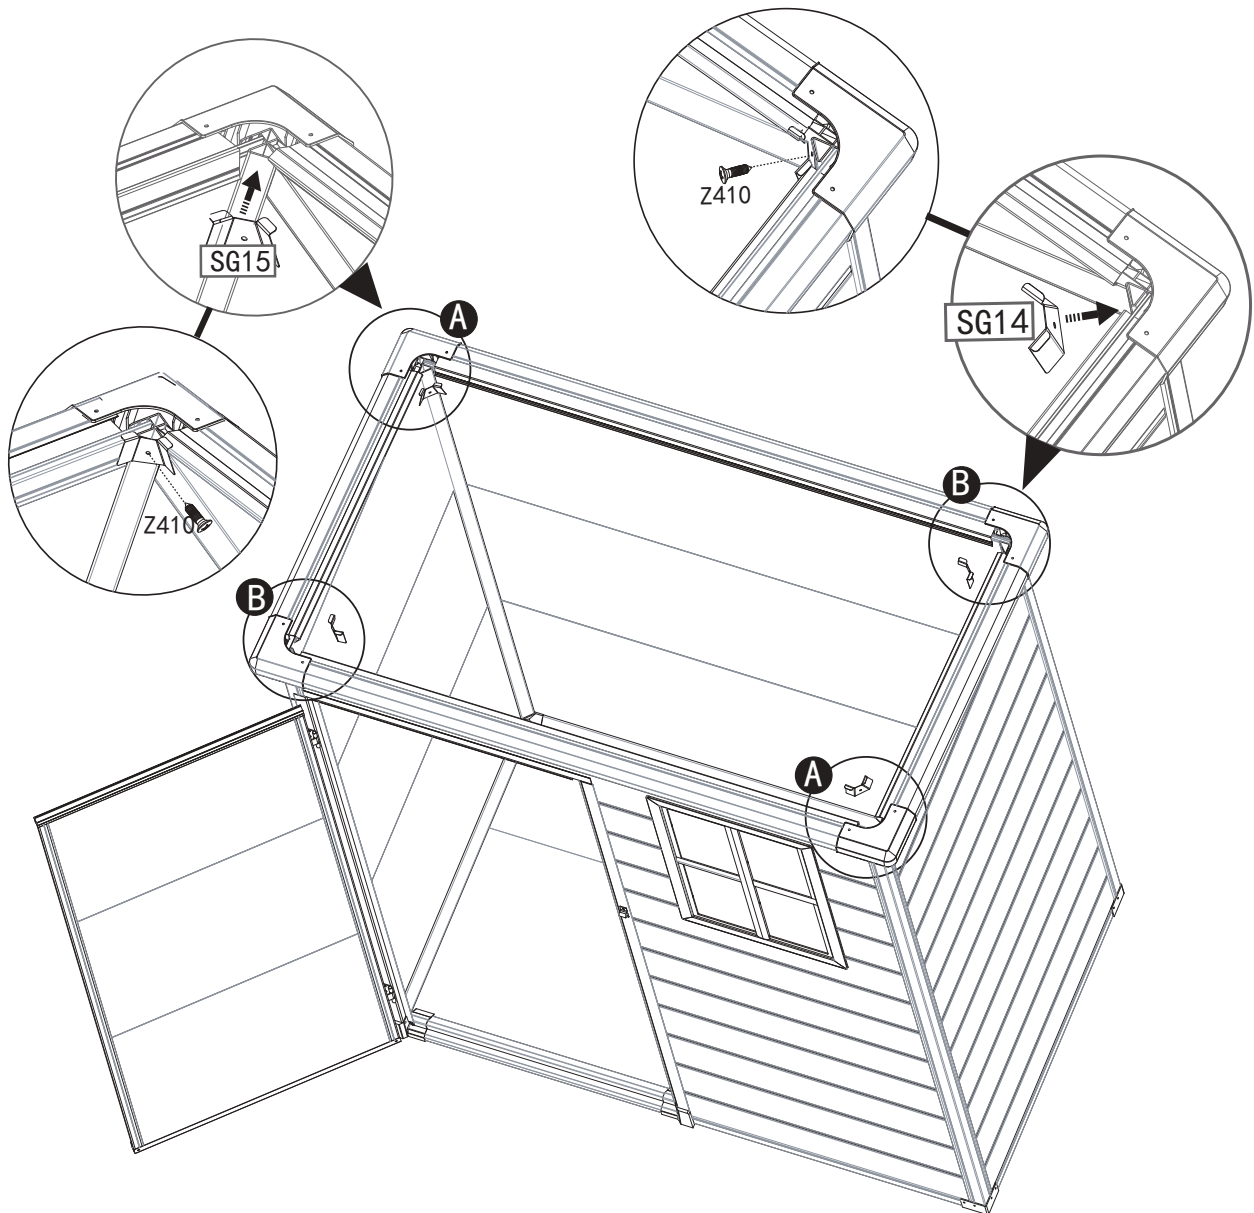


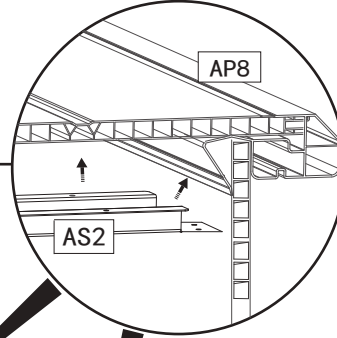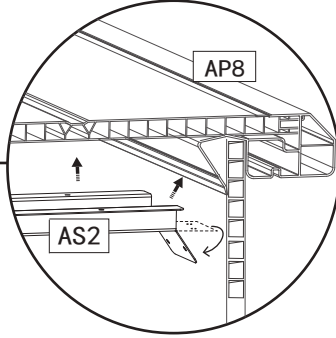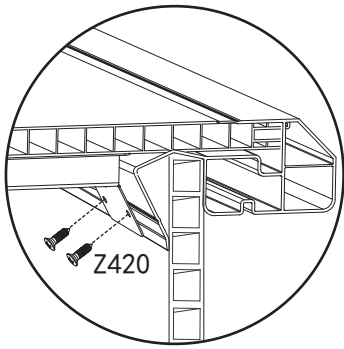

Step 53



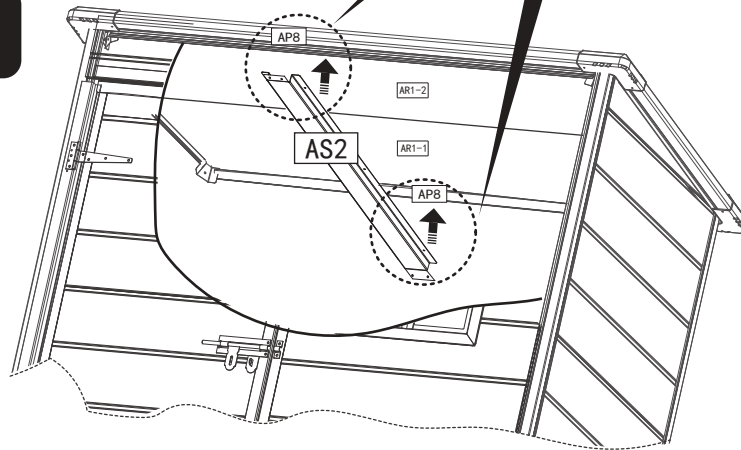


1

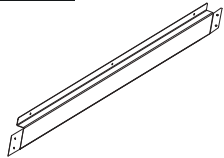

AS2		1 PC
Z410		6 PC
Z420		4 PC

2

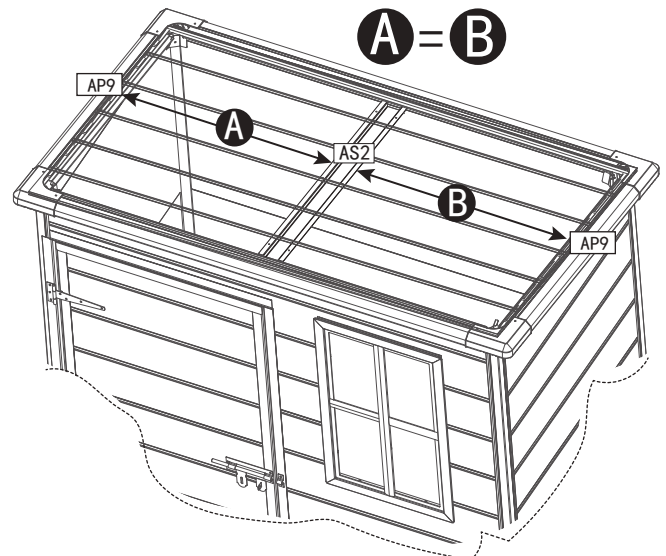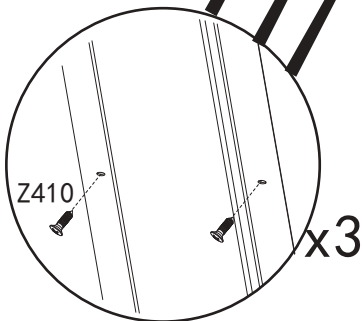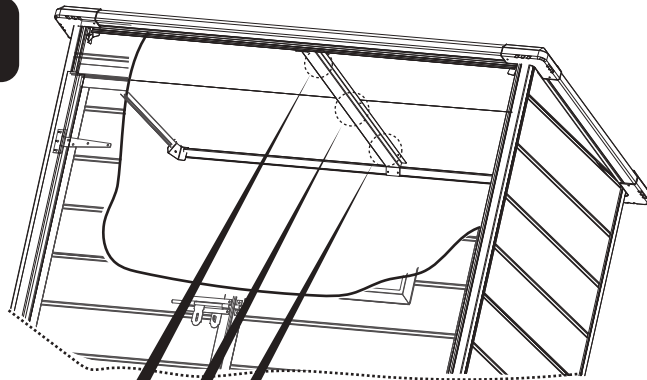

PARTS SCHEMATIC

