

THANK YOU FOR ORDERING

DITHLIGHT BRACKETS


THE DETAILS

Specifically designed for 3rd gen Toyota 4runners and 1st gen Toyota Tacomas.


- The brackets were chemically cleaned and primed before packaging and are ready for paint straight out of the box!
- The use of waterproof silicon and stainless or galvanized tapping screws are highly recommended for mounting.
- Hole for attaching lights to brackets is 1/4" if your lights come with a larger bolt you will need to make this hole slightly larger.

INSTALLATION INSTRUCTIONS


You will need:

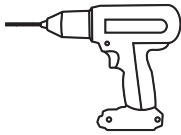


drill and bits



4 self tapping screws (included)

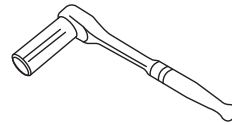

8mm wrench and socket

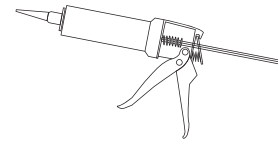

waterproof silicone

STEP 1

Open doors and peel back weatherstripping from the pillars.

STEP 2

Set brackets in the weatherstripping channel and decide how high/low you want to mount your lights.

STEP 3

Make sure brackets are even with each other.

STEP 4

With the brackets aligned mark

the hole locations on the A pillars.. Then set brackets aside.

STEP 5

Drill into the hole marks with a the self tapping screws. Remove the screws after drilling the holes. (Instead of suing the screws for this step you can instead predrill with a smaller drill bit)

STEP 6

Apply small amounts of silicone on and around the holes you just drilled.

STEP 7

Place brackets back over the holes and screw to the A pillars. **DO NOT OVER TIGHTEN!**

STEP 8

Attach ditchlights to the brackets.

STEP 9

Reattach weatherstripping.

ENJOY!