



COLEY HOME

THE CROWN HEADBOARD ASSEMBLY GUIDE





TIPS + CARE

After removing the plastic, take a break! The headboard requires 1-3 hours to come back to life. The longer it is in the box, the longer the foam will take to reshape.

Place a pillow on top of the headboard while it expands to help remove the arch from packaging.

Before you put on the slipcover, **steam or lightly iron** it to remove any creases leftover from packaging.

It is best to dry clean your slipcover. Spot clean when necessary for minor stains. Only use a mild water-free solvent. Let it breathe. Air dry is the best dry!



STEP ONE:

Take the compressed headboard out of the box and remove plastic.




STEP TWO:

Lay the headboard flat on the ground. Let it expand for about 1-3 hours.
Once fully expanded, the foam will be 4 inches thick.



STEP THREE:

Pull the slipcover over the headboard, matching the seams with the edges of the headboard.
Keep tugging! It is tight for a reason!

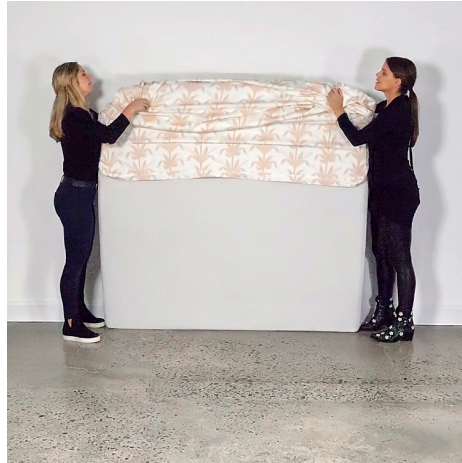

STEP FOUR:

Zip the bottom of the slipcover and place the headboard against your wall. The foam will continue to expand over the next 24 hours. Once fully expanded, adjust the seams to align with the edges of the headboard.

