




x 4



x 8

x 2


x 1

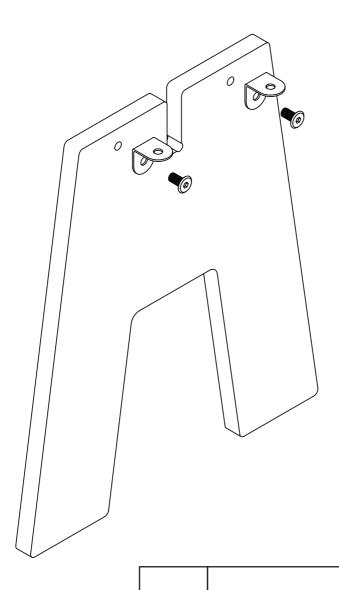


1.

Attach 2 brackets to each plywood leg using the bolts. The fittings are pre-inserted into the plywood.

Loosely tighten the bolts using the hex key. Dont fully tighten them yet.

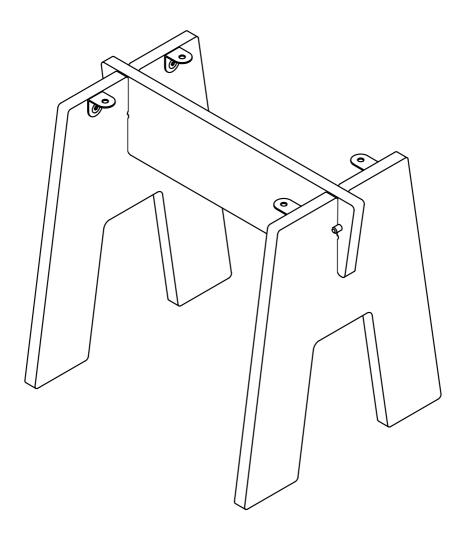

Fit the Stretcher onto the legs.
Make sure it is pushed all the way down.

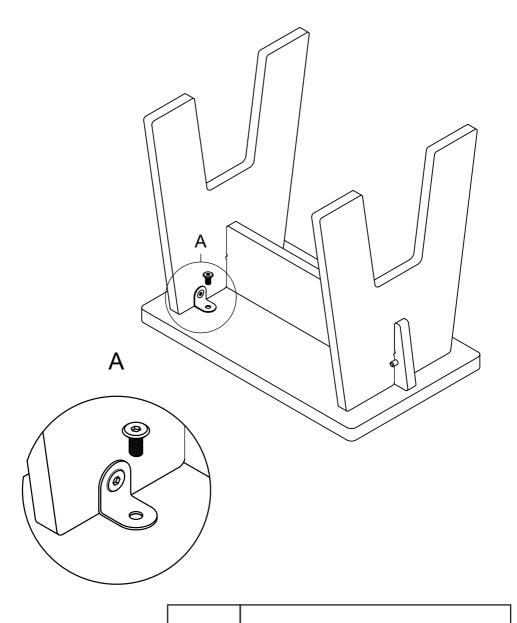

Turn the Foresso stool top upside down and position the base on it.

Then use the bolts to fix the top to the base.

Finally, tighten all the bolts.

