

ASSEMBLY INSTRUCTIONS KBC - OZ 42" & 48"

- Please unpack all parts and check against parts list on this instruction sheet before discarding the packaging.

Screw (B)

WÅLL

- Note: We recommend at least 2 people assist in installation to avoid injury or damage to the product.

#	Part Description	Dimensions		QTY
1	Floating Vanity	1067x533x610mm (KBC 42") 1220x533x610mm (KBC 48")		1 pc.
2	Wooden Hanger	220x50x20mm (KBC 42" & 48")	6.13	4 pcs.
3	Plywood Panel	1027x160x18mm (KBC 42") 1179x160x18mm (KBC 48")		1 pc.

RTA Hardware						
#	Drawing	ltem		QTY		
Α		Plastic Anchor	Ø14x47mm)	15 pcs.		
в	(Long Screws	Ø8x50mm)	15 pcs.		
С	(Short Screws	Ø8x35mm)	18 pcs.		

Tools

- Screwdriver, Drill, Hammer ...(not included)


Assembly Instructions

Step 1:

- Hold the plywood panel (3) against the wall and align the screw holes with your stud locations.
- Use a writing utensil to mark the locations.
- See Figure 1 for recommended mounting height.
- Drill at marked locations and tap plastic anchor (A) into hole until flush.
- Use long screws (B) and drive them through the plywood panel and into each anchor to secure. Screw (C)

Step 2:

- Use short screws (C) to attach the wooden hanger (2) to the plywood panel (3).
- Use Figure 2 as reference for mounting height.

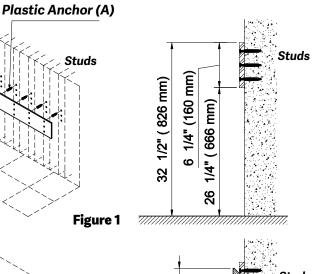



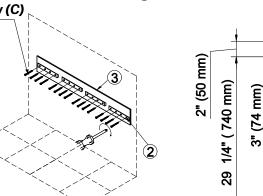


Figure 2

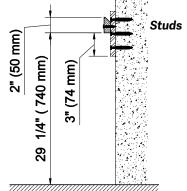


Step 3:

- Hang the vanity (1) on the wooden hanger (2).
- Use Figure 3 as reference for recommended final mounted height.

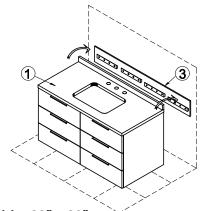

Vanities 30" & 36"

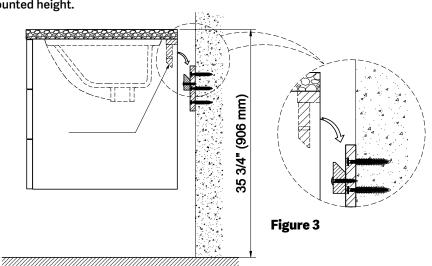

www.Kitchenbathcollection.com



ASSEMBLY INSTRUCTIONS KBC - OZ 42" & 48"

