


# Design House *Stockholm*


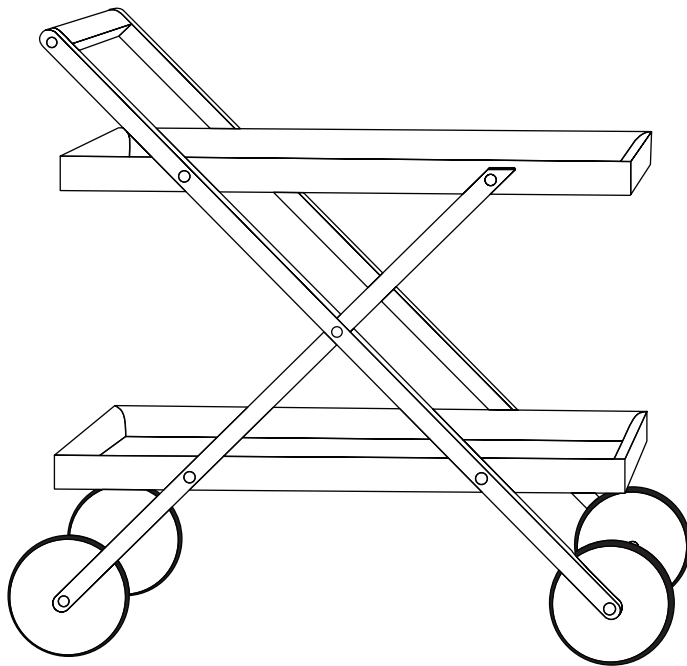


Assembly Instructions  
Exit Trolley (2601-1000),  
(2601-0190) & (2601-8400).


Components (tools):




Components:

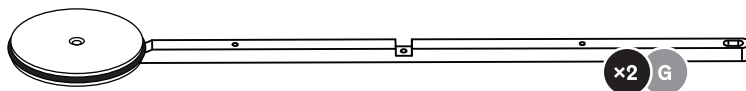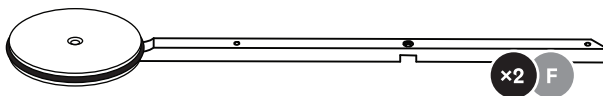


Step 1.

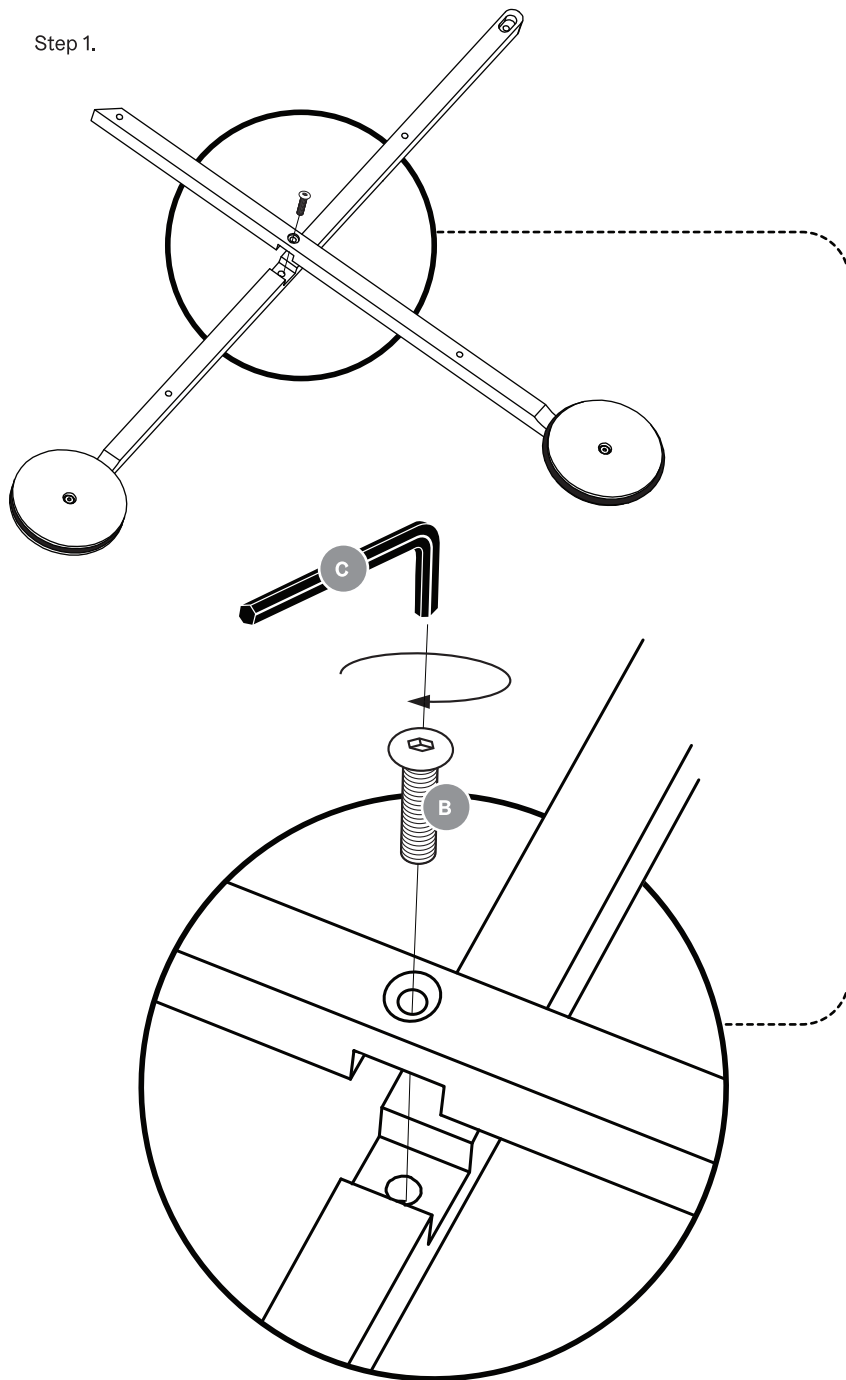

Step 2.

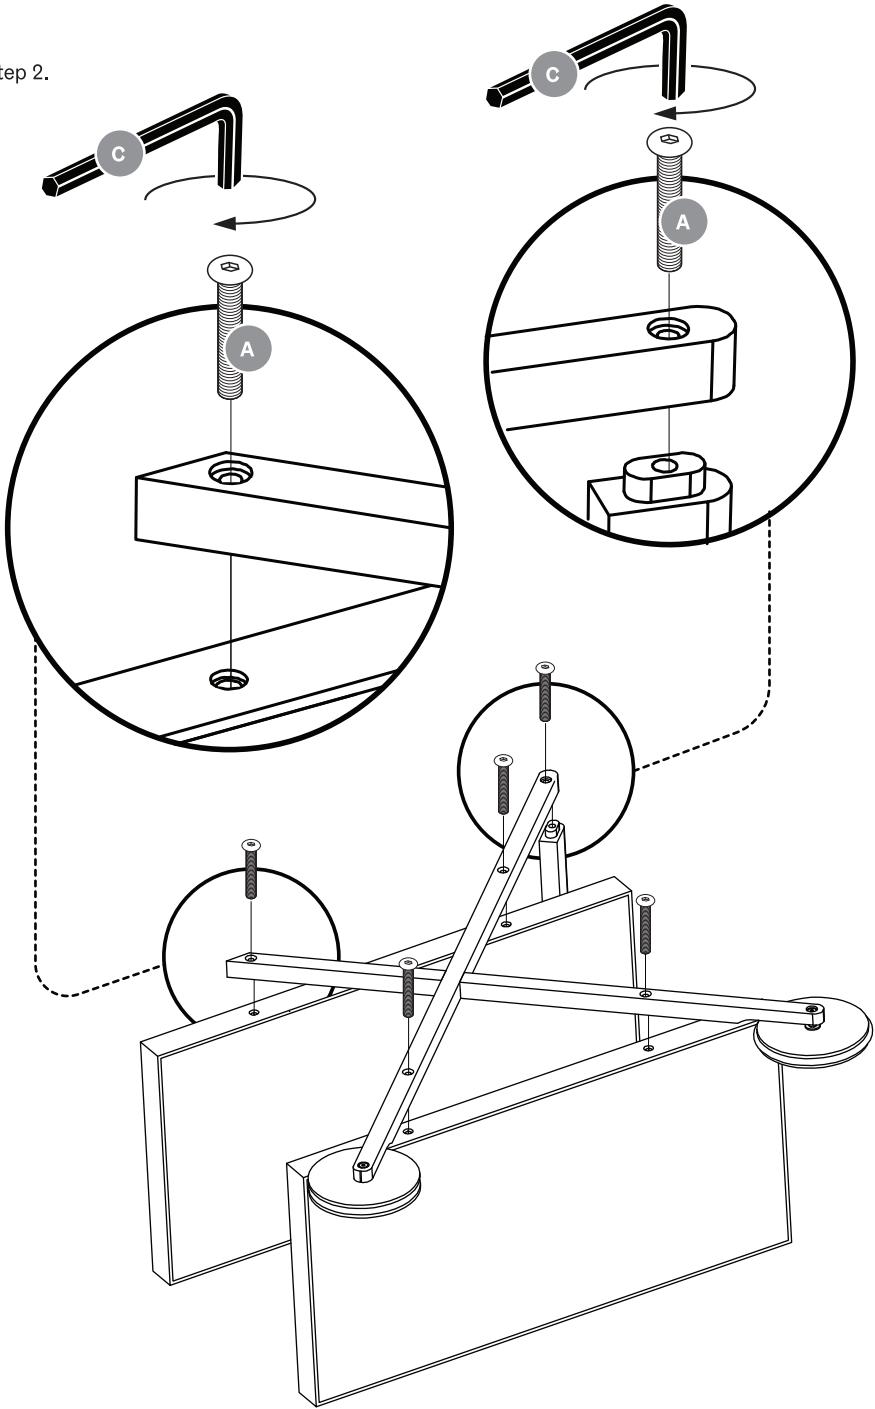

Step 3.

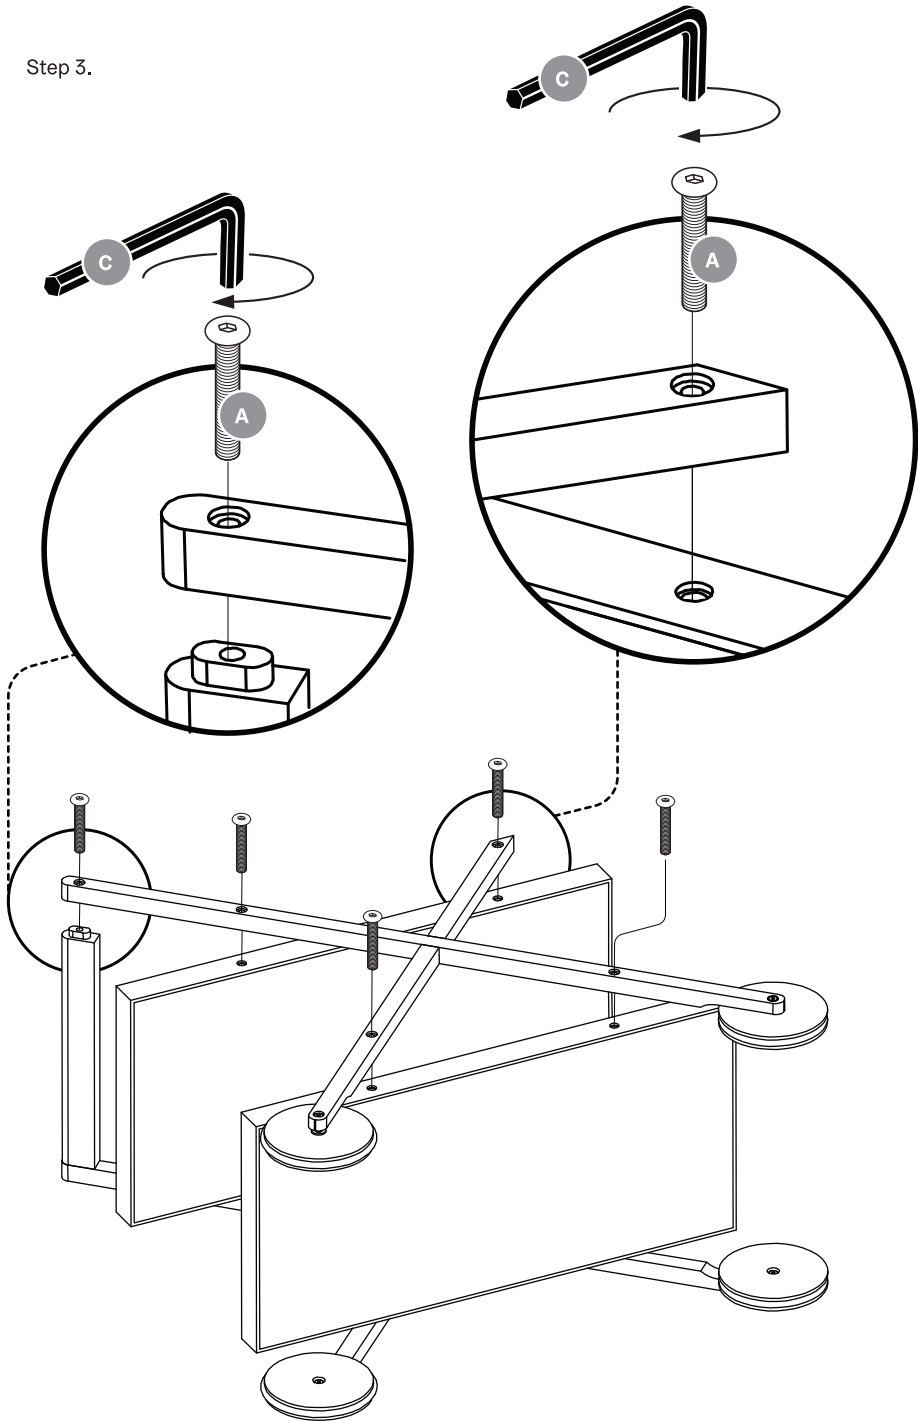



designhousetockholm.us  
@designhousetockholm.us