

TURNPRO UTV DOOR ACTIVATED DOME LIGHT

INSTALL VIDEO OF THIS PRODUCT CAN BE FOUND @

www.turnprosignals.com/domeinstall

ROUTING YOUR HARNESS

1: Start by routing your (Main) Harness from the desired position of your dome led from one side of UTV cage towards UTV door. (Be sure to route where harness can feed with wires hiding leading to the inside of the door housing EXAMPLE: Under the seat opening where door switch will be installed.

Notes:

- You can temporarily secure while finding the perfect location for visibility
- You can route your harness on either side of Unit, but preferably on the same side as battery location to ensure proper length. (Battery under left hood / Run on left side etc.)

2: Once your harness is ran down your cage routed to door, temporarily secure connections and then route Off/On switch harness to the desired location for mounting.

DRILL FOR YOUR OFF/ON ROCKER

1: Drill your for your Off/On Switch using a 3/4" butterfly bit to prevent slip offs. Then securely push the rocker into place & connect your switch harness.

INSTALLING YOUR DOOR SWITCHES

1: Find a area in the door closing that your door switch will have at least 1/2" clearance for switch adjustments and mark it for drilling.


IMPORTANT NOTES:

- You can cut a piece of cardboard for a clearance reference. This will help to ensure proper spacing.

2: Drill for your switch using a 1/4" butterfly bit to prevent slip offs and insert door switch leaving one bolt on for adjustments, and with the other bolt & locking washers for securing.

3: Before placing REAR BOLT & LOCK WASHER on the rear of the switch, START by placing first just the WASHER / then the Black Wire with the ("Ring Terminals")

from the Battery Power Harness to the rear of door switch. Then (Install Rear Bolt)

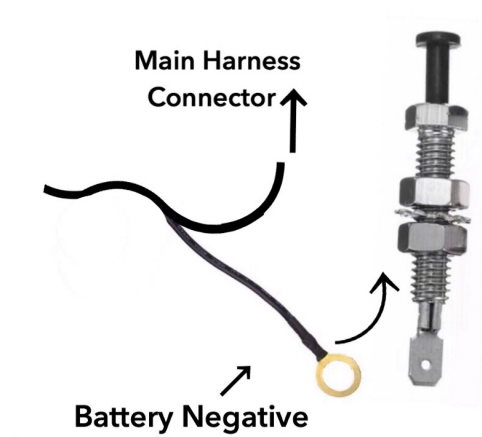


- 1:1 You can now gently adjust for door closing, ensuring that the door switch will engage when closed and secure the bolts on the door switch.
 - 2:2 You can now install your Red Female Quick Connector to the end of the Door Switch coming from the “Main Harness”
- 4: You will see a second Black Wire leading off the “Battery Power Harness” (Ring Terminal) that is able to connect to the wire leading to the opposite door.


NOTES:

- The third Black Wire leading from (“battery harness”) will connect to the (“Rocker Switch Harness”) labeled to toggle.
 - Plug the positive RED Wire from battery harness to the Main Harness Red connector.
- You can now do the exact same to the other door.

Battery Power Harness

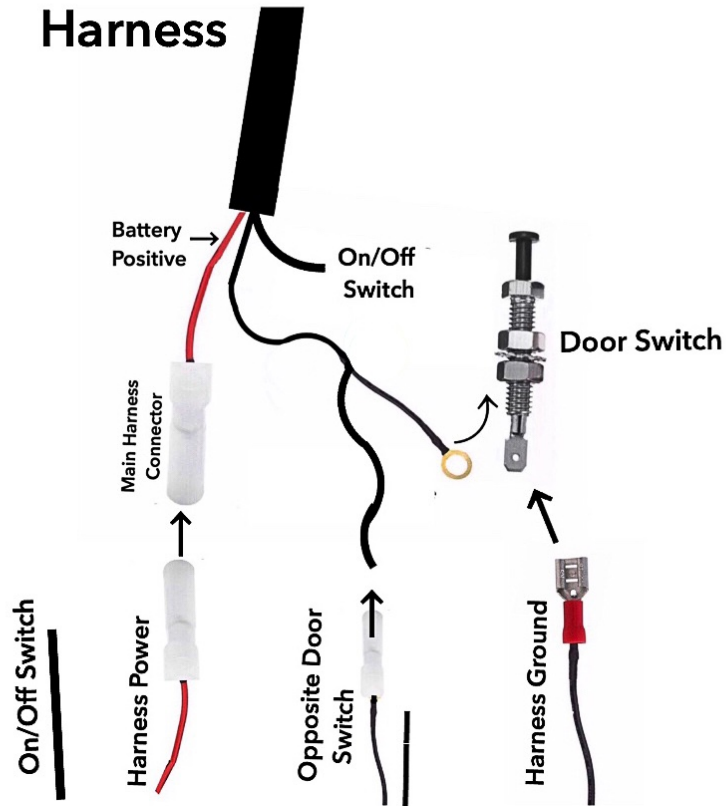

Main Harness



Once you have everything properly connected and door switches secure, you can now secure your LED if you haven't already and connect your "Battery Power Harness" to your main or Accessory Battery.

For questions or concerns feel free to write us info@turnprosignals.com or reach out to us on our Facebook Page "TurnPro UTV Signal Kits"

We hope you enjoy your TurnPro UTV Door Activated Dome Light! For more TurnPro products visit www.turnprosignals.com!

INSTALL VIDEO OF THIS PRODUCT CAN BE FOUND @
www.turnprosignals.com/domeinstall



TurnPro Signals Systems offers 1 year Warranty on all parts **EXAMPLE: LED's, Flash Relays, Toggles, Switches & harnesses** defective by the craftsmanship of this product. This does **NOT** include wear & tear / or damage by neglect. Your invoice Reciept will be required for all warranty claims made by our contact form www.turnprosignals.com.



DOME39281