
GET CONFIDENT. GO FAST.



HOW TO APPLY CUSTOM DECALS

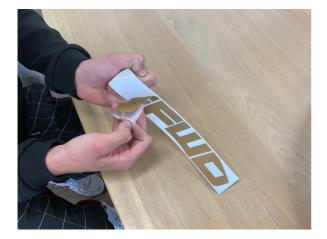

Step 1: Separate the white foil from the decal foil.



Step 3: Line out the decal with the rest of the logo.



Step 5: Remove the remaining foil.



Step 2: Start lining out the FFWD D on your decal with the D on the rim.



Step 4: Press the decal gently but firmly on the rim.



Check our How To video by scanning above QR code!



COLORS OPTIONS





SILVER