

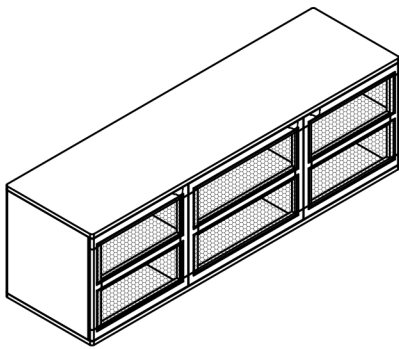


# ASSEMBLY INSTRUCTION


## Cohen Sideboard

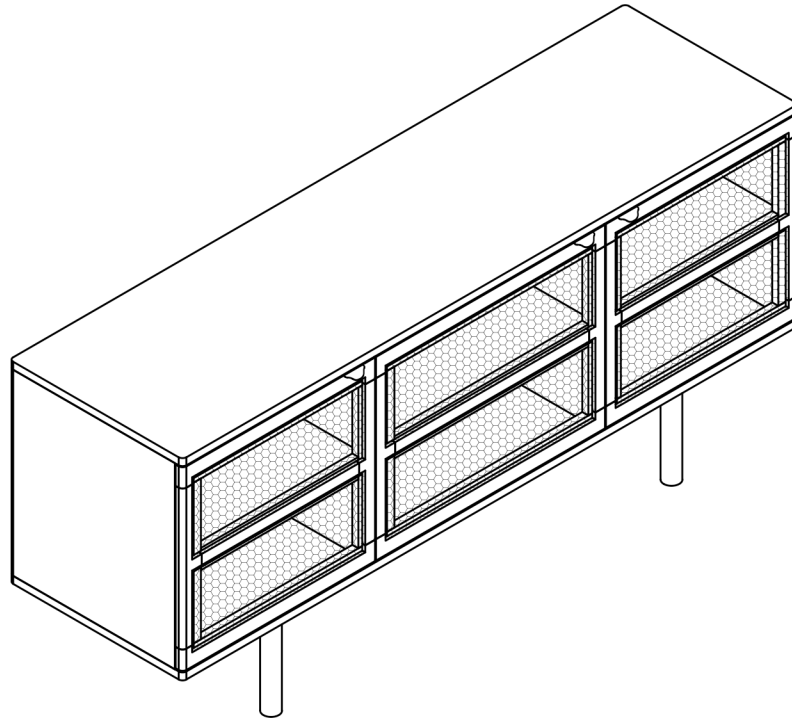

a = 1/pc

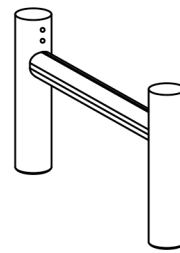

b = 2 /pc

 20 MIN



M6\*35



A x 8

Ø6




B x 8

Ø6\*13



C x 8

Key M4




D x 1

Anti tip kit



E x 2

Step 1

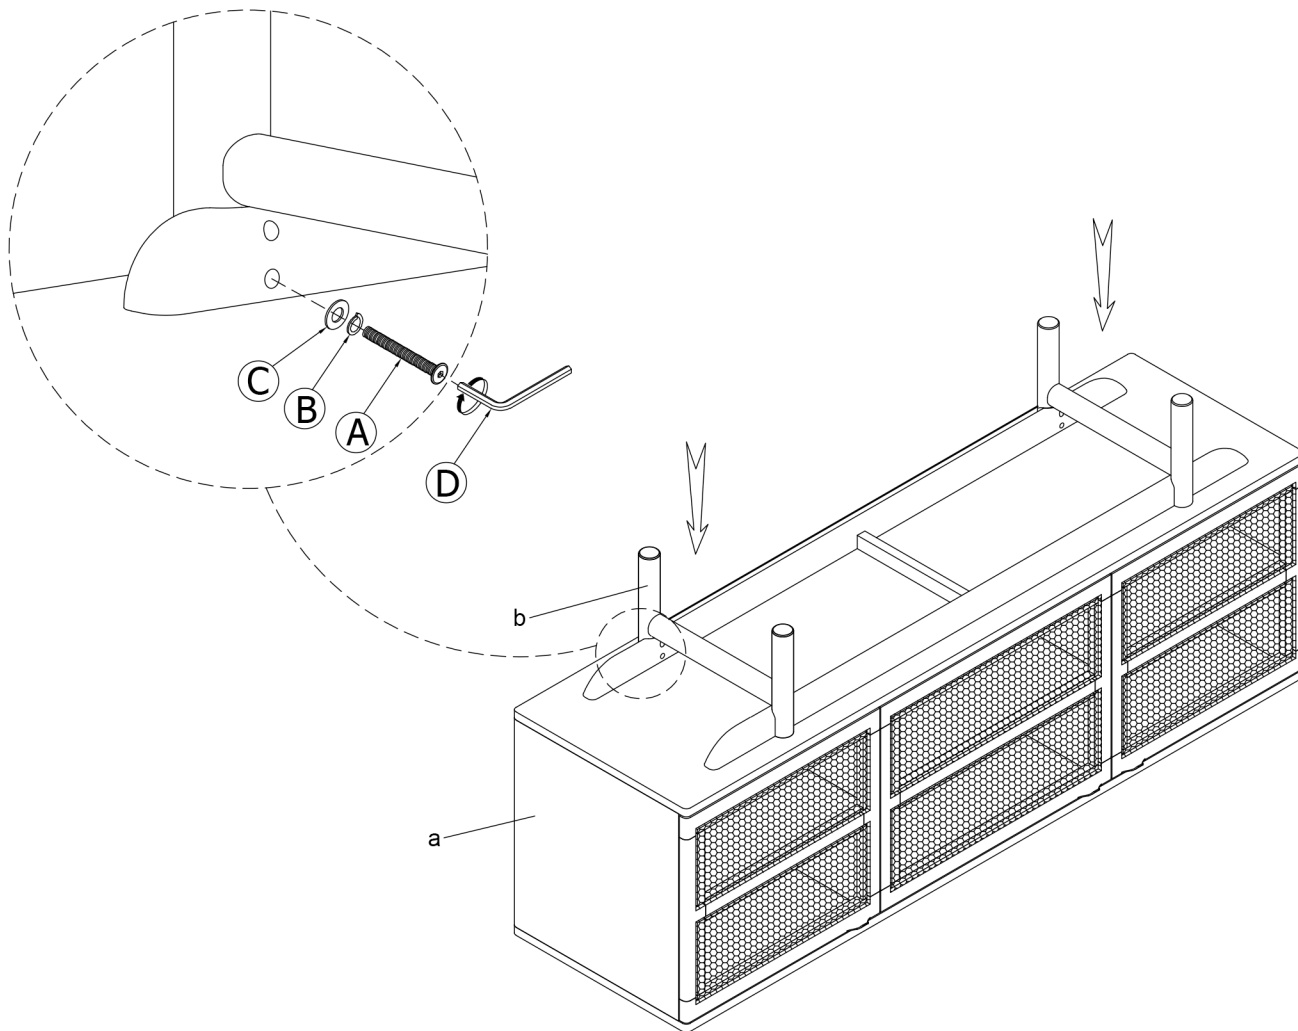

Step 2

