

Tip Toe

Assembly instructions


WENDELBO

Please note

Please read these instructions carefully and keep them for future reference. Refer to the parts inventory and ensure you have all the parts before starting. During assembly, place all parts on a flat, soft and clean surface, such as a carpet or blanket, to prevent scratches and damage. We recommend that a minimum of two people help each other to assemble.


Parts inventory

- A Seat frame
- B Long leg
- C Short legs
- D Bolts
- E Allen key

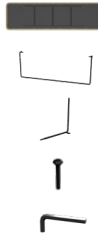


Assembly

1. Unbolt 4 metal bolts (D) from the seat frame (A).

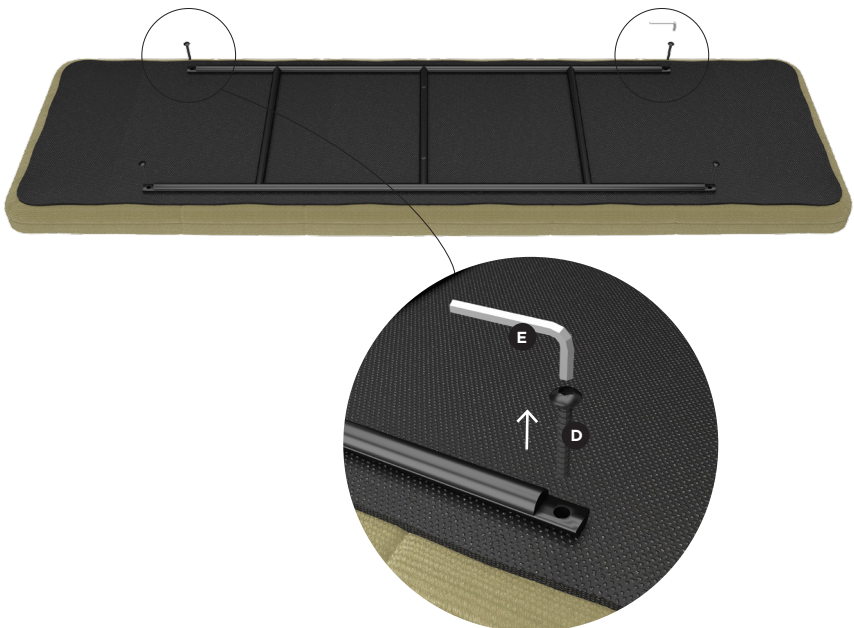


2.

Attach the long leg (B) to the seat frame (A). Insert two metal bolts (D) and use the Allen Key (E) for tightening. Avoid fully tightening all the metal bolts until all components are properly aligned in place, making sure that the metal legs are in the correct alignment.

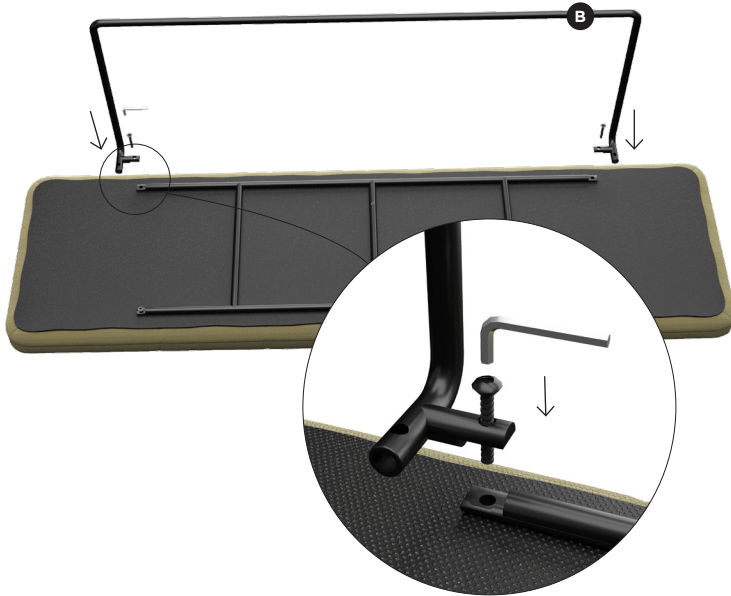


3.

Insert the short legs (C) into the seat frame (A) and the long leg (B). Secure them using 8 metal bolts (D) and tighten them with the Allen key (E). Avoid fully tightening all the metal bolts until all components are correctly positioned.

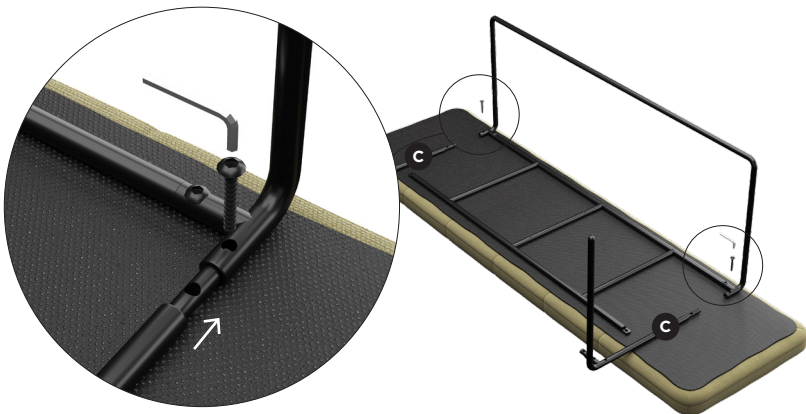

4.

Align part A (seat frame), part B & C (metal legs) properly and tighten all part D (metal bolts) by using part E (allen key).

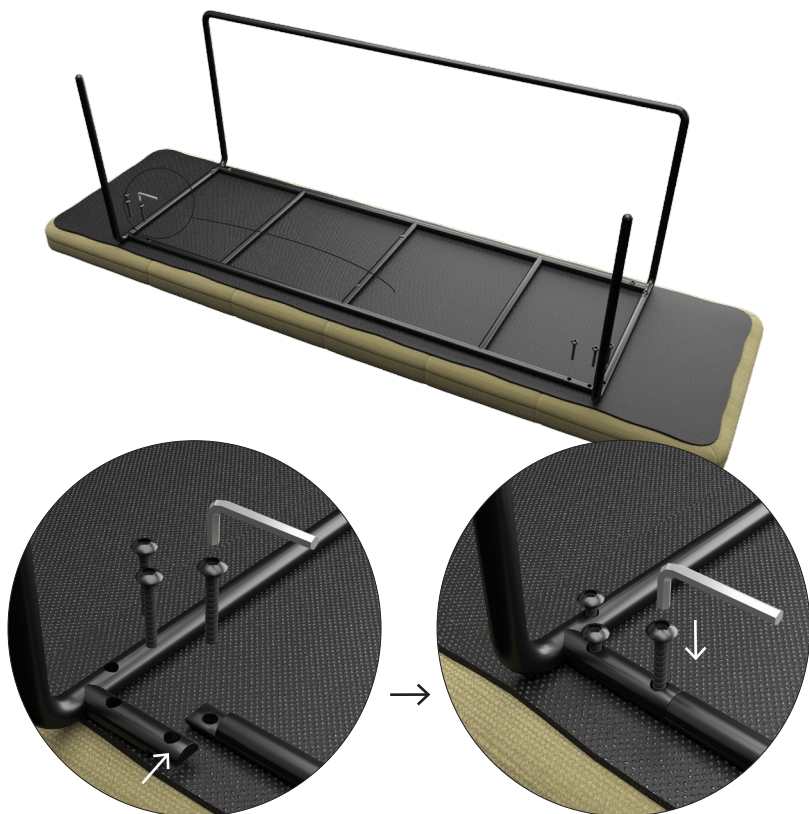



W

WENDELBO