


mojo[®] TONE

BUILD. MODIFY. REPAIR.

TELE 4-WAY SOLDERLESS WIRING DIAGRAM

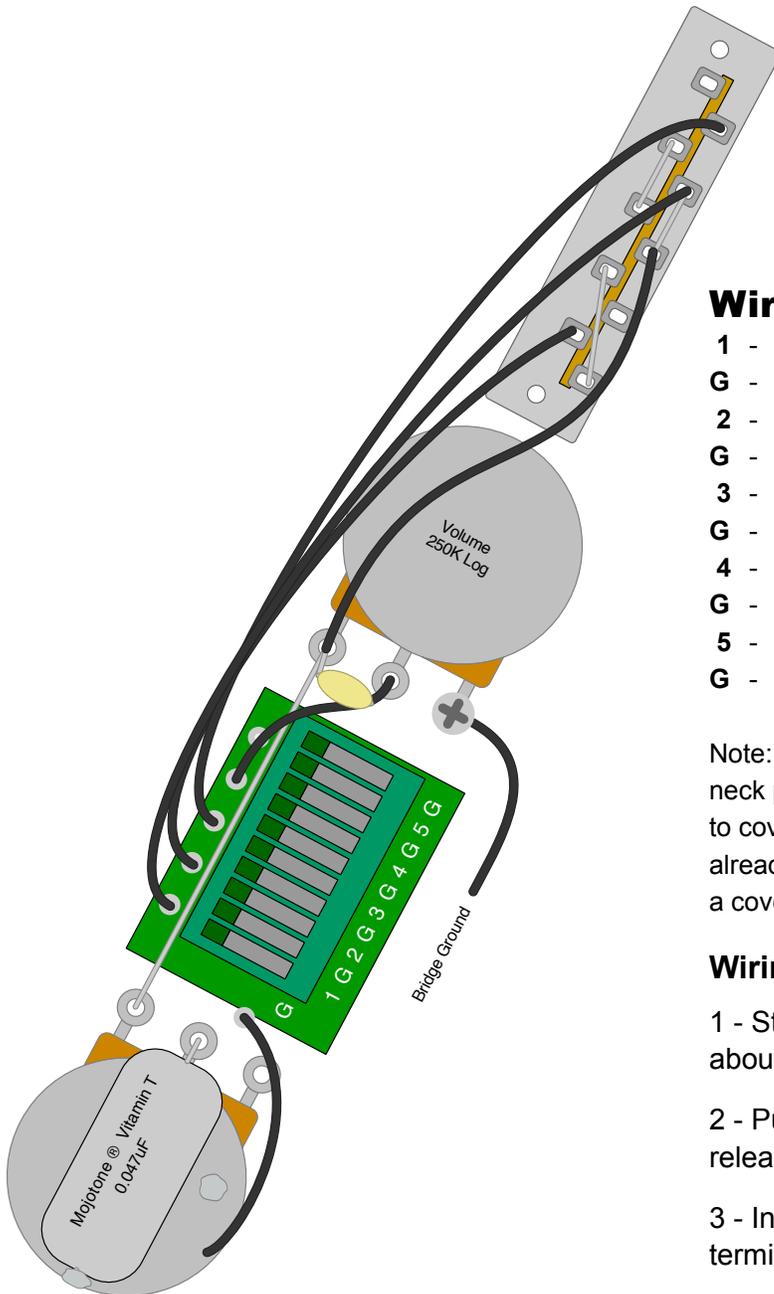

Wiring Reference:

- 1 - Neck Pickup Hot
- G - Optional Ground
- 2 - Neck Pickup Ground
- G - Neck Pickup Cover (See Note)
- 3 - Bridge Pickup Hot
- G - Bridge Pickup Ground
- 4 - Input Jack Hot
- G - Input Jack Ground
- 5 - No Connection
- G - Optional Ground

Note: The ground jumper wire must be lifted or cut from the neck pickup cover and an additional wire must be added to the to cover for shielding. Disregard this step if your neck pickup already has a 3rd wire attached to the cover or you do not have a cover.

Wiring Installation Instructions:

- 1 - Strip (PVC) or push back (Cloth) insulation to expose about 3/16" - 1/4" of the wire.
- 2 - Push button on solderless terminal to insert wire and release button to secure
- 3 - Insert ground wire from Tremolo/Bridge into the screw terminal on the volume pot. Tighten screw to secure.
- 4 - Plug in and test everything before final installation.

137 WORTH BEVERAGE DR • BURGAW, NC 28425

PH: 910.259.7291 • EMAIL: INFO@MOJOTONE.COM • WEBSITE: MOJOTONE.COM

© COPYRIGHT 2018. MOJOTONE® IS A REGISTERED TRADEMARK OF NOTHING SHOCKING LLC DBA MOJO MUSICAL SUPPLY