



---

# Installation Instructions

**ARK Carbon Fiber GT-Wing  
(CFXW-0703)  
for  
Hyundai Veloster (All Models)**

---

[www.arkperformanceusa.com](http://www.arkperformanceusa.com)

---

**Congratulations on purchasing an ARK Performance carbon fiber or fiberglass product!** Please read and understand the installation instructions before beginning work on the installation of your new ARK Performance carbon fiber or fiberglass product. If you do not fully understand the instructions, please give ARK a call at 909-947-1275 or email ARK at [info@ARKPerformanceUSA.com](mailto:info@ARKPerformanceUSA.com)

We recommend that any carbon fiber or fiberglass piece be **installed by someone qualified for this work or by a certified auto body shop** with access to the appropriate hand or power tools. By installing these ARK Performance carbon fiber or fiberglass products, you indicate that you have read the installation instructions and you agree with the terms and conditions stated.

It is your responsibility to **follow the installation instructions provided** for this ARK Performance carbon fiber or fiberglass product and exercise all necessary safety precautions. ARK Performance assumes no responsibility for damages occurring from improper installation, operation, maintenance, or from incompatibility with other manufacturer's products.

### **Important Information:**

#### **Exclusion of Certain Liability**

1. The manufacturer, importer, and dealer of ARK Performance products hold no responsibility for any incidental damage such as personal injury or any other damages due to improper installation or operation of ARK Performance carbon fiber or fiberglass products.
2. ARK Performance will not warranty any damages caused by improper installation, use, and/or maintenance of the ARK Performance carbon fiber or fiberglass products. The warranty is limited to defects that are recognized by our technical department, this excludes items subject to normal wear and shipping damages. This warranty is void in the case of an accident, modification, improper use, or competition use.
3. Do not install any ARK Performance carbon fiber or fiberglass part on a vehicle model for which it was not intended for.
4. Technical specifications of ARK Performance carbon fiber or fiberglass parts and related products are subject to change without notice.
5. Before removing any original body panels from your vehicle, please compare the parts that you received with the list of materials provided in the installation instructions. If anything is missing, contact ARK Performance before beginning installation.
6. The instructions for installation should serve as a guideline only, actual installation of the carbon fiber or fiberglass product may not correspond with the pictures entirely.
7. The process of uninstalling the original body panels may vary depending on the existing parts on the vehicle, so please follow the original body panel manufacturer's instructions for removal.

#### **Trademarks**

The ARK Performance logo is a registered trademark of ARK Performance Inc. USA.

#### **ARK Performance website**

Information about ARK Performance carbon fiber or fiberglass parts and related products is available on the ARK Performance website at: <http://www.arkperformanceusa.com/>

#### **Copyright**

No part of the ARK Performance carbon fiber or fiberglass product or its documentation may be reproduced or distributed in any form or by any means without the authorization and permission from ARK Performance Inc. USA.

© ARK Performance Inc. USA. All rights reserved.



## Contents

- Carbon Fiber GT-Wing—1
- Mounting Bracket—2
- Spacer—2 (For Turbo Model ONLY)
- Bolt/Nut—8
- Adhesive Tape
- Spacer Sheet

## Minimum Tools/Parts Required

- Basic Tool Set (screw drivers, sockets, etc.)
- Drill
- Rivet Gun
- Rivets

## Warning

- Before removing the original body panels, be sure to read over the installation instructions and fully understand them.
- If any items are missing or damaged during transit please contact ARK immediately before installation.
- We highly advise you to have an experienced person or certified mechanic/body shop install the body panels.
- Loosely fasten all nuts and bolts until everything is installed, then tighten them down to the proper torque specs as you align the body panels properly.
- These instructions are specific to the 2011+ Hyundai Veloster [All Body Styles]. However, please be sure to specify the exact year when purchasing body kit parts

## Installation of GT-Wing

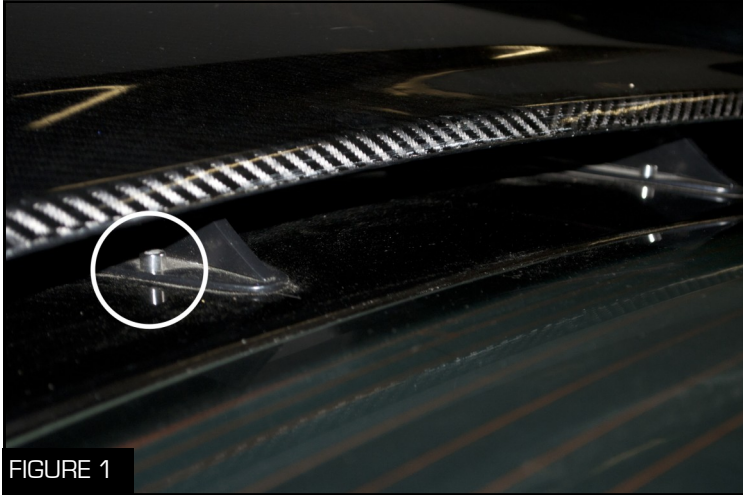


FIGURE 1

1. It is recommended to use rivets or small bolts to attach the brackets to the OEM spoiler (Figure 1)



FIGURE 2

2. It is recommended to use rivets to attach the brackets to the ARK GT-Wing, a second hole may need to be drilled in the bracket to place a second rivet (Figure 2)



FIGURE 3

3. Attach the bottom part of the brackets to the hatch door with the included bolts and hardware. Turbo Model ONLY will have spacers between bracket and hatch door (Figure 3)



FIGURE 4

4. Trace and cut the spacer sheet so that each bracket has a small sheet between it and the vehicle (Figure 4)

5. Be sure everything is aligned properly before tightening everything down or finishing the rivets



## First Operation/Maintenance

Be sure to check that the bolts, rivets, etc. are tightened down and securely fastened.

Take the vehicle for a test drive and listen for any odd noises or vibrations. If there are any, go back through the installation instructions and be sure everything is properly tightened.

Be sure to clean your carbon fiber or fiberglass product regularly, also it is always a good idea to keep any carbon fiber part out of the direct sun for extended periods of time.

