



Saporiti

ABC Bookcase

Knock Down Assembly instructions

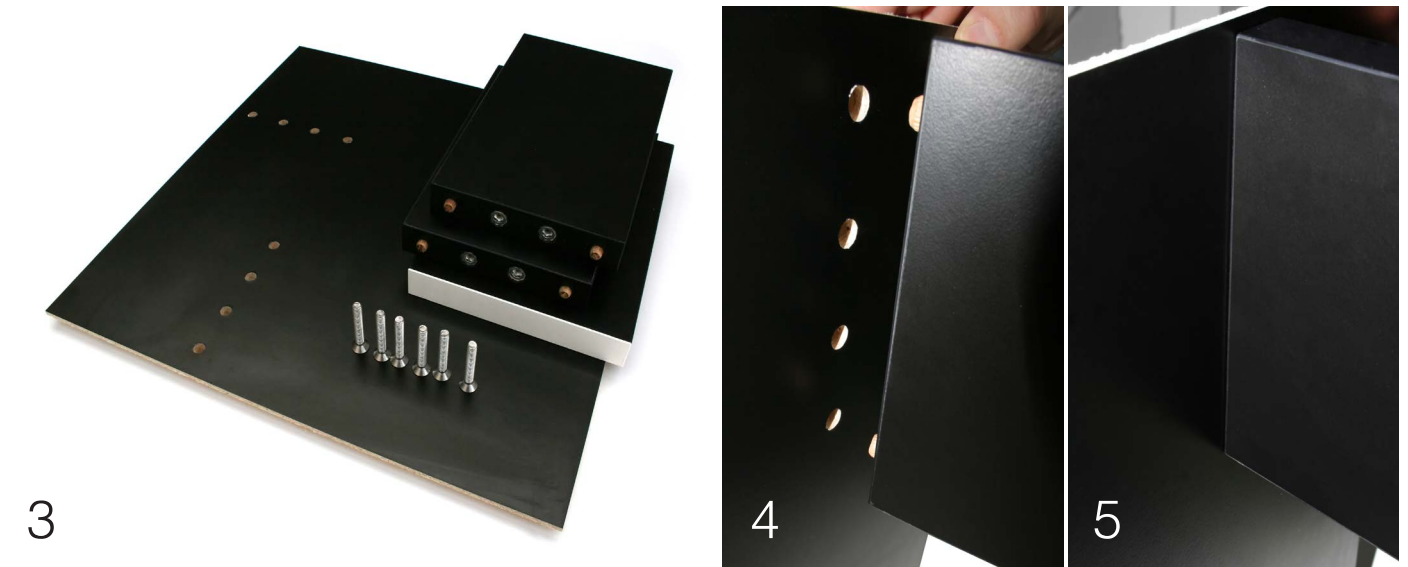

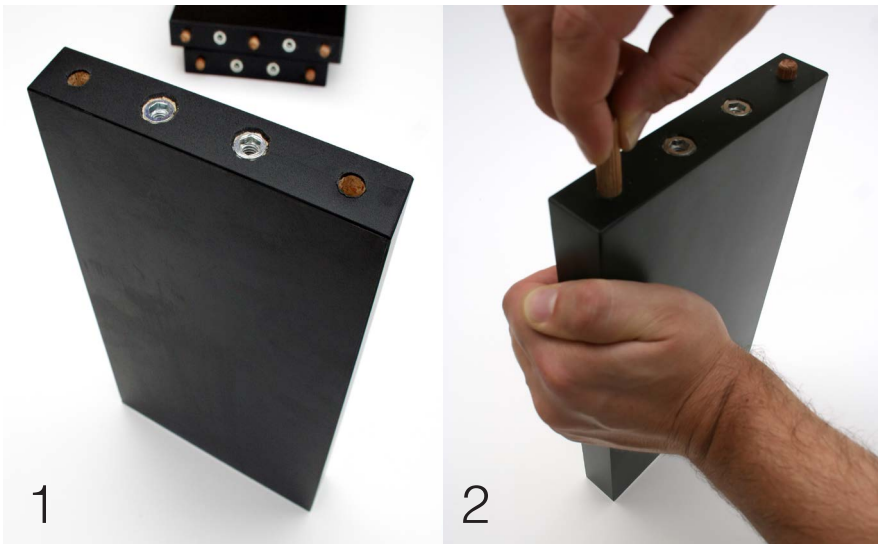

Tighten firmly
all the screws





8

Minifix
hardware



9



10




11




12



13

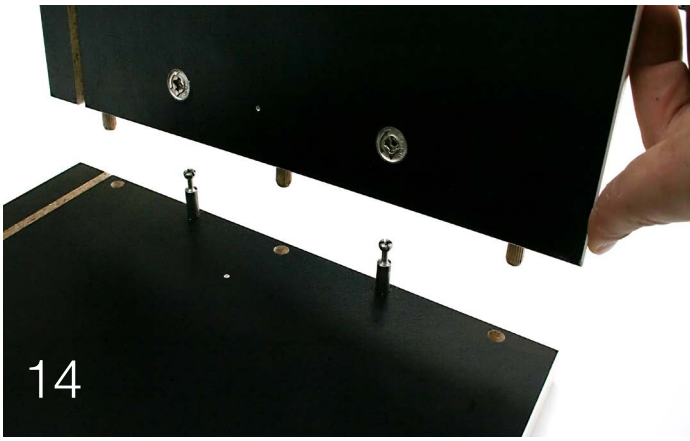

Tighten the minifix hardware clockwise

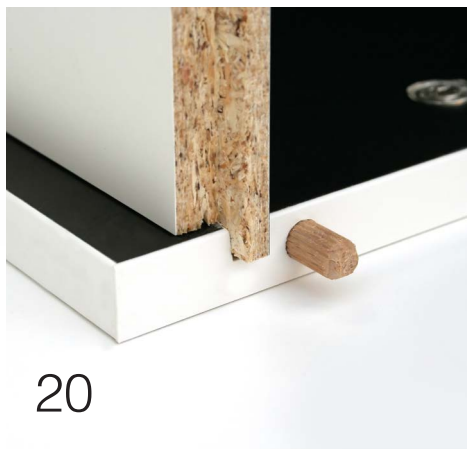



Before placing the caps make sure to tighten firmly all the minifix hardware



31 > 34 for wall modules only:

31

32

33

34

