



**PROTECT HOME & FAMILY – “LOCK IT UP”**

**WITH OUR ADVANCED PET DOOR SECURITY COVER**

**INSTALLING YOUR NEW WATCHDOG SECURITY PET DOOR COVER**

WE ALWAYS RECOMMEND INSTALLING YOUR WATCHDOG SECURITY PET DOOR COVER ON THE OUTSIDE FOR MAXIMUM SECURITY, HOWEVER IT CAN BE INSTALLED ON THE INSIDE AS LONG IT IS SECURELY FASTENED.

**TOOLS NEEDED**



LEVEL, PENCIL, THREAD-LOCK ADHESIVE (NOT INCLUDED),  
HEX BIT WRENCH (FOR DOOR ENTRY DOOR INSTALLATION) &  
APPROPRIATE DRILL BIT & DRILL.

**CHOOSE TYPE OF INSTALLATION METHOD**

**1) INSTALLATION ON TO AN ENTRY DOOR:**

- USE PROVIDED 2 ¼” LONG 5/16”-18 TAMPER RESISTANT SCREW & 5/16”-18 TEE NUT

**(USE A 3/16 HEX NUT WRENCH – NOT INCLUDED)**

**2) INSTALLATION ON TO A BLOCK WALL:**

- USE PROVIDED #12 BY 1 ½” LONG TAMPER RESISTANT WOOD SCREWS & PLASTIC ANCHORS. YOU WILL ALSO NEED A 3/8” MASONARY DRILL BIT (NOT INCLUDED).

### 3) INSTALLATION ON TO A WOOD CLAD:

- USE PROVIDED #12 BY 1 ½" LONG TAMPER RESISTANT WOOD SCREWS. IT IS BEST TO PILOT THE SCREWS WITH A 3/32" WOOD OR METAL DRILL BIT (NOT INCLUDED).

### 4) INSTALLATION ON TO A STUCCO CLAD SURFACE:

- USE PROVIDED #12 BY 1 ½" LONG TAMPER RESISTANT WOODSCREWS & PLASTIC ANCHOR. YOU WILL NEED A 3/8" MASONARY BIT (NOT INCLUDED).
- 

## **INSTALLATION OF YOUR NEW WATCHDOG SECURITY PET DOOR COVER**

FOR THE BEST RESULTS, THE WATCHDOG SECURITY PET DOOR COVER MUST FIT FLUSH TO THE WALL OVER THE EXISTING PET DOOR FRAME.

### **STEPS:**

- 1) REMOVE THE DOOR FROM THE FRAME. YOU WILL FIND IT TO BE EASIER TO INSTALL THE DOOR FRAME. WITH YOUR PENCIL MAKE A MARK ON THE TOP OF YOUR NEW DOOR AT 7 ¾" OR ON THE CENTERLINE.



2) NOW MARK THE CENTERLINE OF YOUR EXISTING DOOR AS YOU WILL NEED TO LINE THESE TWO MARKS UP LATER TO CENTER THE DOOR.



3) THEN DO THE SAME ON THE SIDE OF THE NEW DOOR AT  $11 \frac{3}{4}$ ".



4) NOW MARK THE CENTER LINE OF THE SIDE OF THE EXISTING PET DOOR THESE LINES WILL ALSO BE LINED UP LATER TO CENTER YOUR NEW DOOR.



5) WITH A LEVEL CHECK TO SEE IF YOU'RE EXISTING PET DOOR IS LEVEL IF IT IS YOU CAN USE IT TO LEVEL YOUR WATCHDOG SECURITY PET DOOR. IF YOUR EXISTING DOOR IS NOT LEVEL IT MAY NOT BE SQUARE, YOU MAY NEED TO ADJUST IT SO THAT THE DOOR OPENINGS LINE UP TO EACH OTHER.



6) SET THE NEW SECURITY PET DOOR ON TOP OF THE EXISTING PET DOOR & MAKE SURE THE CENTERLINES ON THE **VERTICAL SURFACE** OR ON TOP OF THE FRAME LINE UP MAKE TWO MARKS ON THE SIDE ONE AT TOP AND ONE IN THE MIDDLE. YOU WILL USE THESE TWO MARKS TO CENTER THE DOOR LATER.



7) NOW USING THE EXISTING PET DOOR, SLIDE THE WATCH DOG SECURITY PET DOOR UP TO THE SIDE OF THE EXISTING PET DOOR AND MOVE IT UP UNTIL THE LINES YOU HAVE MADE ON THE SIDE AND IN THE MIDDLE OF EACH DOOR LINE UP. NOW MAKE TWO MARKS ON THE TOP USING THE NEW DOOR AS A GUIDE.



8) NOW USING THE TWO MARKS YOU HAVE MADE ON THE TOP, SIDES & CENTER TO SQUARE UP YOUR WATCHDOG SECURITY PET DOOR. PENCIL IN THE FIRST HOLE AT THE TOP CORNER OF YOUR WATCHDOG SECURITY PET DOOR. TO LOCATE THE POSITION OF FIRST MOUNTING HOLE TO BE DRILLED.



9) REMOVE THE DOOR AND DRILL THE CORRECT SIZE HOLE WHERE MARKED. THE SIZE OF THE HOLE WILL CHANGE BASED ON APPLICATION OF FASTENERS.



- 10) INSTALL THE TAMPER RESISTANT SCREW WITH THE INCLUDED BIT (DO NOT TIGHTEN YET, YOU MUST ALIGN AND DRILL THE REMAINING THREE HOLES).



- 11) LEVEL THE DOOR AND REPEAT STEP #8, #9, & #10 MARK, DRILL & TEMPORARILY INSTALL UPPER CORNERS WITH TAMPER RESISTANT SCREWS. NOW MARK BOTH BOTTOM HOLES, REMOVE DOOR, AND DRILL THE BOTTOM TWO HOLES. YOU ARE NOW READY TO INSTALL THE FRAME. FIRMLY TIGHTEN THE SCREW HARDWARE (APPLY THREAD-LOCK ADHESIVE) TO COMPLETE THE INSTALLATION.



# COMBINATION LOCK INSTRUCTIONS

## Using the Combi-Bolt

### Changing Your Combination

Determine your new code before starting to change the combination. Writing down the code and storing it someplace safe is always a good idea with combined devices.


Set the dials to the current combination. Note: All Combi-Bolts are manufactured with their combination set to **0-0-0-0**.

#### (SEE DIAGRAM BELOW)

Step 1. To initiate the change, first lift the handle up and then slide it back completely. The finger grip will slide down into a notch when it is all the way back. The Combi-Bolt is now in change mode.

Step 2. Turn the dials to your new combination.

Step 3. Lift the handle up and then slide the bolt forward completely. Note: The Combi-Bolt is now out of change mode. The combination on the dials is now the current code. **PLEASE DO NOT FORGET THE CODE AS THERE IS NO WAY TO RESET THE LOCKING CODE WITHOUT THE CURRENT CODE.**

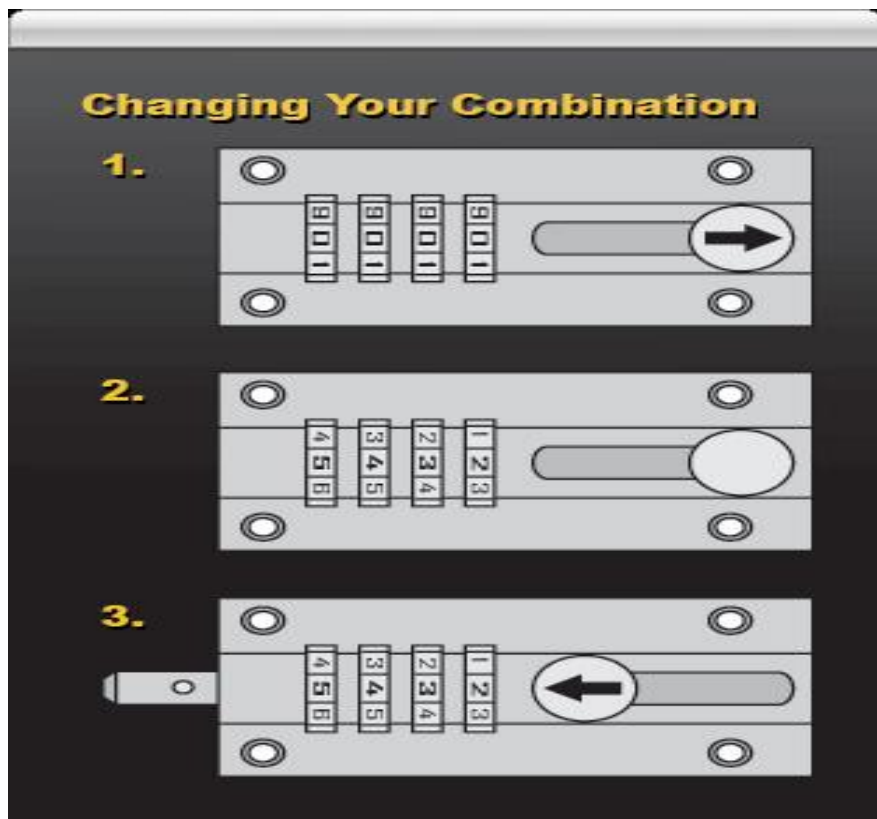





**CONGRATULATIONS ON INSTALLING YOUR  
WATCHDOG SECURITY PET DOOR COVER  
“LOCK IT UP”**



**RETURN POLICY** - Before returning a product you must contact Pet Pro Supply Co. for a return authorization. Contact us at [support@petprosupplyco.com](mailto:support@petprosupplyco.com).

**30 Day Warranty** If for any reason you are not satisfied with the performance of any equipment within the 30 day warranty, you may return it for a full refund. All 30 day warranty returns must be in “as-new” condition with the original packaging (also in “as-new” condition). All instruction manuals, accessories, parts, etc. which came with the original shipment must be returned. Prior to returning items, please call Watchdog Security Pet Doors at 800-242-5093 in order to receive shipping instructions and a RMA number. Refunds will be issued after the equipment is received, inspected and verified to be in good working condition. Note: if the products are worn to the point they can’t be resold “as-new” products the 30 day warranty is void. **Shipping costs are non-refundable. Some products may require a re-stocking fee.**

**Manufacturer Equipment Warranty** - This warranty covers any failure of the equipment due to defective material or workmanship. This warranty is provided by the equipment manufacturer and is void if the equipment has been used for purposes other than its intended purpose, abused, or damaged due to improper handling or installation.