

LAWLESS GARAGE B-Bars for Indian Chief 22+

Hardware included:

- 1-Sliders (UHMW or aluminium)
- 2-Bottom bolts
- 3-Sliders bolts
- 4-Top bolts
- 5-Lock nut
- 6-Shim
- 7-Loctite
- 8-Washer(Not shown) *Comes with UMHW sliders




Tools Needed:

T1-15mm socket

T2-8 mm Allen


T3-17mm Wrench

T4-Ratchet

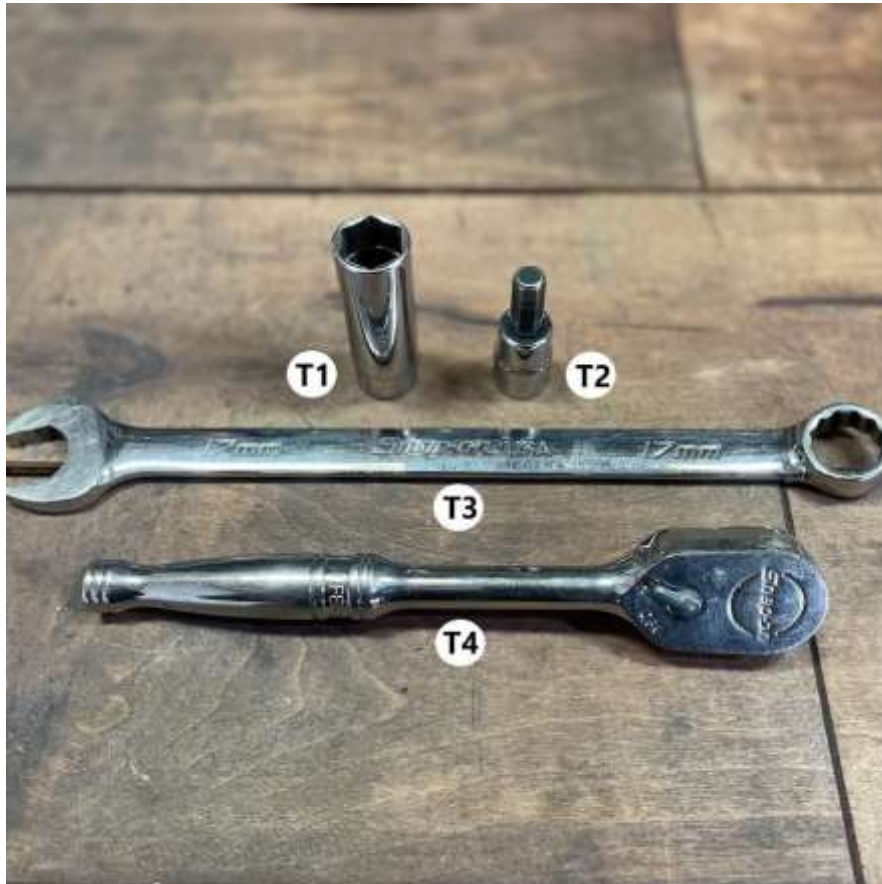


IMPORTANT: You need to be two people to install the B-Bars. Make sure you put a bit of loctite at every step, everytime you fix a bolt. EXCEPT FOR HARDWARE NUMBER 5

Step 1 : Remove the OEM 15 mm bolts and the 17 mm nut that locks the top bolt on the “clutch” side of the bike. You can put away your stock hardware, you will not need it the installation.

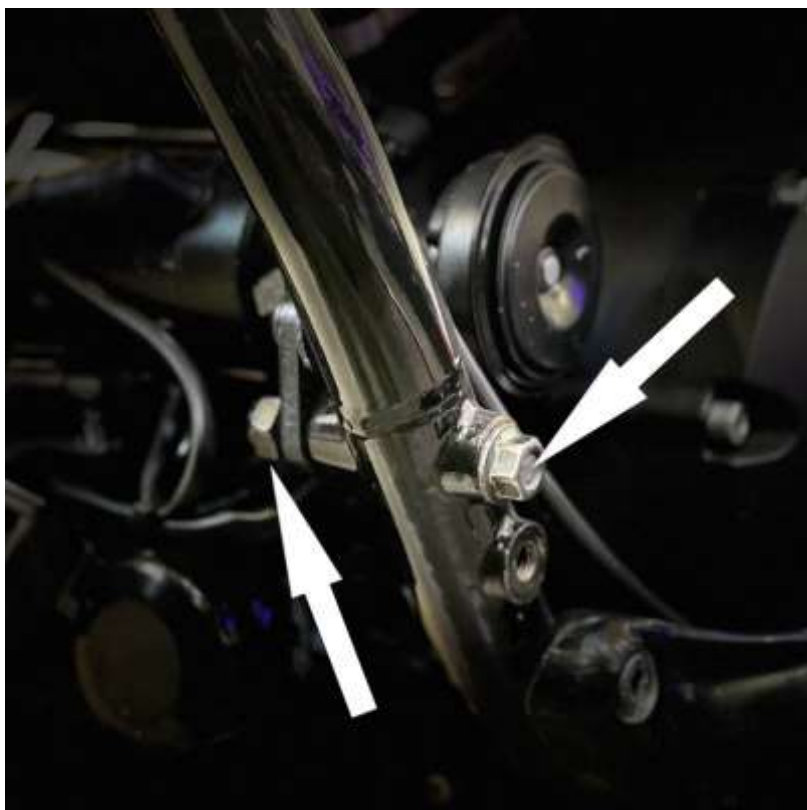

Step 2 : Take your B-Bars and put it in place. Take a bolt number 4 and insert it in the top whole, clutch side.

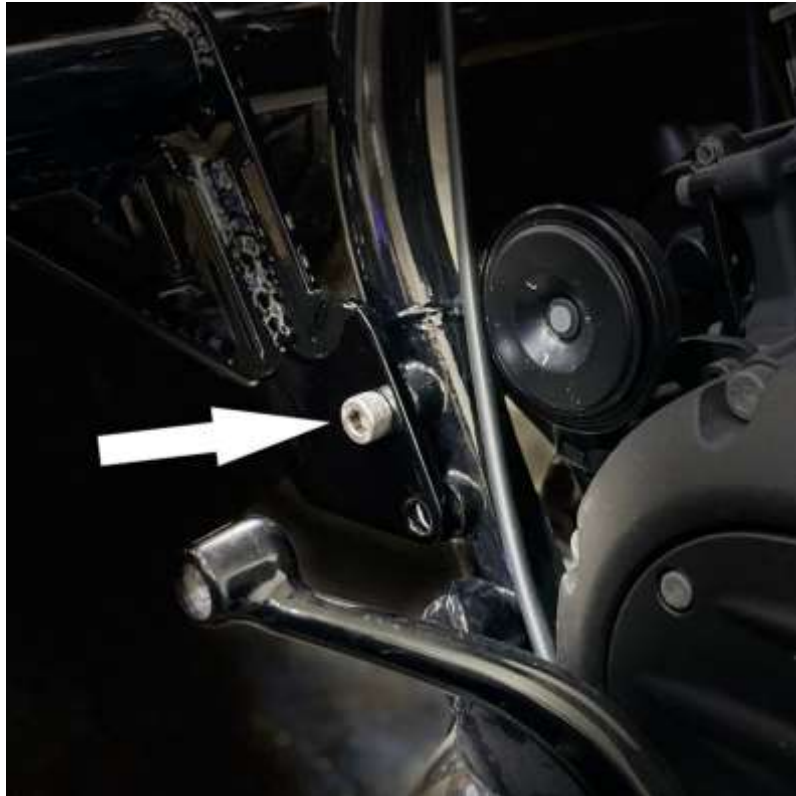

Step 3 : On the Throttle side (Right side of the bike), install both top and bottom bolts (Bolts 4 and 2). ****Make sure the bolts are not too tight so you can adjust the distance between the frame and the B-Bars.**



Step 4 : Clutch side (Left side of the bike), put the shim in place and install the number 2 bolt in the bottom. **Make sure the bolts are not too tight so you can adjust the distance between the frame and the B-Bars.



Step 5 : Once the bars is adjusted, tighten the bottom bolts at first, the top bolt on the throttle side in second, and finish with the locknut (Hardware number 5) on the clutch side.



Step 6 : Put your sliders (Hardware number 1) in place and fix them with bolts number 3



Step 7: Enjoy your ride! Any questions? lg.distribution@hotmail.com