


ANCHORING SYSTEM(PROJECT TYPE)

PROCEDURE = HOW TO FIX AN ACNHOR KIT ON THE FLOOR

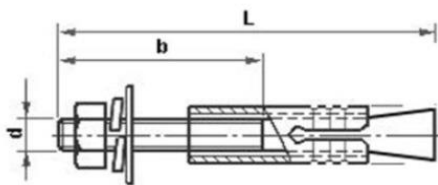


d	L(mm)	b(mm)
3/8 inch (M10)	6 inch (150 mm)	120mm

1. Drill a Hole(14mm diameter) on the Floor.
2. insert an Anchoring bolt with the anchoring pipe on.
Place the safe on an anchor hole with an anchoring bolt
3. Insert an anchoring punch on an anchoring bolt. And, hit it by a hammer.
5. Assemble the washer, spring washer and nut to fix the bolt.



**Anchoring punch
(We do not supply it)**

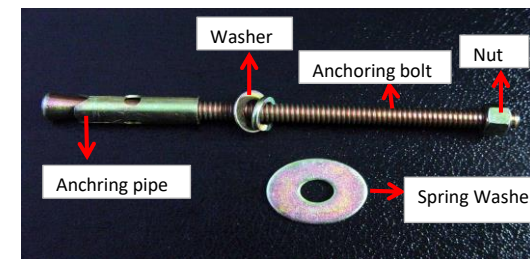

Anchoring kit

Installation anchoring system on the Wooden furniture is all the same but the length of the anchor bolt you could cut it not to project over the safe floor.