

# T050802013 - OFFGRID SPARE WHEEL BAG

**DARCHE**  
OUTDOOR GEAR

## IMPORTANT

Before setting up for the first time read the instructions carefully.

## CARE INSTRUCTIONS

Periodically check the buckles and webbing straps to ensure they are tightened securely around the spare wheel.

Clean the wheel bag fabric with a soft cloth and a mix of mild detergent with warm water.

Please note the external material will fade over time.

## DARCHE.COM.AU

Designed and tested in Australia  
for Australian conditions

A brand by Charles Parsons.

Telephone: 1300 367 695

Email: [info@darche.com.au](mailto:info@darche.com.au)


Address: 75 Heyington Avenue  
Thomastown VIC 3074, Australia

**DARCHE: LEADERS  
IN OUTDOOR DESIGN,  
PROUDLY AUSTRALIAN.**

V1 - APR 2024


### STEP 1.

Use a socket set to unlock the wheel nuts on your spare wheel, then loosen the wheel nuts as far as they will go, whilst still being threaded on.

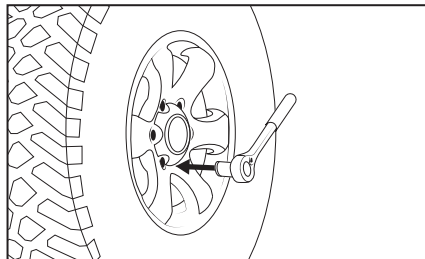


### STEP 2.

Bring the spare wheel all the way forward.

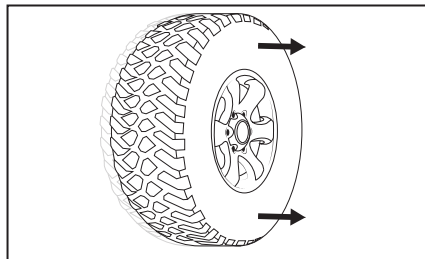


### STEP 3.

Extend both webbing straps all the way out to about 10cm from the end.

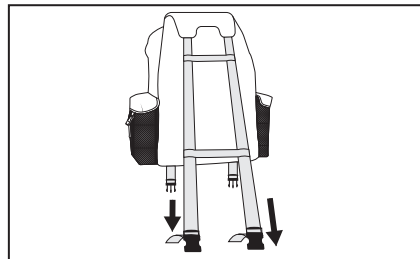


### STEP 4.

Unclip both buckles of the wheel bag webbing straps then assemble the wheel bag over the spare wheel. Locate the top two clips over the wheel and position them over and pull both straps down the back of the wheel as far as they will go.

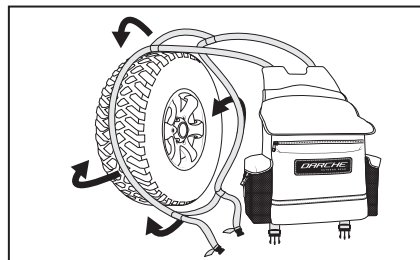

### STEP 5.

Wedge the wheel on one side to allow some space to get in behind the wheel. Bring the bottom strap under the wheel, attach the buckles at the base of the wheel and then tighten the strap. Repeat the process on the other side, tightening the second strap.

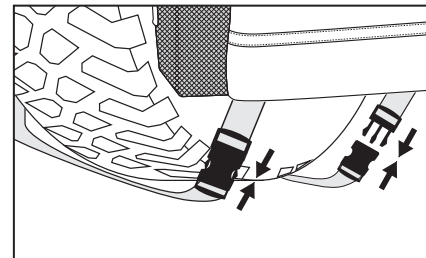

### STEP 6.

With both straps tightened and the wheel bag on tight, move the wheel back in and then tighten up the wheel nuts by hand. Use the socket set to continue tightening the wheel nuts until all are all secure.

