


HOW TO MOUNT TOP BOX ADAPTER PLATE ON KTM ADVENTURE 250 / 390


STEP 1

Remove two stock bolts from grab rail

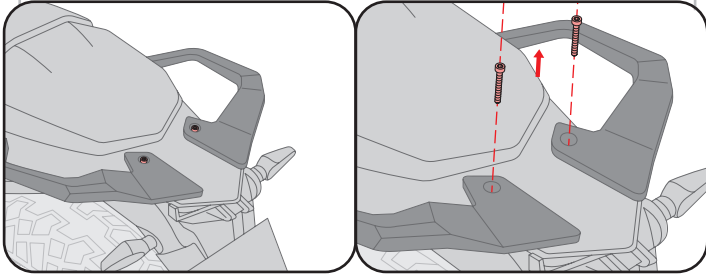


STEP 2

Insert spacers in grab rail holes

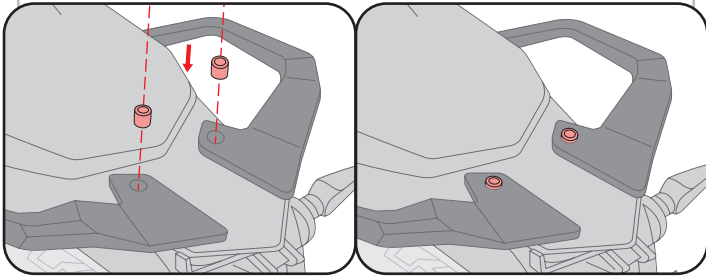


STEP 3

Slide base grabs on the grab rail tail part and match front two holes of base grab with spacers

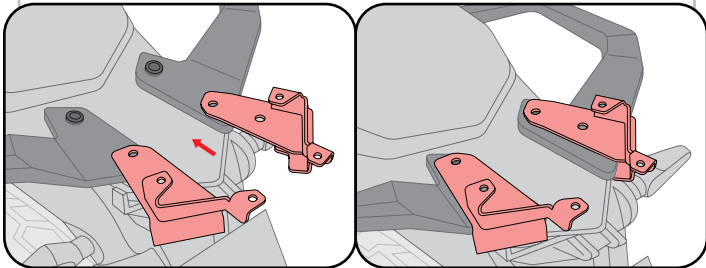


STEP 4

Insert two M8X50mm bolts with nylon washer into the base grabs front holes

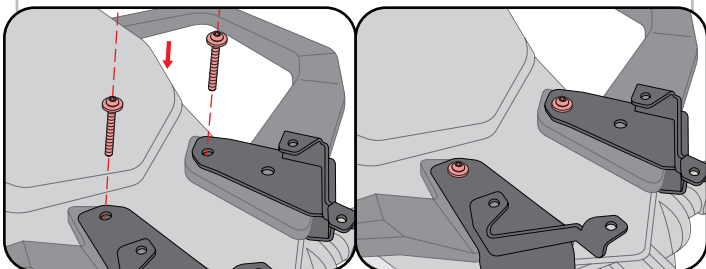


STEP 5

Put four spacers on the base grabs four holes, which is located at raised part of base grabs

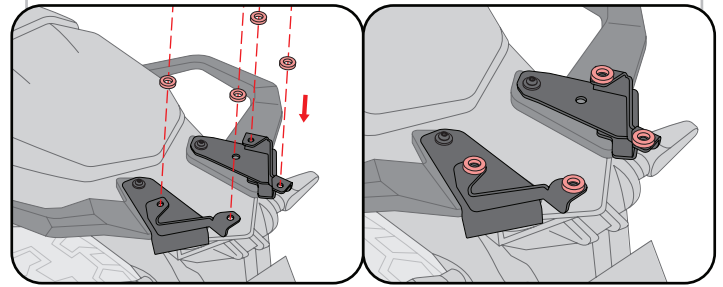


STEP 6

Put adapter plate on spacers and match plate holes with spacers and base grabs holes

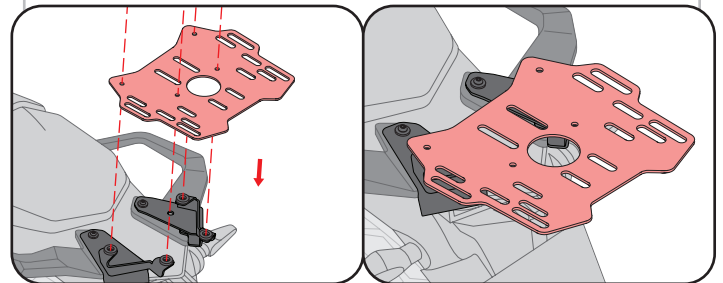

STEP 7

Insert four M6X50mm bolts with SS washers into the adapter plate holes

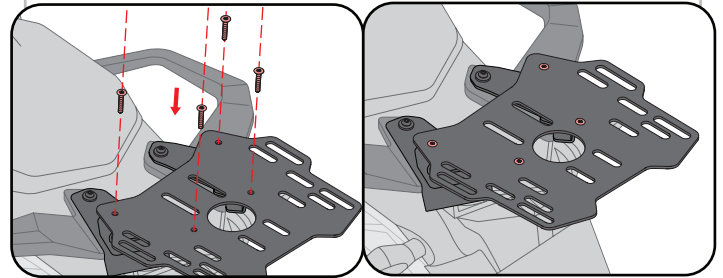

STEP 8

Tighten the four M6 nyloc nuts with washers on the M6X50 bolts

