

M10 WASHER

CROSS MOUNT [RIGHT]

TOP MOUNT [RIGHT]

M8 X 40

M8 WASHER

POM ACETAL SPACER



TRAPEZIUM [RIGHT]

M8 NYLOC NUT

BOTTOM MOUNT [RIGHT]



M8 X 30 BUTTONHEAD
ALLEN SCREW

M8 X 30
FLATHEAD SCREW

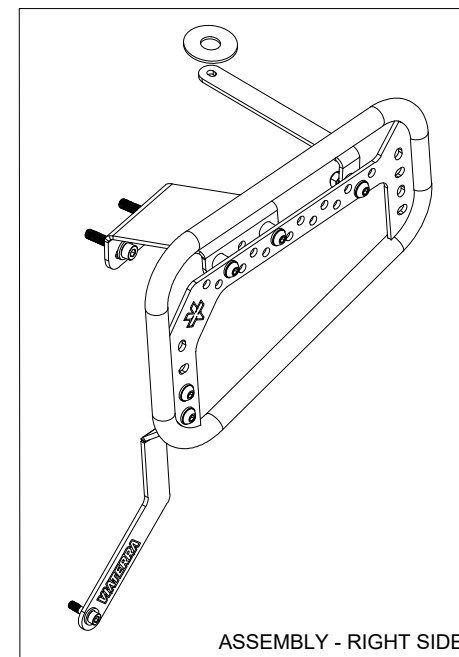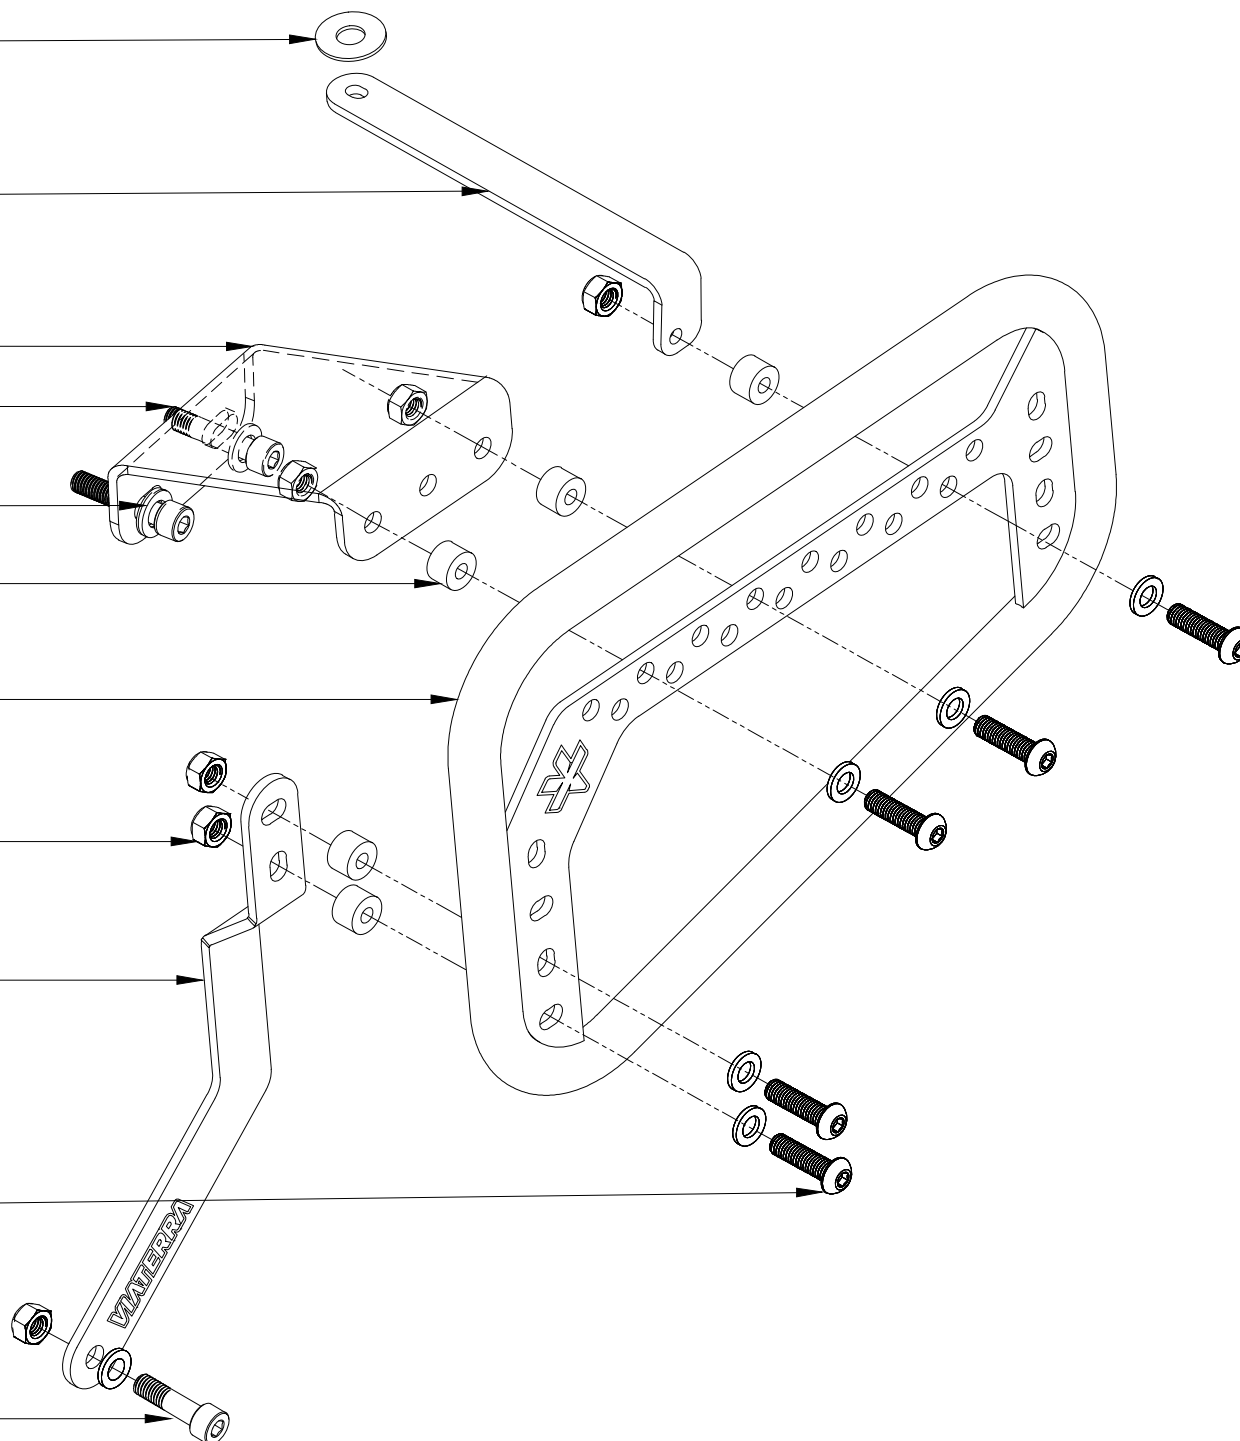

ASSEMBLY - RIGHT SIDE

NOTE: PLEASE REFER LEFT & RIGHT STICKERS ON THE RESPECTIVE PARTS

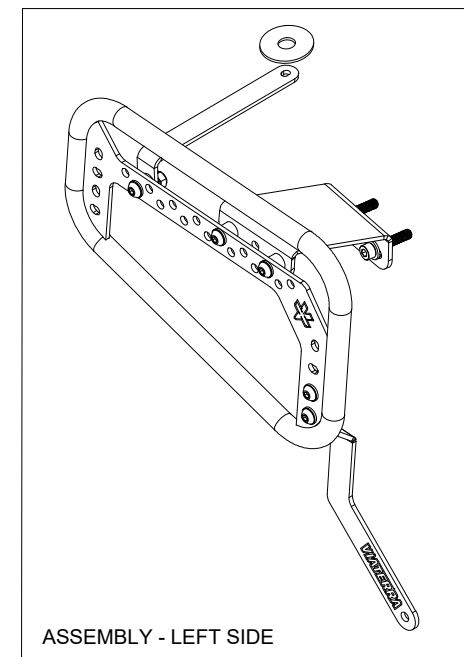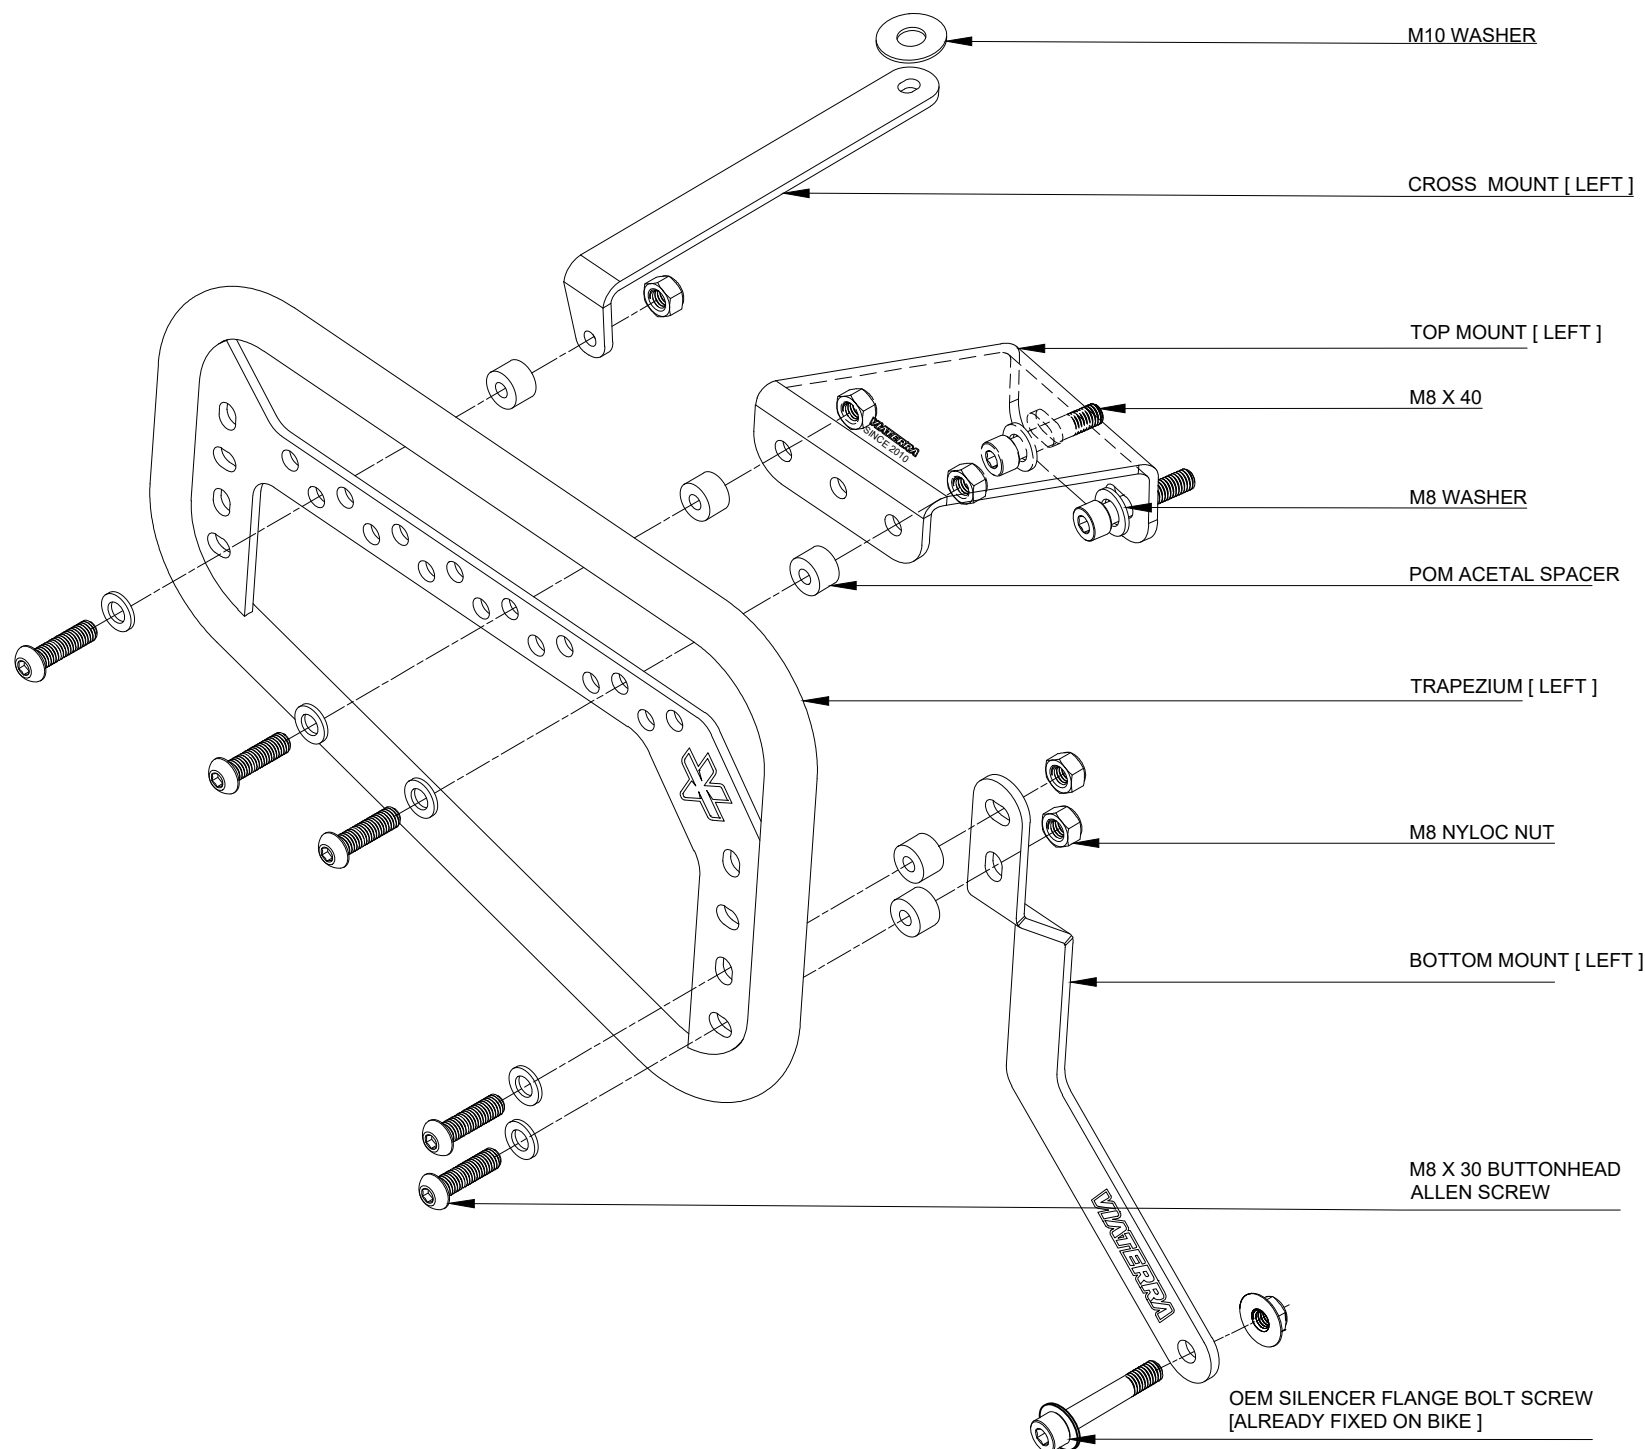

		RE HIMALAYAN SADDLE STAY EXPLODED VIEW [LEFT SIDE]
Sr.No.	PART NAME	QTY
1	TRAPEZIUM	2
2	TOP MOUNT	2
3	CROSS MOUNT	2
4	BOTTOM MOUNT	2
5	M8 X 40 ALLEN SCREW	4
6	M8 X 30 ALLEN SCREW [FLATHEAD]	1
7	POLYMER SPACER	10
8	M8 X 30 BUTTONHEAD ALLEN SCREW	10
9	M8 WASHER	15
10	M8 NYLOC NUT	11
11	M10 WASHER	2

NOTE: PLEASE REFER LEFT & RIGHT STICKERS ON THE RESPECTIVE PARTS