

What the SOT?! Transistor Footprint PCB Ruler

FEATURES


- ◆ 8" PCB Ruler
- ◆ 1/32" and 0.1" marks
- ◆ cm marks
- ◆ Every transistor pattern imaginable
- ◆ Every SOT, SC, and TO name for each pattern, plus more!
- ◆ Organized biggest to smallest
- ◆ FET and BJT symbols

APPLICATIONS

- ◆ PCB Layout
- ◆ Sourcing alternate parts

DESCRIPTION

If you're staring bleary-eyed at a parametric search result, wondering what the heck a SOT-457 footprint is, we have just the ruler for you. Introducing **WHAT THE SOT?!**, PCB layout's hottest new ruler. This ruler has EVERYTHING: SOTs, SCs, TOs, even DFNs. So the next time you're playing everyone's favorite game "Crap, my transistor is out of stock and I need to re-order these boards", you'll know exactly which footprints you can substitute. By the way, a SOT-457 is the same as a SOT-23-6. Or a SOT-26. Or a SC-59-6. Because you can never have too many standards.

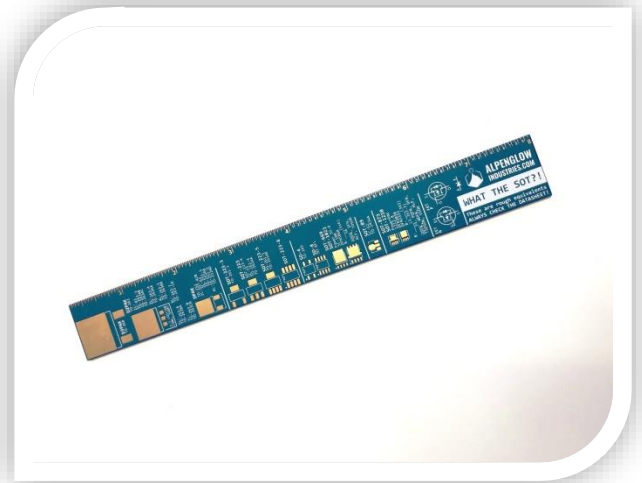

YOU MAY ALSO LIKE

RUL-0002
For the Love of SOD
Diode Footprint PCB Ruler



CONNECT WITH US!

We love to see what you do with our products!
Tag us in your posts and use #frivolouscircuits or #alpenglowindustries.

Instagram: @frivolous.circuits
YouTube: Alpenglow Industries
Email: info@alpenglowindustries.com