




Yamaha Wolverine RMAX X2 - X4 (2020 - 2021+)

UHMW Front A-arm Guard Installation Guide. Fits both Rmax x2 & Rmax x4 models.

Installation Requires:
 10mm socket.
 Use of Thread locking compound is strongly recommended.

= 10mm

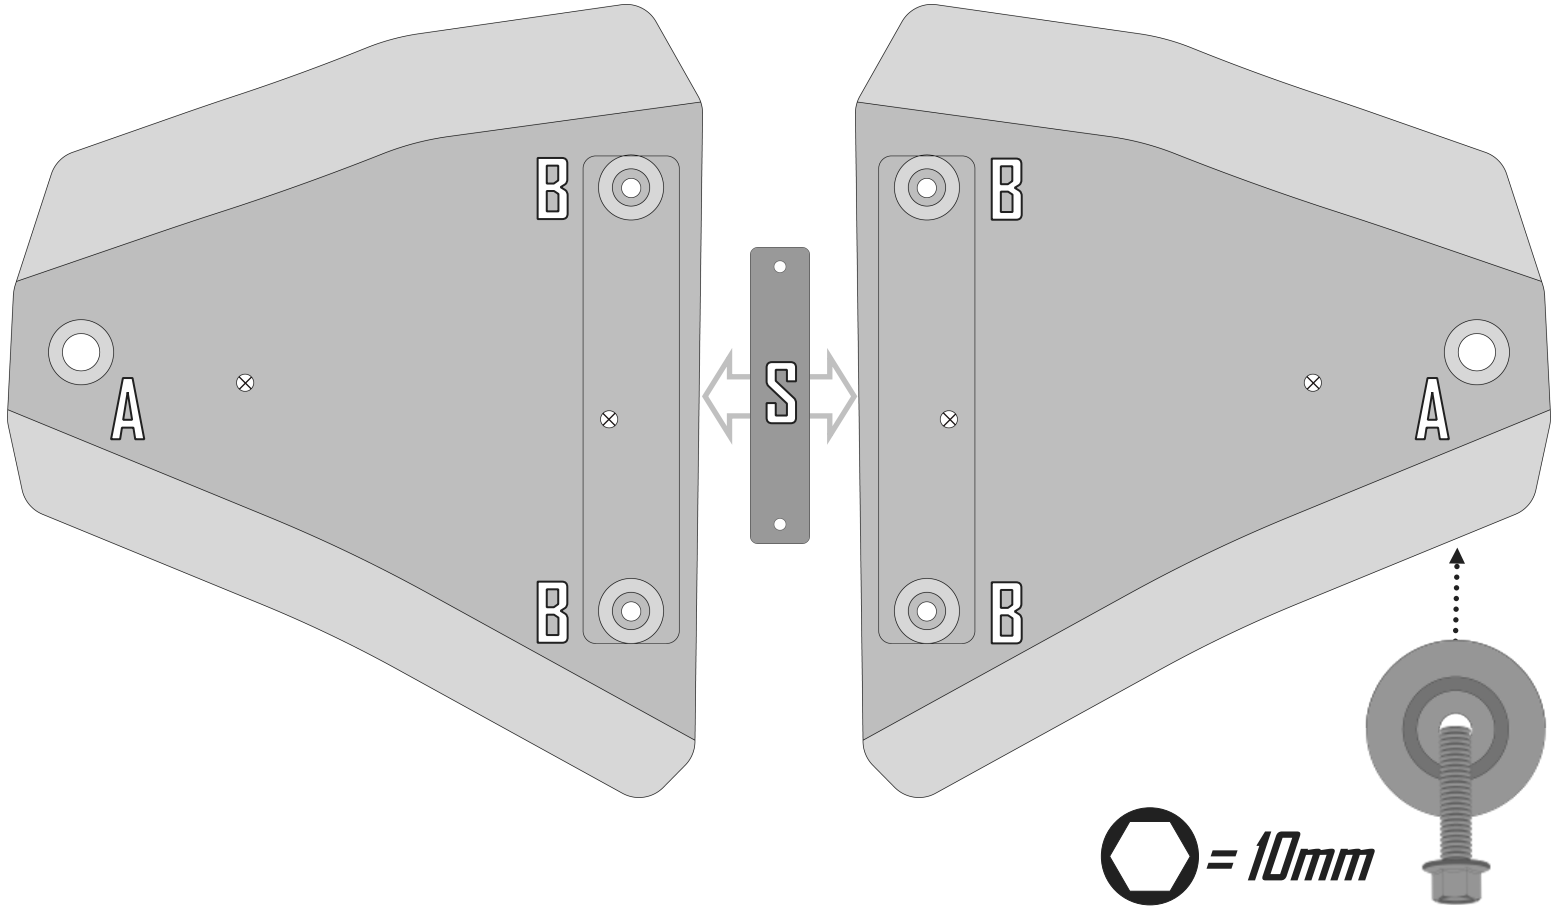

Front A-arm Guard Installation :

First:

Hold A-arm guard in place,
 Install : (2x) M6- 1.0 x 20mm Flange Bolts in (A) locations.

Second:

Slide (S) Spacers in-between A-arm and A-arm Guards,
 Install : (4x) M6- 1.0 x 40mm Flange Bolts in (B) locations
 to fasten A-arm guards and spacers.
 Fasten securely before use.

#1 Front A-arm Guard Hardware

	2x
	4x
	4x
	6x
	2x

M6- 1.0 x 20mm Flange Bolt (#B-A:5)

M6- 1.0 x 40mm Flange Bolt (#B-A:9)

Counter Sunk Washers (#W-1)

1/2" UHMW Spacer (#S-C:16)

⊗ = Drainage Holes
 Do Not Use For Mounting