

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730



E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



Polaris RZR XP 1000 A-Arm Instruction Guide

Ultra. High. Molecular. Weight. polyethylene all terrain A-Arm guard protection

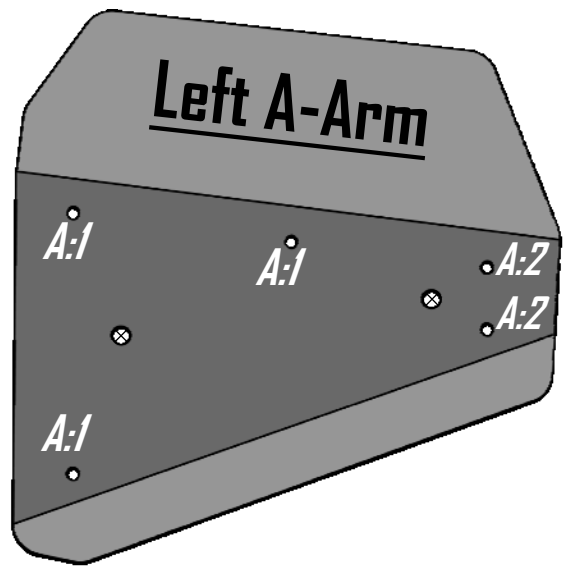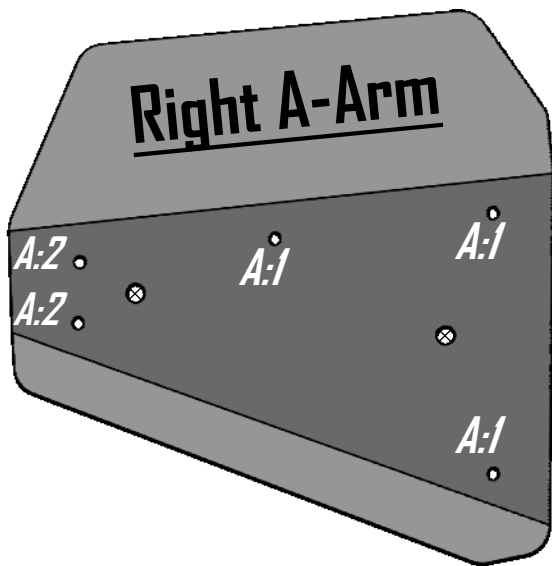

⊗ = Drainage Holes

A-Arm Guards Installation Instructions

Install : (3x) *"D"* clamps over A-Arm tubing on each A-Arm.

Use: (3x) 1/4"-20 x 1 1/4" Counter Sunk Bolts, with (3x) 1/4" Gold Washers, and (3x) 1/4"-20 Ny-Lock Nuts *in: (A:1) locations.*



Install:

(2x) 1/4"-20 x 1 1/2" Counter Sunk Bolts, with (2x) 1/4" Gold Washers, and 1/4"-20 Ny-Lock Nuts through stock mounting holes at the apex of A-Arm *in: (A:2) locations.*

***Ensure** Clearance For Turn Radius &

Vertical Travel Before **Fastening ALL Bolts Securely.**

(We strongly recommend the use of a "Thread Locking Compound" when installing any mounting hardware.)

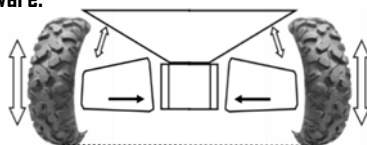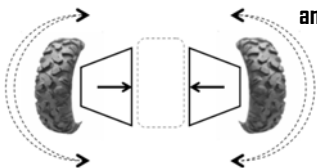

A-Arm Hardware

