

Contact Us: FACTORY UTV LLC.

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



U.H.M.W. Skid Plate / Under Armor Package

Ultra. High. Molecular. Weight. Polyethylene All Terrain Skid Plate / Under Armor Kit For UTV's

Installation guide







Can Am Maverick MAX (2015+)

Covers : DPS, XRS And Turbo Models



Can Am Maverick Max (2015+)




Skid Plate Hardware

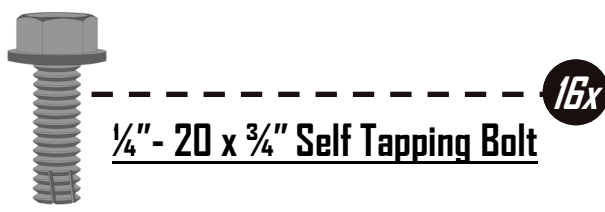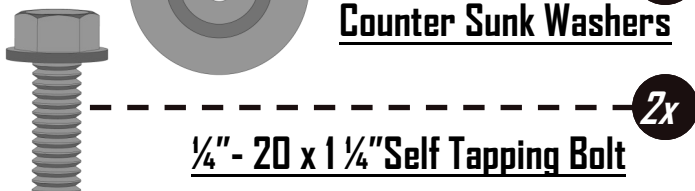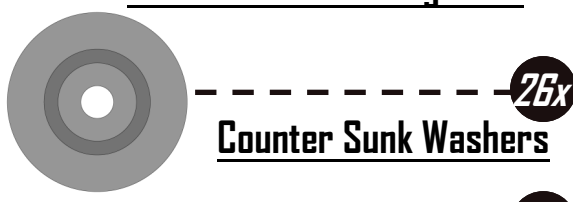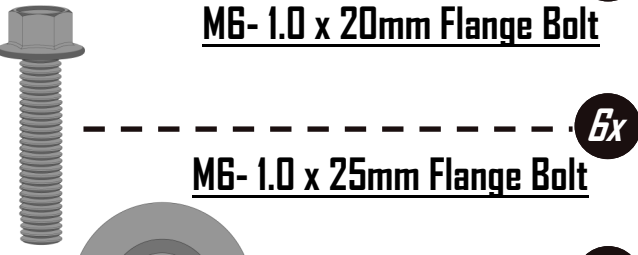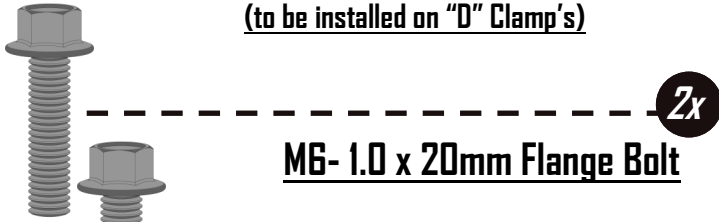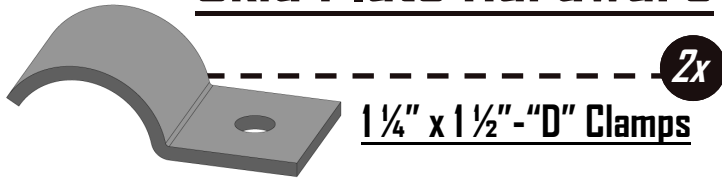

Re-Use
Stock Hardware
As Needed.
Skid plate will form to chassis as bolts are fastened securely.

Stock Hardware
Counter Sunk Washers
Washers
M6- 1.0 x 20mm
Thread Forming Bolts

A-Arm Hardware

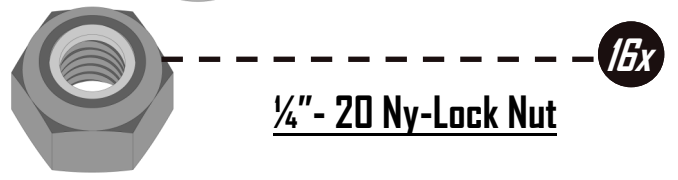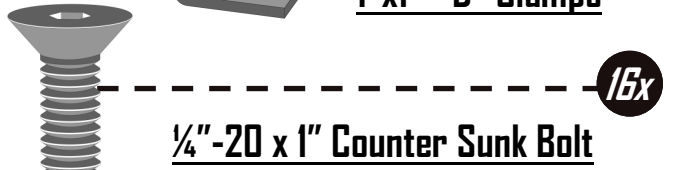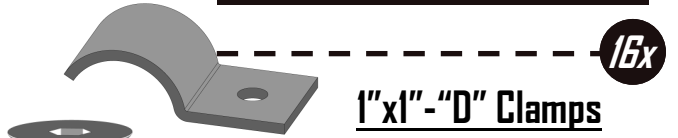

*Drilling Instructions : *

Use a : #N_o7 - OR- 13/64th drill bit and / or a 1/4 inch - 20 Tap
(one size above the commonly available 3/16th bit)





To drill and thread self tapping bolts in to chassis frame.

Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We strongly recommend the use of a Thread Locking Compound when installing any mounting hardware.
(When installation is complete , ensure all bolts are fastened securely.)

Can Am Maverick Max (2015+)

Re-Use All Stock Hardware.
Finger Tighten All Bolts Before, Fastening Bolts Securely.
 ⊗ = Drainage Holes
 Do Not Use For Mounting

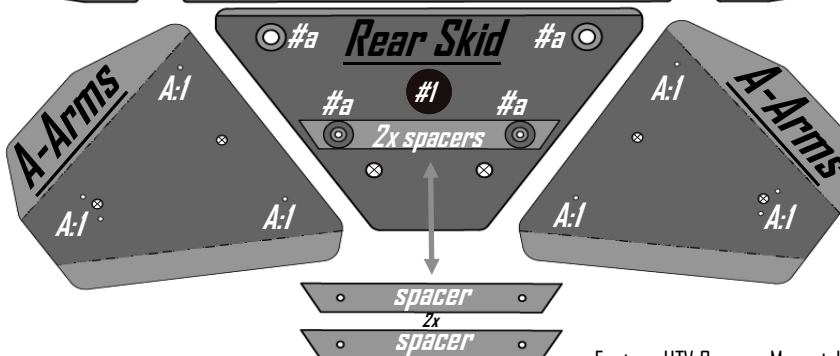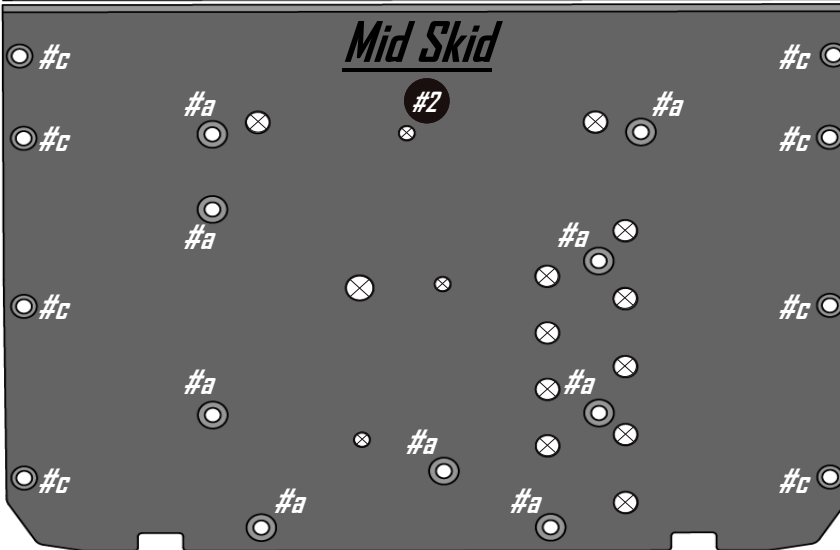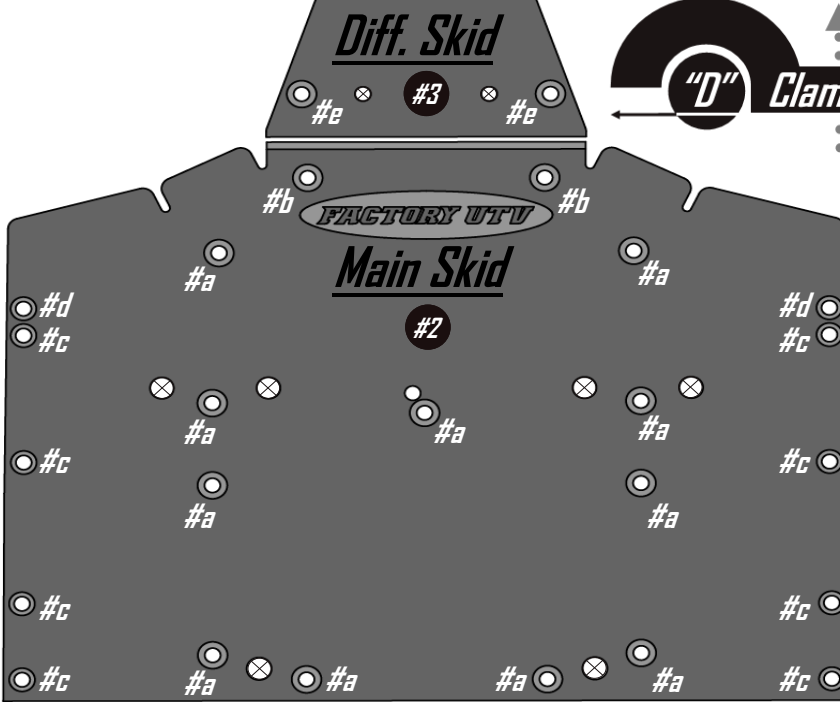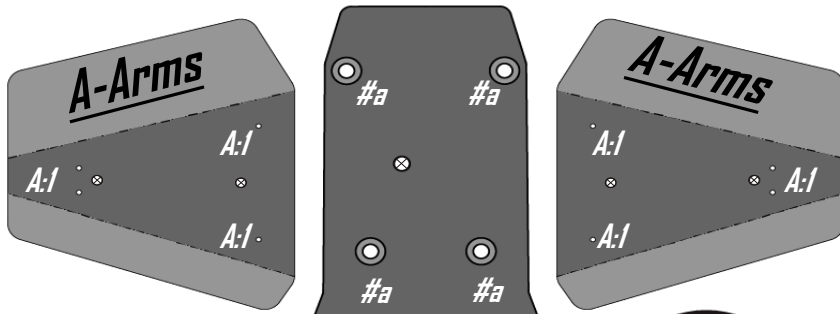

#1

Rear Skid Plate :

Install using : (2x) Stacked Spacers, with (4x) Stock Bolts & Washers (M6-1.0 x 20mm Thread Forming Bolts) in (#a) locations.

#2

Main & Mid Skid Plate :

Install using : (20x) Stock Bolts & Washers (M6-1.0 x 20mm Thread Forming Bolts) in (#a) locations. Install mid skid 1st, main skid 2nd. Note tongue & groove. Using : (2x) "D" Clamps (J-clips installed) with (2x) M6-1.0 x 25mm Flange Bolts in (#b) locations. (Disregard (#c) & (#d) locations in this step)

#3

Front Diff. Skid Plate :

Install using : (4x) Stock Bolts & Washers (M6-1.0 x 20mm Thread Forming Bolts) in (#a) locations. *(See Drilling Instructions On Hardware Pg.2) Drill mounting holes in (#e) locations, Use: (2x) 1/4" x 20 x 3/4" Self Tapping Bolts in (#e) locations.

#4

Side Mounting Holes :

(See Drilling Instructions On Hardware Pg.2) Once skid plates are aligned in place, drill side mounting holes. Install : (16x) 1/4" x 20 x 3/4" Self Tapping Bolts in (#c) locations, (2x) 1/4" x 20 x 1 1/4" Self Tapping Bolts in (#d) locations.

Fasten All Bolts Securely

A:1

A-Arm Guards:

Install : (4x) "D" clamps over a-arm tubing use : (4x) 1/4" x 20 x 1" Counter Sunk Bolts with (4x) 1/4" x 20 Ny-Lock Nuts, and (4x) Gold Washers in (A:1) locations, For each A-Arm Guard. *Ensure Clearance For Turn Radius & Vertical Travel Before Fastening Securely.

