


# Can-Am Maverick X3 (XDS-XRS) (2017 - 2020+)

#1

## UHMW A-Arm guard instructions :

Install:  $\frac{1}{4}$ "-20 x  $1\frac{1}{4}$ " Counter Sunk Bolts, w/  $\frac{1}{4}$ " Gold washers and  $\frac{1}{4}$ "-20 Ny-lock nuts, with appropriate Clamp's over tubing in each location. \*Note notches at rear of box clamp for XRS models only  
Fasten bolts until flush with UHMW guard. Do not over tighten or pull the bolt through the UHMW guard.

**\*Ensure Clearance For Turn Radius & Vertical Travel Before Fastening ALL Bolts Securely**

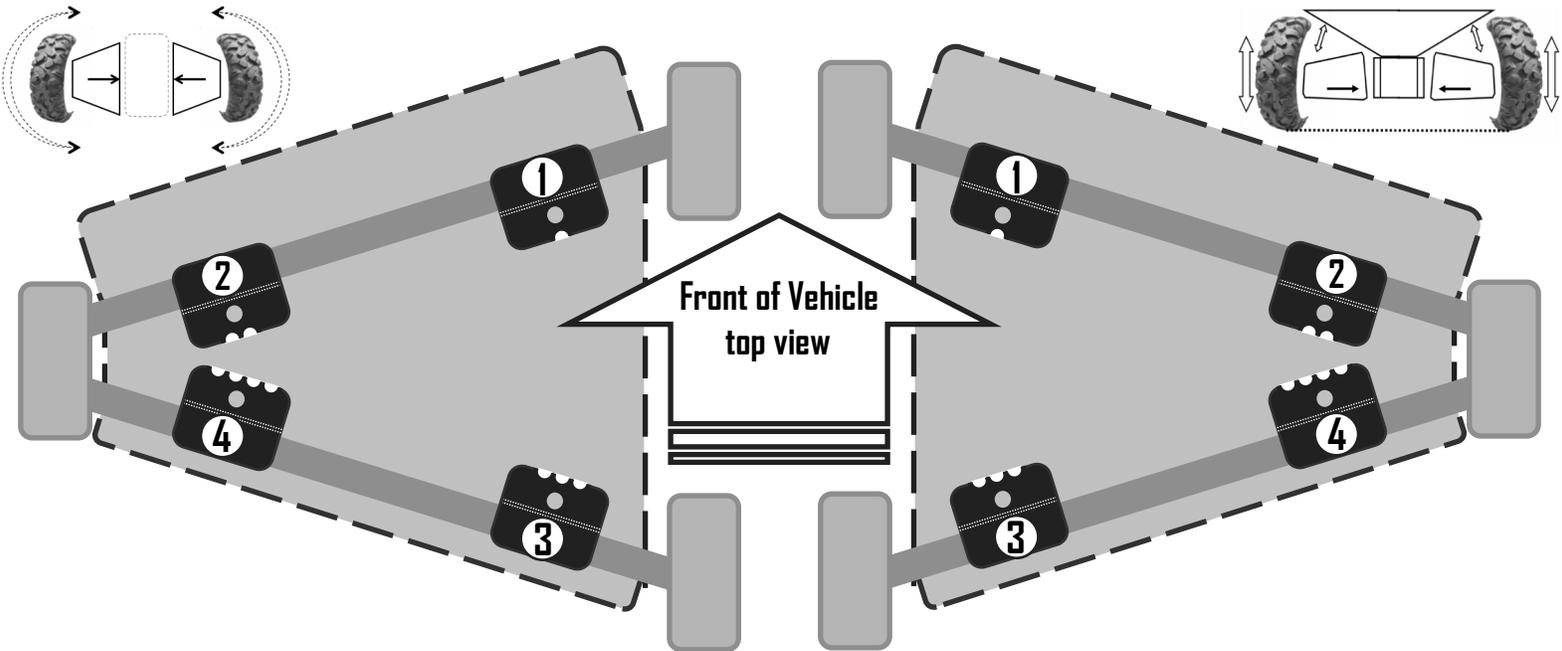


## A-Arm Hardware

Ensure you have the correct clamps for your model. Both models use same Bolts, nuts and washers.


### X3-XDS (64" wide) models

(8x)  $1" \times 1\frac{1}{4}"$  "D" clamps

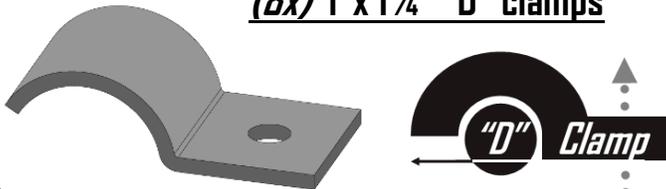

### X3-XRS (72" wide) models

Box-clamps (2x) of each size, (8x) clamps total

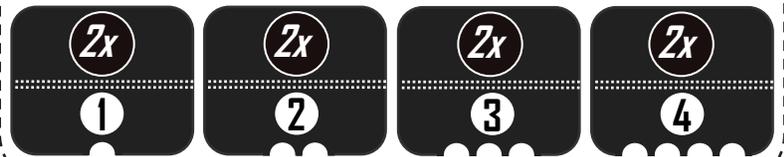

$\frac{1}{4}$ "-20 x  $1\frac{1}{4}$ " Counter Sunk Bolts

8x

$\frac{1}{4}$ " Gold Washers

8x

$\frac{1}{4}$ "-20 Ny-Lock Nut

8x

