Contact Us: FACTORY UTV LLC.

9237 Beatty Drive Sacramento, CA 95826



U.H.M.W. Rock Slider / Under Armor Package

Ultra. High. Molecular. Weight. polyethylene all terrain skid plate / under armor kit for UTV's

Standalone Rock slider Installation Guide

Polaris RZR Pro R (2022+)




Bracket Installation page


- A.) Remove stock skid plate, save stock hardware for later steps.,
- B.) Install Left and Right Rock slider mounting brackets



Un-fasten stock bolts, and save hardware for Re-installation.

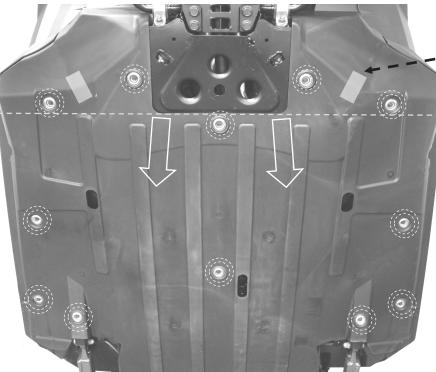



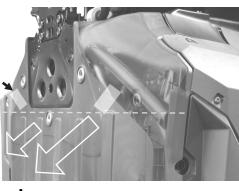

Second:

With Skid plate Removed, Fasten inner bolts from below

• Rock slider Mounting Bracket

Install Rock slider Mounting Bracket,

through side mounting holes in chassis frame. Ensure larger end mounted forward.




Use spacers to align bracket until mount is flush with stock plastic

Using spacers as necessary to ensure even fitment, Install (2x) 3/8'' flange bolts and (2x) zinc washers on the inside of the chassis tubing in (R) location's.

Fasten bolts securely, (Use of thread locker recommended.)

* 0

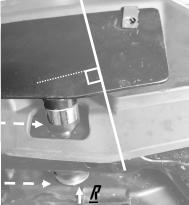

After Brackets are installed, Re-install Skid plate

Rock Slider Bracket Hardware

Rock slider Bracket L & R (#E-B:14 :15



J-Clip (installed on bracket) (#N-13




3/8 x 1" Flange bolt (#B-H:19


Large washers 3/8" (#W-4:2



Polaris RZR Pro R (2022+) Rock slider Installation

Once Rock slider Brackets are installed, (see bracket installation page) hold rock slider in place, loosely install: (4x) M6- 1.0 x 25mm Flange Bolt with (4x) Counter sunk washers in B locations. loosely Install: (2x) M6- 1.0 x 30mm Flange Bolts in C locations and (1x) M6- 1.0 x 35mm Flange Bolts in D locations. Fasten bolts with (8x) Countersunk Washers in all locations. Adjust for best fitment, fasten all bolts securely when done. Repeat steps for remaining Rock slider.

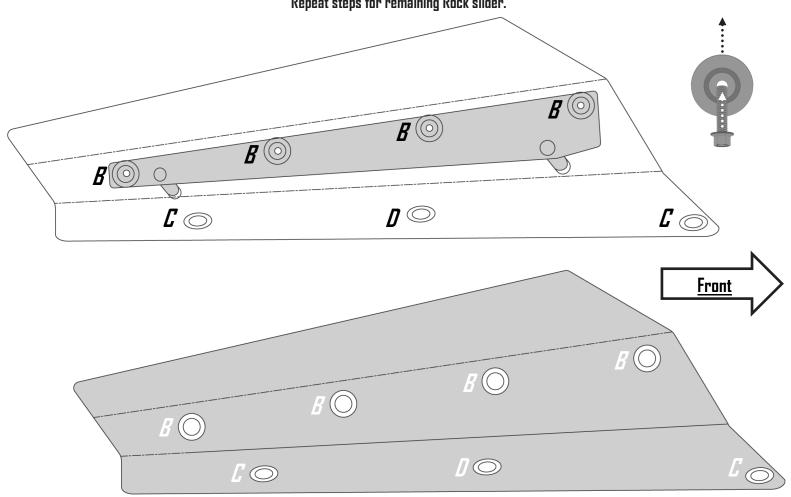

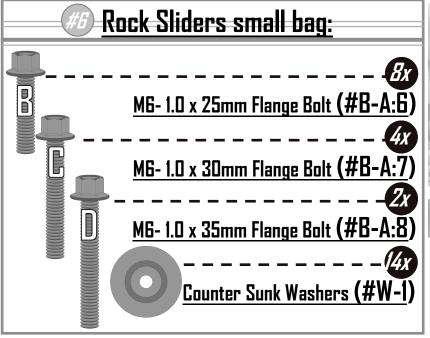



Polaris RZR Pro R (2022+) Standalone Rock slider Hardware pack list

