



RZR 170 Intake Installation

1. Drill hole in rear deck according to instructions on page #3 of these instructions




2. Remove basket from rear crossbar

3. Remove stock airbox assembly



4. Remove carb and reset needle clip to bottom most slot closest to needle point. Install larger main jet

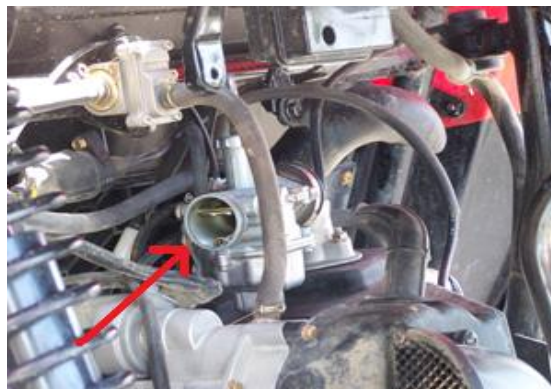


5. Install new intake tube to carb using supplied rubber hose section and hose clamps



6. Attach vent hose to intake tube
7. Install Air filter and outer wear filter



Finished Install

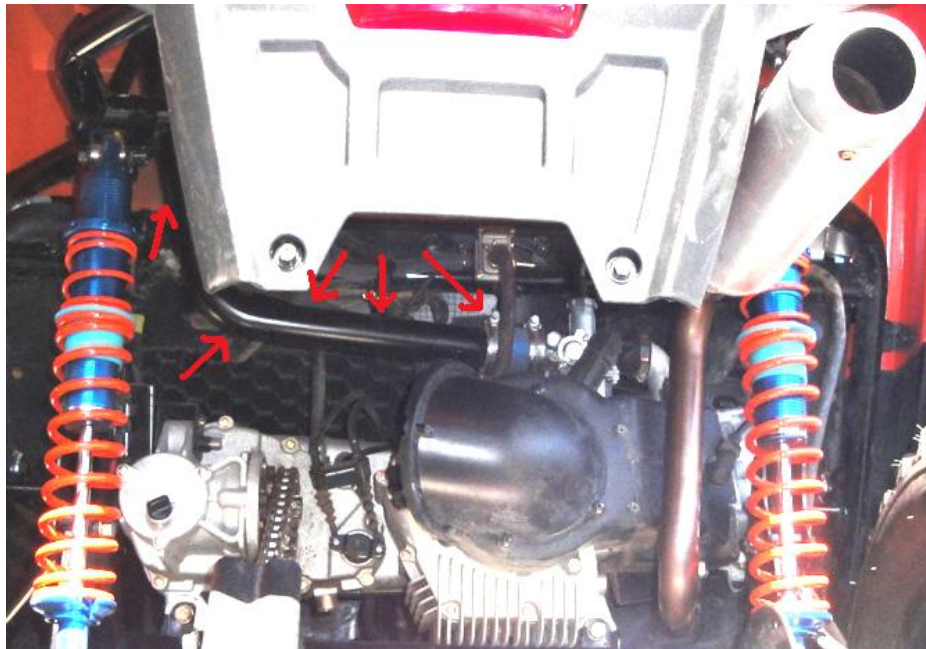

Drill hole in rear deck

