

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730


E-mail : info@factoryutv.net

Go online: [www.Factoryutv.net](http://www.Factoryutv.net)



## ***Polaris RZR RSI (2018+) Trailing-Arm Instruction Guide***

*Ultra. High. Molecular. Weight. polyethylene all terrain Trailing-Arm guard protection*

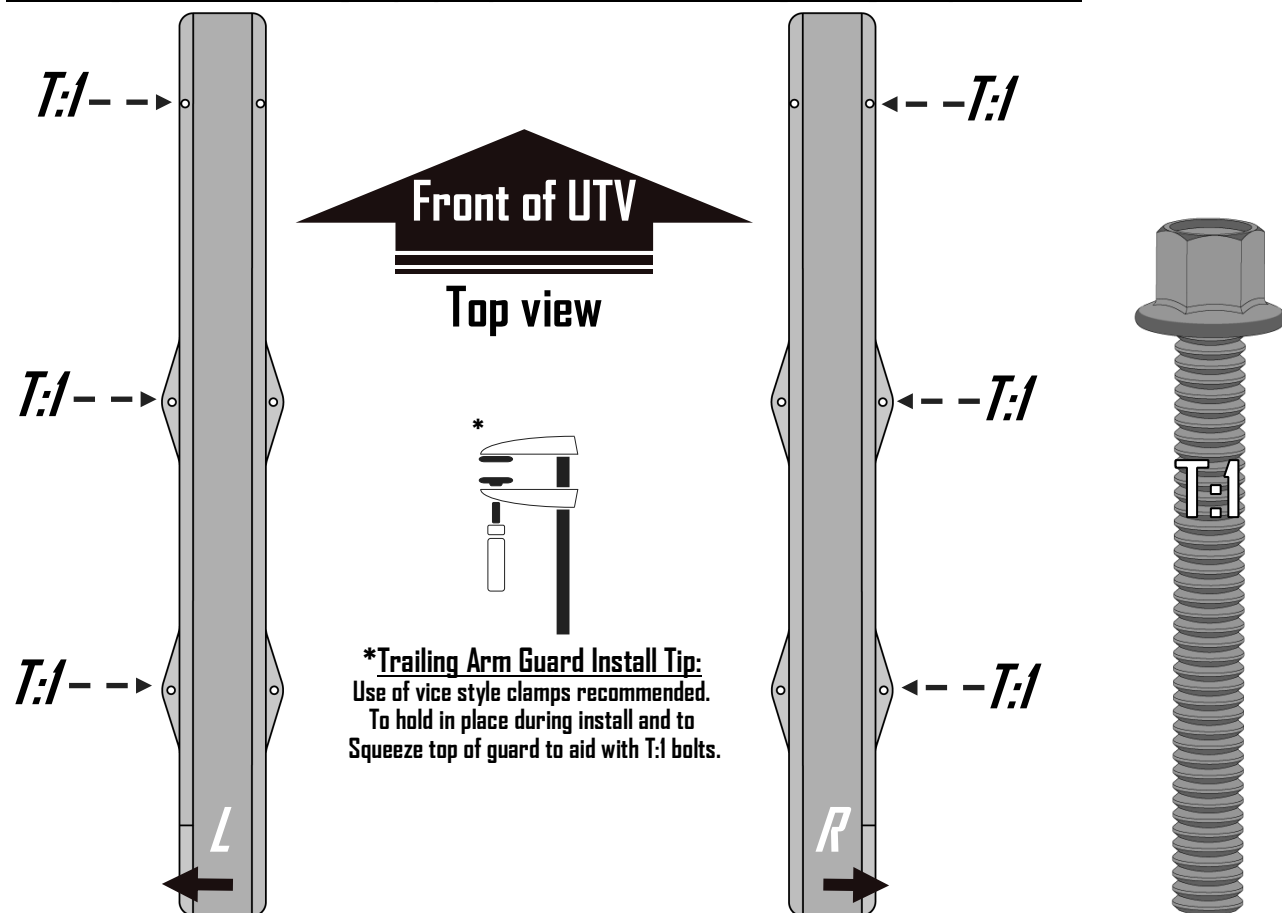

### **Trailing Arm Guard instructions**

Mount in place and align to best fit, before fastening all bolts securely

(You may need the use of a car jack or applied force to install trailing arm guards)

UHMW will form to a snug fit over time.

**Install: (1x)  $\frac{1}{4}$ " x 20 x 3" Hex Bolt with  
(2x)  $\frac{1}{4}$ " Zinc Washers, \*(on each outer side of the bolt)  
and fasten (1x)  $\frac{1}{4}$ " x 20 Ny-Lock Nut  
at Each: (*T:1*) location.**

### **Trailing-Arm Hardware**

$\frac{1}{4}$ "-20 x 3" Hex Head Bolt **6x**

$\frac{1}{4}$ " Silver Washers **12x**

$\frac{1}{4}$ "-20 Ny-Lock Nut **6x**