

Contact Us: FACTORY UTV LLC

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



U.H.M.W. Standalone Rocksliders (for installation without UHMW skid plate)

Ultra. High. Molecular. Weight. polyethylene all terrain rocksliders / under armor for UTV's

Installation Guide (Standalone Rocksliders)

Yamaha

Wolverine RMAX 2 / RMAX 4 (2020 - 2021+)



Yamaha Wolverine RMAX 2 and 4 (2020 - 2021+)

Standalone UHMW Rocksliders

Read :
 Drilling Instructions below before drilling.
 Installation may require the use of Clamps or a Car jack to aid with install.

Drill Bits, (1/4"-20) Tap and/or clamps

13/64th
 3/8th




1.) Drill holes slightly wider in (A) locations, using a 3/8" drill bit. Slide J-clips in to rectangle openings, with threaded tip pointing upwards towards vehicle.

2.) Install Rocksliders, Fasten (A) Bolts Loosely in place. Adjust rocksliders as needed. Fasten bolts securely.

3.) Mark, drill (B) and (C) locations. Install (B) and (C) bolts, fasten securely.



Fasten bolts until flush
 DO NOT over tighten

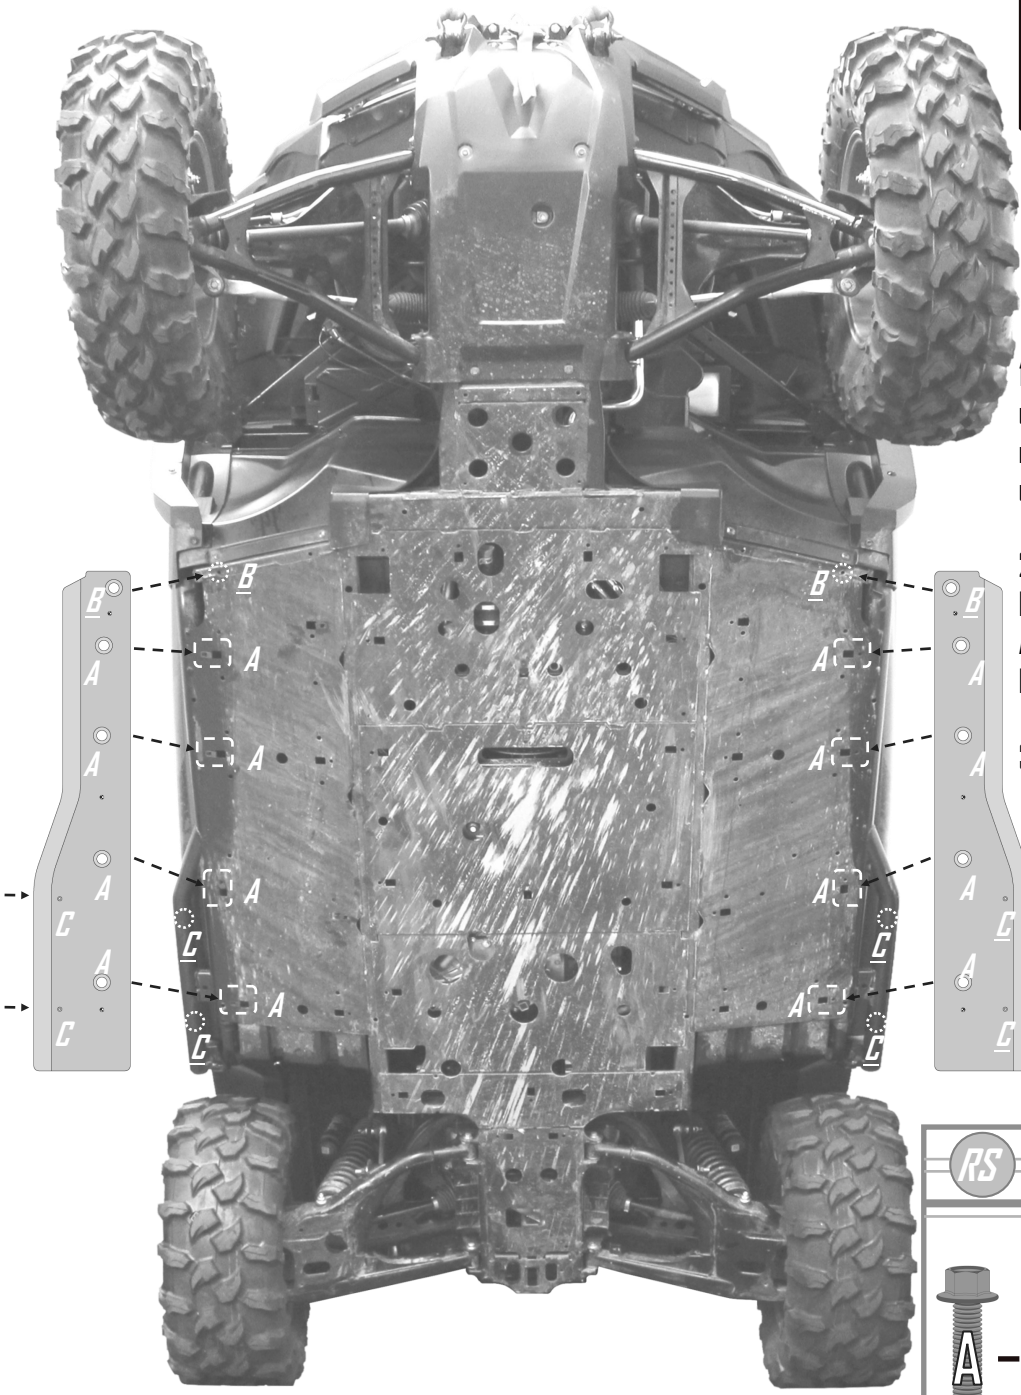

* Drilling Instructions : *

For J-clip "A" locations, use a 3/8" Drill bit to widen pre existing holes If needed.

For "B" and "C" locations use : #No7 (13/64th) drill bit,

(one size above the commonly available 3/16th bit)

Recommended use of a 1/4"-20 Tap *(Optional).

To drill and thread self tapping bolts in to chassis frame.

Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We recommend the use of a "Thread Locking Compound" when installing any mounting hardware.

(When installation is complete , ensure all bolts are fastened securely.)

RS Standalone Rock Sliders :

	8x
	J-clip (#N-14)
	8x
	MG- 1.0 x 20mm Flange Bolt (#B-A:5)
	2x
	1/4"-20 x 3/4" Self Tapping Bolt (#B-D:2)
	4x
	1/4"-20 x 1 1/2" Torx Counter Sunk Self Tapping Bolt
	=T:30 (#B-C:12)
	10x
	Counter Sunk Washers (#W-1)