




Polaris RZR XP4 900 Skid Plate Installation Instructions

- 1. Remove stock skid plate and save all bolts and washers for new skid install.**
- 2. Install supplied UHMW spacers with long metric bolts**

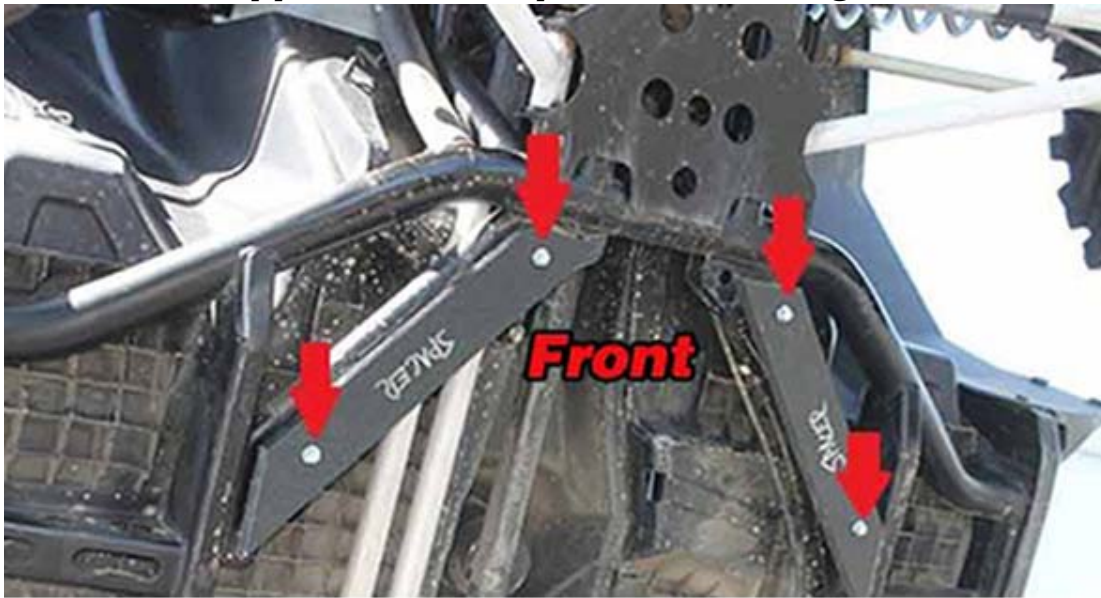

3. install front main skid to allow slight movement, with center bolts using stock hardware



4. While pressing skid against spacer to hold it in place, remove bolts and reinstall with washers.



- 5. Install Center skid plate to allow slight movement.**
***Forward skid plates always overlap rear skid plates.**



- 6. Install rear skid plate**
***Forward skid plates always overlap rear skid plates.**



7. Align Front, Center and Rear skids and snug up bolts.

8. Drill 3/16 holes by front and center skid overlap and install bolts and washers.



9. Drill 3/16 holes and install countersunk bolts in front side of Rear skid plate.



10. Mark Rock Slider holes and drill pilot holes using 3/16 bit. Install new bolts and washers.



11. Tighten all hardware up securely. (Loctite recommended)

12. Align front differential skid, mark and drill 3/16 holes to install new bolts and washers.





Factory UTV
9237 Beatty Drive
Sacramento, Ca 95826

Phone: 916-383-2730
info@factoryutv.net