


## Dual clamp spare tire mount <u>\*Lug Nuts Not Included:</u> Mount uses same thread size as stock.

Remove Allen Head bolts in each side of clamp bottom. Evenly position dual clamp on rear roll cage tubing, fastening both center clamp bolts on each side. Ensure Fitment location, and install remaining bolts. Install post mount at desired angle, fasten securely.

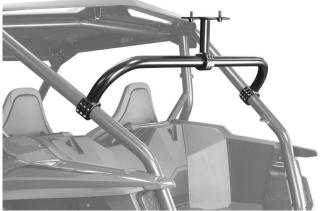

Designed to mount holding Wheel in 3 locations: Fastened securely on Center post mount, With tire resting Snug on pole on both sides to avoid vibration

**Post Options:** 

Default Post: "Stock Wheel Offset" is designed for front wheel only. (Spare front wheel can be used in front or rear position of UTV)

Custom Post "Aftermarket Wheel Offset" **Designed to Provided Custom Post Measurement** Contact us if you've upgraded to Aftermarket wheels and need a new post.

**Dual Clamp Spare Tire Mount** Makes a great platform for fire extinguishers, tools and other mounted accessories.

Factory UTV LLC ©2020 — Honda Talon 1000 ( X - R ) (2019+) Dual Clamp Spare Tire Mount Installation Guide v<sub>5.1</sub> pg. 8

## Honda Talon 1000 X-R (2019+)

Go online to www.FactoryUTV.net and check out our other Talon products:

