

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : [info@factoryutv.net](mailto:info@factoryutv.net)

Go online: [www.Factoryutv.net](http://www.Factoryutv.net)



## U.H.M.W. Skid Plate / Under Armor Package

*Ultra. High. Molecular. Weight. polyethylene all terrain skid plate / under armor kit for UTV's*

### Installation Guide

# *Can-Am Maverick R (2024+)*

### *Countersunk Rock Sliders*

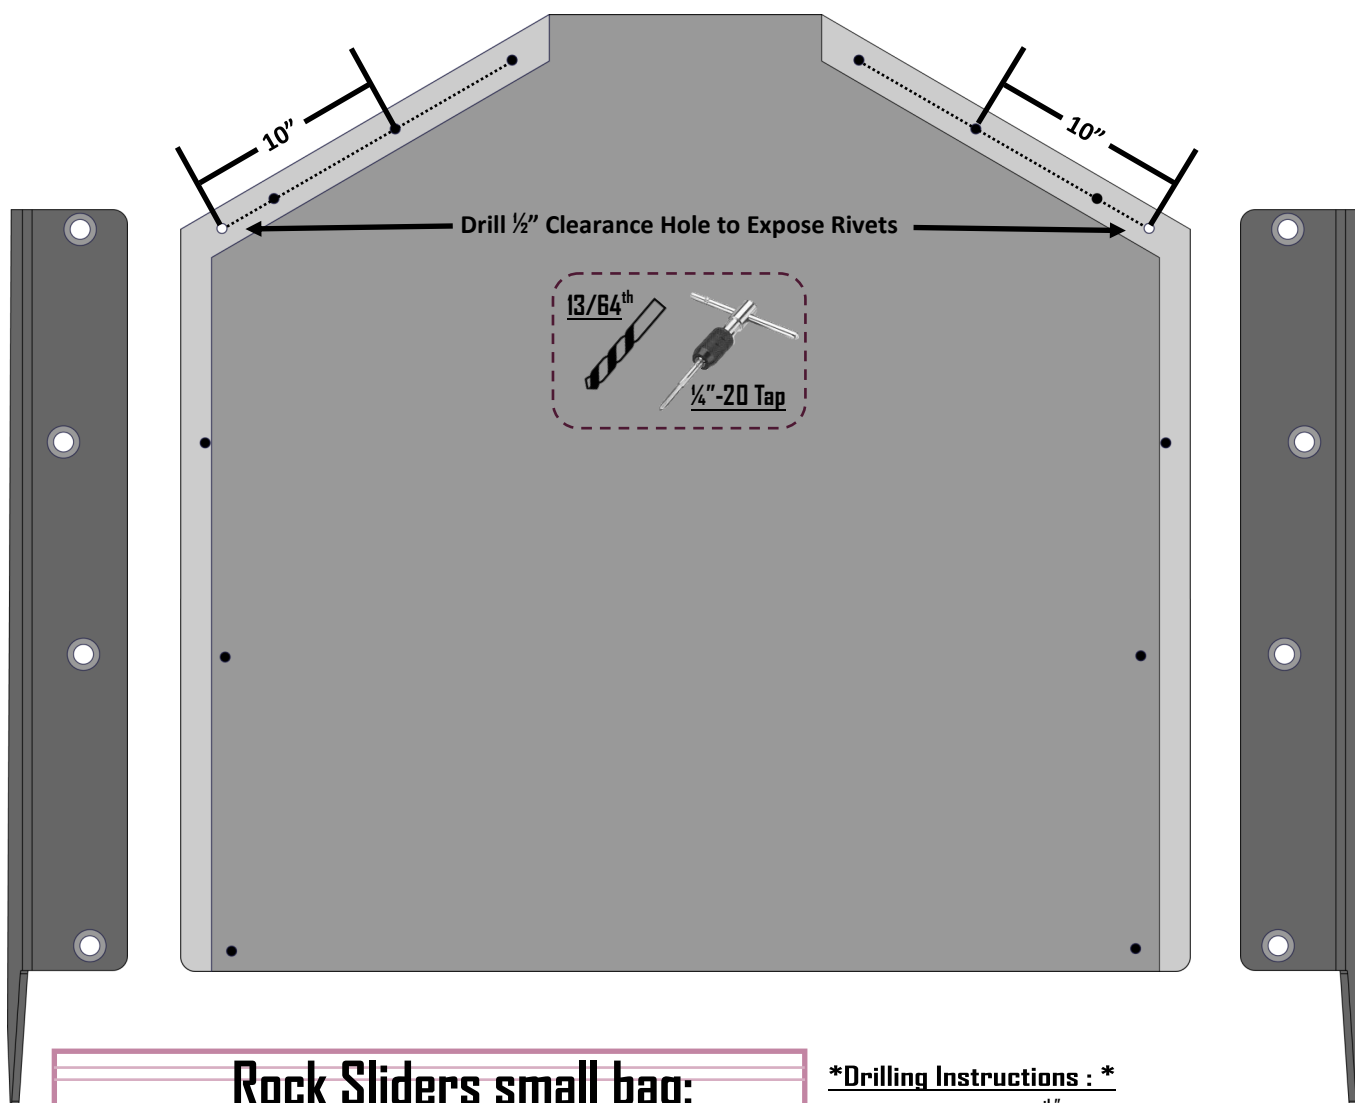


# Can-Am Maverick R (2024+) UHMW Rock Sliders Installation



Measure inline down 10" from forward center mounting rivets and drill a 1/2" clearance hole in the center of each side guard to remove hidden rivets. Drill out all 6 rivets on the outside of the car. Use caution while drilling. You will need to re-use mounting holes with self tapping bolts.

Mount Rock Sliders & Install: ( 6x ) 1/4"-20 x 3/4" Self Tapping Bolts and washers into existing mounting holes.

Mark, Drill & Install: ( 2x ) 1/4"-20 x 3/4" Self Tapping Bolts and washers in the remaining mounting holes.



**Rock Sliders small bag:**

	-----	<b>8x</b>
	<b>1/4"-20 x 1" Self Tapping Bolt (#B-D:3)</b>	
	-----	<b>8x</b>
	<b>Counter Sunk Washers (#W-1)</b>	

**\*Drilling Instructions : \***

Use a : #N<sup>o</sup>7 ( 13/64<sup>th</sup> ) drill bit. To drill and thread self tapping bolts in to chassis frame. Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We strongly recommend the use of a "Thread Locking Compound" when installing any mounting hardware. ( When installation is complete , ensure all bolts are fastened securely.)

