

INSTALLATION INSTRUCTIONS


ITEM 8012

WASTE BASKET

Materials included: 1 – 21 QT waste basket, 1 – waste basket frame, 2 – BLUM B71B3550 hinges, 2 – BLUM B175H6030 plates, 10 – #7 x 5/8" flat head screws for hinges, 6 – #6 x 5/58" pan head screws for frame.

Min. cabinet opening 13 1/2" wide x 19 1/2" high x 11 7/8" deep. As a guide line, the 35 mm hinge pocket boring will overlap the bottom of the cabinet opening by 8mm (5/16"). This distance + the distance of boring from edge of door = door overlap. Door must have this overlay at the bottom for hinges. Check with BLUM specifications for hinge install details. Fasten the hinge plates to the bottom of cabinet opening in locations corresponding with door hinge locations.

Waste basket frame must be fastened to back of door 3 1/4" below opening in cabinet. Place frame on the back of cabinet door so that it will be centered in the cabinet opening from side to side. Determine the best screw locations to use on your door to avoid screws penetrating the face of your door.

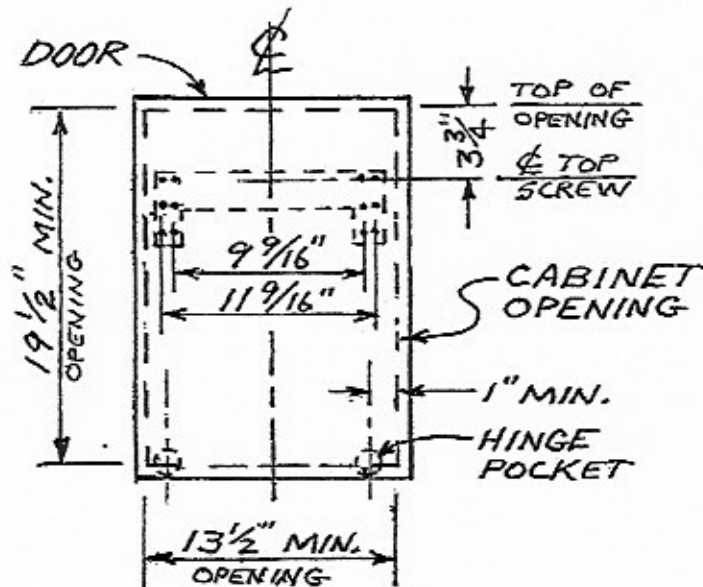

Install only one top screw on each side of frame, then test the motion to be sure that clearances are correct. After confirming clearances, install two more screws on each side.

To install door with the attached frame into the cabinet, first place stops on frame inside of the cabinet, then snap the hinges to their corresponding plates, then insert waste basket into frame. Reverse this order to remove door if you should need to do so.

WARNING: Do not continue to use if frame screws become loose, this condition must be corrected or the door, frame and waste basket could collapse out of cabinet.