
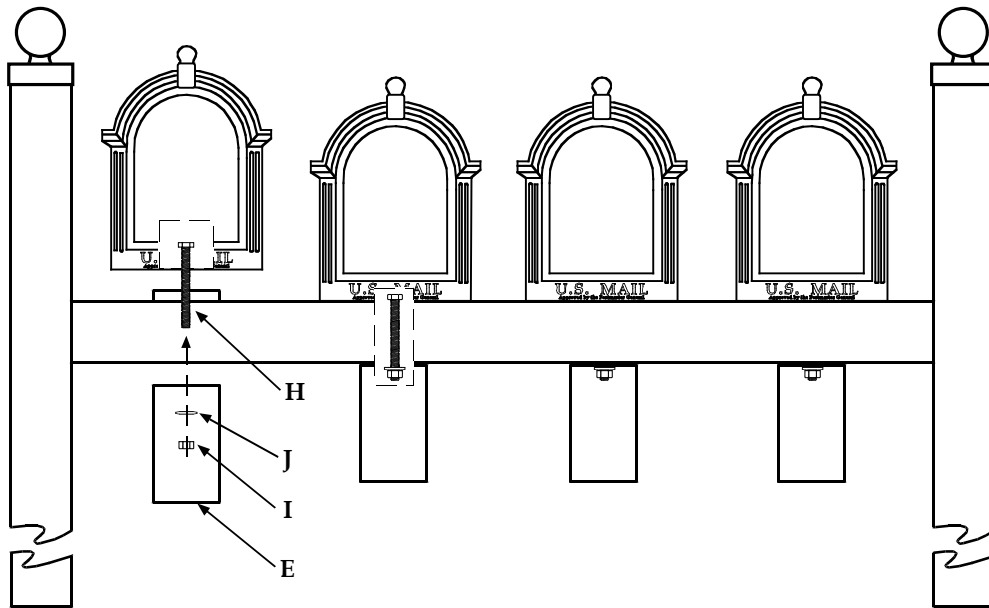


QUAD OR TRIPLE MOUNT MAILBOX POST ASSEMBLY INSTRUCTIONS

Attaching your Whitehall Mailboxes to the Quad Mount Post Assembly:

- 1) Attach your personalized door plaque to the mailbox using the instruction sheet provided. (AW341)
- 2) Set the mailbox on the crossbar aligning the locators on the bottom of the box to the welded locators on the crossbar.
- 3) Place the 3/8"-16 x 5.5" bolt (J) inside the mailbox, through the hole in the base of the box, through the crossbar and into the newspaper tube (E). Reach inside the tube with a small socket wrench and attach the washer (L) and nut (K) to the end of the bolt (J).
- 4) Make sure all units are square to the post assembly and tighten bolts.

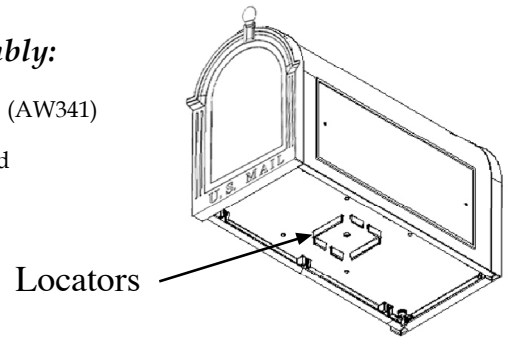

FINISHED ASSEMBLY

